




SESAM USER MANUAL

Wadam

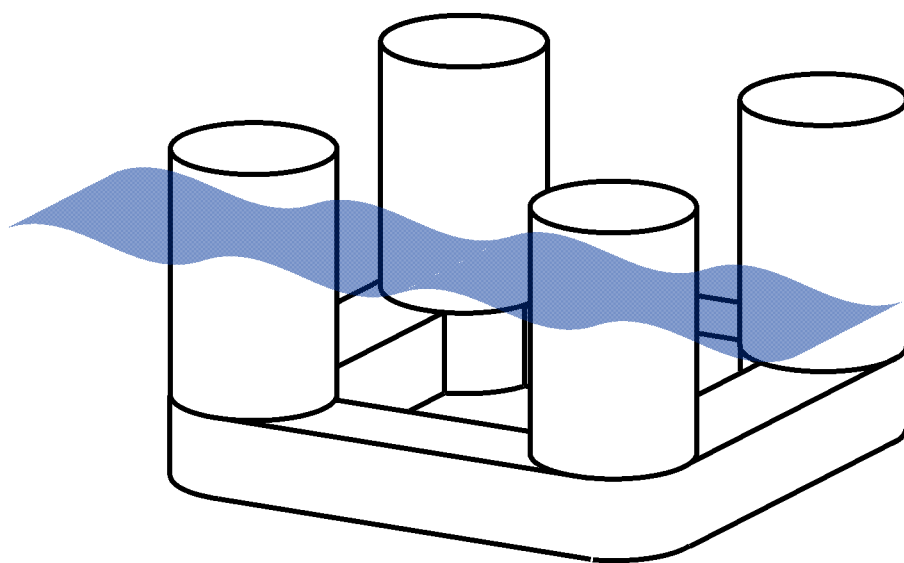

Wave Analysis by Diffraction
and Morison Theory

DET NORSKE VERITAS

SESAM USER MANUAL

DET NORSKE VERITAS

SESAM User Manual Wadam

Wave Analysis by Diffraction
and Morison Theory

January 2, 2010

Valid from program version 8.1

Developed and Marketed by
DET NORSKE VERITAS

DNV Software Report No.: 94-7100 / Revision8, January 22, 2010

Copyright © 2010 Det Norske Veritas

All rights reserved. No part of this book may be reproduced, in any form or by any means, without permission in writing from the publisher.

Published by:

Det Norske Veritas
Veritasveien 1
N-1322 Høvik
Norway

Telephone:	+47 67 57 99 00
Facsimile:	+47 67 57 72 72
E-mail, sales:	software.sesam@dnv.com
E-mail, support:	software.support@dnv.com
Website:	www.dnv.com

If any person suffers loss or damage which is proved to have been caused by any negligent act or omission of Det Norske Veritas, then Det Norske Veritas shall pay compensation to such person for his proved direct loss or damage. However, the compensation shall not exceed an amount equal to ten times the fee charged for the service in question, provided that the maximum compensation shall never exceed USD 2 millions. In this provision "Det Norske Veritas" shall mean the Foundation Det Norske Veritas as well as all its subsidiaries, directors, officers, employees, agents and any other acting on behalf of Det Norske Veritas.

1	INTRODUCTION	1-1
1.1	Wadam — Wave Analysis by Diffraction and Morison Theory	1-1
1.2	Wadam in the SESAM System	1-2
1.3	How to read this Manual	1-4
1.4	Terminology and Notation	1-4
1.5	Status List	1-5
1.6	Wadam Extensions	1-5
2	FEATURES OF WADAM	2-1
2.1	Definition of Model Types in Wadam	2-1
2.1.1	The Coordinate Systems	2-3
2.1.2	The Panel Model	2-5
2.1.3	The Morison Model	2-7
2.1.4	The Dual Model	2-16
2.1.5	The Composite Model	2-18
2.1.6	Single Super element Composite model	2-19
2.1.7	Multi-Body Modelling	2-19
2.1.8	Mass Modelling	2-20
2.1.9	Structural Modelling	2-21
2.1.10	Free Surface Modelling	2-23
2.1.11	Load Case Numbering and Load Case Combinations	2-24
2.2	Global Response Analysis	2-27
2.2.1	General	2-27
2.2.2	Computation of Wave Loads	2-27
2.2.3	The Global Response Results	2-28
2.3	The Calculation of Detailed Loads on a Structural Model	2-28
2.3.1	General	2-28
2.3.2	The Structural Load Types	2-29
2.3.3	Deterministic Loads	2-29
2.3.4	Detailed Loads Transfer to a Model with Shell or Solid Elements	2-29
2.3.5	Detailed Loads Transfer to a Model with Beam Elements	2-30
2.4	Environmental Description	2-30
2.4.1	Surface Waves	2-30
2.4.2	Current Profiles	2-32
2.4.3	Water Depth	2-33
2.5	Results Types Reported from Wadam	2-33
2.5.1	Units	2-33
2.5.2	Result Reference Point	2-34
2.5.3	Dimensioning of Results	2-34
2.5.4	Transfer Functions and Phase Definitions	2-35

2.5.5	Hydrostatic Restoring Results	2-36
2.5.6	Global Mass Matrix	2-37
2.5.7	Added Mass Matrix	2-38
2.5.8	Damping Matrix	2-38
2.5.9	Exciting Forces and Moments	2-38
2.5.10	Rigid Body Motion	2-39
2.5.11	Second Order Mean Drift Forces	2-39
2.5.12	Second Order Sum and Difference Frequency Results	2-39
2.5.13	Fluid Kinematics	2-39
2.5.14	Wave Drift Damping	2-40
2.5.15	Distributed Hydrostatic Loads	2-40
2.5.16	Distributed Hydrodynamic Loads	2-41
2.5.17	Load Sum Reports	2-42
2.5.18	Sectional Loads	2-43
2.5.19	Roll Damping Coefficients	2-44
2.5.20	Global drag-coefficient for roll-damping	2-45
2.6	Calculation Methods	2-46
2.6.1	Calculation of Wave Loads from Potential Theory	2-46
2.6.2	Calculation of Wave Loads from Second Order Potential Theory	2-47
2.6.3	Removal of Irregular Frequencies	2-47
2.6.4	Morison's Equation	2-47
2.6.5	The Equation of Motion	2-49
2.6.6	Calculation of Tank Pressures	2-50
2.6.7	Pressure Loads up to Free Surface	2-50
2.6.8	Reduced pressure up to the free surface	2-51
2.7	The Save-Restart System	2-52
3	USER'S GUIDE TO WADAM.....	3-1
3.1	Simple Examples	3-2
3.1.1	Motion Response of Floating Box	3-2
3.1.2	Motion Response of Floating Box Tethered to the Sea-Bed	3-6
3.2	Engineering Application Examples	3-10
3.2.1	TLP Global Response Analysis	3-12
3.2.2	TLP Load Transfer to a Shell Structural Model	3-16
3.2.3	TLP Load Transfer to Beam Element Model	3-20
3.2.4	Global Response of a Semi-Submersible using Dual Model	3-24
3.2.5	Global Response for a Ship	3-28
4	EXECUTION OF WADAM.....	4-1
4.1	Program Environment	4-1
4.1.1	Starting Prewad from Manager	4-3
4.1.2	Reading a Command Input File into Prewad and Running Wadam	4-3
4.1.3	The Input Files	4-4

4.1.4	Output Files	4-5
4.1.5	The Save-Restart File	4-5
4.2	Program Requirements	4-6
4.3	Program Limitations	4-6
4.4	Warnings and Error Messages	4-6
5	PREWAD COMMAND DESCRIPTION.....	5-1
	CHANGE.....	5-2
	DEFINE	5-3
	DEFINE CORRESPONDANCE.....	5-4
	DEFINE ELEMENT.....	5-5
	DEFINE ENVIRONMENT	5-7
	DEFINE ENVIRONMENT FREQUENCY-HEADING-PAIRS.....	5-10
	DEFINE ENVIRONMENT LINEARISING-WAVE-HEIGHT	5-11
	DEFINE ENVIRONMENT SURFACE-MODEL	5-12
	DEFINE ENVIRONMENT WAVE-SPECTRUM	5-14
	DEFINE GENERAL.....	5-15
	DEFINE GENERAL ANALYSIS-MODELS	5-16
	DEFINE GENERAL CONSTANTS	5-18
	DEFINE GENERAL EXECUTION-DIRECTIVES	5-19
	DEFINE GENERAL EXECUTION-DIRECTIVES ANALYSIS-TYPE	5-20
	DEFINE GENERAL EXECUTION-DIRECTIVES DETERMINISTIC-MORISON.....	5-21
	DEFINE GENERAL EXECUTION-DIRECTIVES DRAG-LINEARISATION.....	5-22
	DEFINE GENERAL EXECUTION-DIRECTIVES DRIFT-FORCES	5-23
	DEFINE GENERAL EXECUTION-DIRECTIVES FIXED-FLOATING	5-24
	DEFINE GENERAL EXECUTION-DIRECTIVES HORIZONTAL-DRIFT.....	5-25
	DEFINE GENERAL EXECUTION-DIRECTIVES MORISON-EQUATION.....	5-26
	DEFINE GENERAL EXECUTION-DIRECTIVES OUTPUT-FORMAT	5-27
	DEFINE GENERAL EXECUTION-DIRECTIVES POTENTIAL-THEORY	5-28
	DEFINE GENERAL EXECUTION-DIRECTIVES PRINT-SWITCH.....	5-30
	DEFINE GENERAL EXECUTION-DIRECTIVES RESULT-FILES.....	5-31
	DEFINE GENERAL EXECUTION-DIRECTIVES SAVE-RESTART	5-35
	DEFINE GENERAL EXECUTION-DIRECTIVES SECOND-ORDER-RESULTS	5-36
	DEFINE GENERAL EXECUTION-DIRECTIVES TOLERANCES	5-38
	DEFINE GENERAL EXECUTION-DIRECTIVES WAVE-DRIFT-DAMPING	5-39
	DEFINE GENERAL GLOBAL-MATRICES.....	5-40
	DEFINE GENERAL MULTI-BODY	5-43
	DEFINE GENERAL MULTI-BODY MODELS.....	5-44
	DEFINE GENERAL MULTI-BODY STRUCTURE-IDENTIFICATION.....	5-46
	DEFINE GENERAL OFFBODY-POINTS.....	5-47
	DEFINE GENERAL PANEL-PRESSURE.....	5-48
	DEFINE GENERAL ROLL-DAMPING-MODEL.....	5-49
	DEFINE GENERAL SECTIONAL-LOADS.....	5-53
	DEFINE GENERAL TANK-PRESSURE	5-54

DEFINE GENERAL TEXT	5-55
DEFINE HYDRODYNAMIC-PROPERTY	5-56
DEFINE HYDRODYNAMIC-PROPERTY CONNECT	5-57
DEFINE HYDRODYNAMIC-PROPERTY SECTION	5-58
DEFINE HYDRODYNAMIC-PROPERTY SECTION ref 2D-MORISON-ELEMENT	5-59
DEFINE HYDRODYNAMIC-PROPERTY SECTION ref 3D-MORISON-ELEMENT	5-60
DEFINE HYDRODYNAMIC-PROPERTY SECTION ref ANCHOR-ELEMENT	5-61
DEFINE HYDRODYNAMIC-PROPERTY SECTION ref DRY-ELEMENT	5-62
DEFINE HYDRODYNAMIC-PROPERTY SECTION ref POINT-MASS	5-63
DEFINE HYDRODYNAMIC-PROPERTY SECTION ref PRESSURE-AREA-ELEMENT	5-64
DEFINE HYDRODYNAMIC-PROPERTY SECTION ref TLP-MOORING-ELEMENT	5-65
DELETE	5-66
EXIT	5-67
HELP	5-68
PRINT	5-69
PRINT CORRESPONDANCE	5-70
PRINT ELEMENT	5-71
PRINT ENVIRONMENT	5-72
PRINT GENERAL	5-73
PRINT HYDRODYNAMIC-PROPERTY	5-75
READ	5-77
SET	5-78
WRITE	5-80
#	5-81

APPENDIX A TUTORIAL EXAMPLES..... A-1

A 1	Motion Response of a Floating Box	A-1
A 2	Motion Response of a Floating box Tethered to the Sea Bottom	A-3
A 2.1	Preframe Input for the Morison Model (Tethers)	A-3
A 2.2	Input for the Structural Model	A-3
A 2.3	Presel Input for Assembling the Structural Model	A-5
A 3	The Wadam Print File List of Contents	A-6

REFERENCES..... REFERENCES-1

APPENDIX B THEORY..... B-1

B 1	Hydrostatic Forces	B-1
B 1.1	Hydrostatic Coefficients	B-1
B 2	Morison Element Formulations	B-2
B 2.1	The Anchor Element Formulation	B-2
B 2.2	The TLP Mooring Element Formulation	B-4
B 3	Calculation Methods	B-8
B 3.1	Linearisation of Roll Restoring	B-8

B 3.2	Calculation of Line Loads	B-9
B 3.3	The Mapping of Loads from Panel Models to Finite Element Models.....	B-9
B 3.4	Calculation of Tank Pressures	B-11
B 3.5	Global drag-coefficient for roll	B-12

1 INTRODUCTION

1.1 Wadam — Wave Analysis by Diffraction and Morison Theory

Wadam is a general analysis program for calculation of wave-structure interaction for fixed and floating structures of arbitrary shape, e.g. semi-submersible platforms, tension-leg platforms, gravity-base structures and ship hulls.

The analysis capabilities in Wadam comprise:

- Calculation of hydrostatic data and inertia properties
- Calculation of global responses including:
 - First and second order wave exciting forces and moments
 - Hydrodynamic added mass and damping
 - First and second order rigid body motions
 - Sectional forces and moments
 - Steady drift forces and moments
 - Wave drift damping coefficients
 - Internal tank pressures
- Calculation of selected global responses of a multi-body system
- Automatic load transfer to a finite element model for subsequent structural analysis including:
 - Inertia loads
 - Line loads for structural beam element analysis
 - Pressure loads for structural shell/solid element analysis
 - Pressure loads up to the free surface

Wadam calculates loads using:

- Morison's equation for slender structures
- First and second order 3D potential theory for large volume structures
- Morison's equation and potential theory when the structure comprises of both slender and large volume parts. The forces at the slender part may optionally be calculated using the diffracted wave kinematics calculated from the presence of the large volume part of the structure.

The Wadam results may be presented directly as complex transfer functions or converted to time domain results for a specified sequence of phase angles of the incident wave. For fixed structures Morison's equation may also be used with a time domain output option to calculate drag forces due to time independent current.

The same analysis model may be applied to both the calculation of global responses in Wadam and the subsequent structural analysis. For shell and solid element models Wadam also provides automatic mapping of pressure loads from a panel model to a differently meshed structural finite element model.

The 3D potential theory in Wadam is based directly on the Wamit program developed by Massachusetts Institute of Technology Ref. /1/ and Ref. /2/.

1.2 Wadam in the SESAM System

Wadam is an integrated part of the SESAM suite of programs. It is tailored to calculate wave loads on models created by the SESAM preprocessors Patran-Pre, Prefem, Genie and Presel. The models are read by Wadam from the Input Interface File (T-file). The Wadam analysis control data is generated by the Hydrodynamic design tool HydroD or by the Wadam preprocessor Prewad.

The results from the Wadam global response analysis may be stored on a Hydrodynamic Results Interface File (G-file) for statistical postprocessing in Postresp. The loads mapped to structural finite elements may be stored on the Loads Interface File (L-file) for a subsequent structural analysis in Sestra.

Figure 1.1 shows Wadam in the SESAM system. A detailed description of the input and output files is given in Chapter 4.

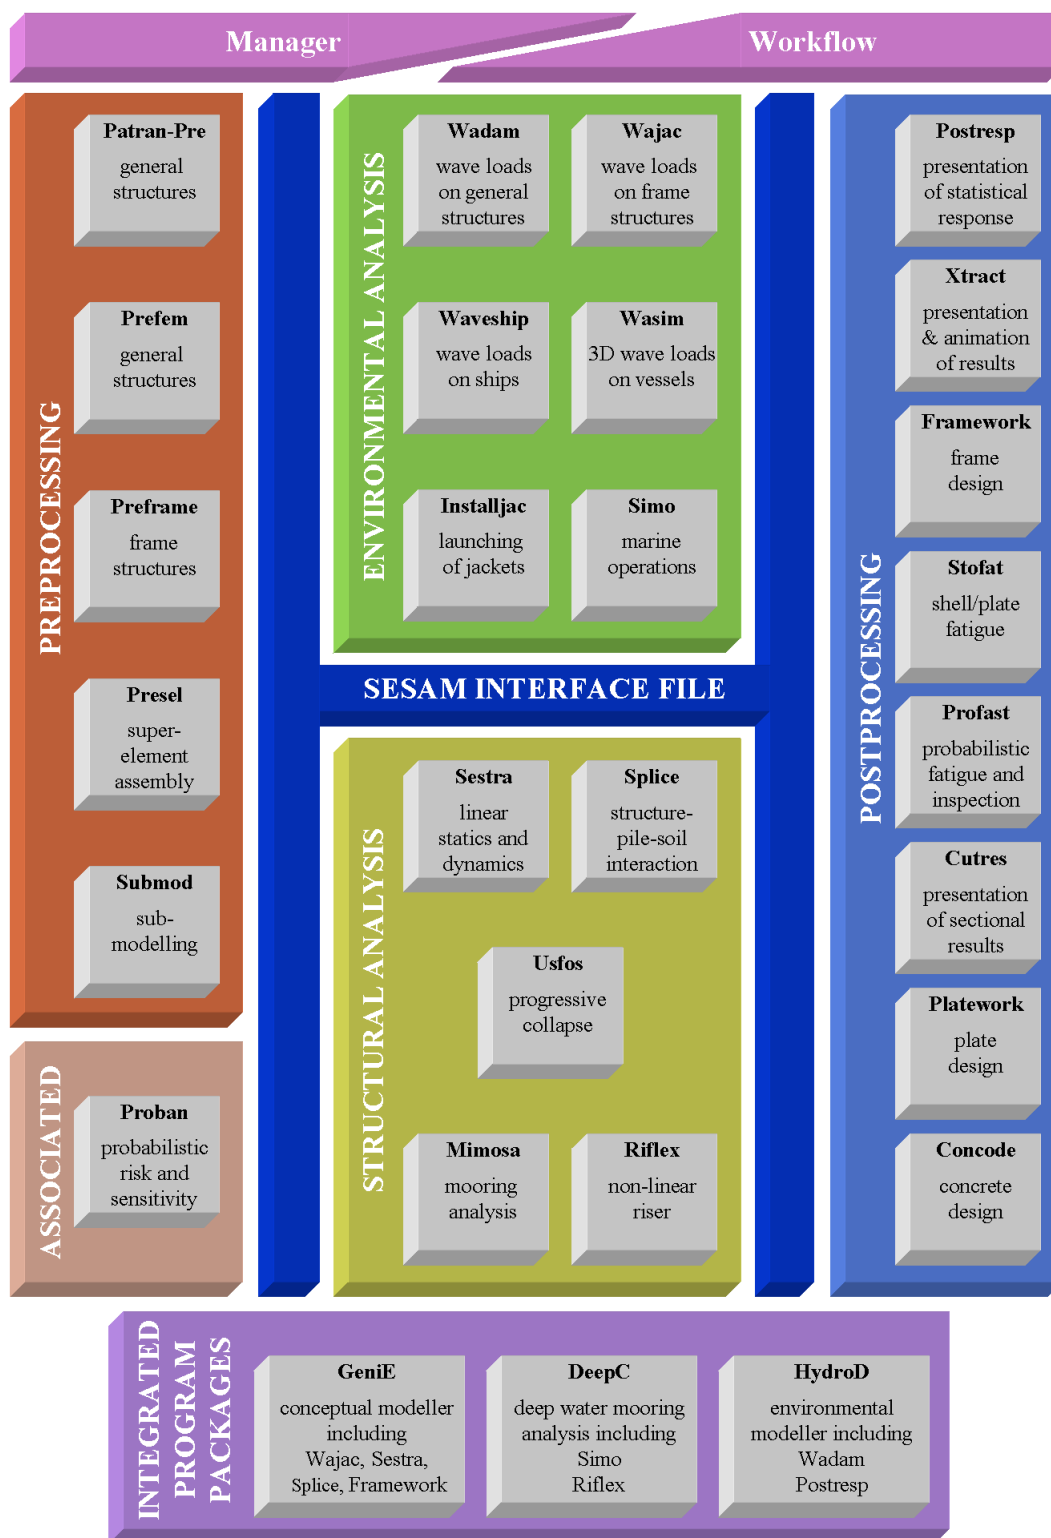


Figure 1.1 SESAM overview

1.3 How to read this Manual

Chapter 2 FEATURES OF WADAM describes the problems Wadam can solve. Descriptions of models, environment and results produced by Wadam are included.

Chapter 3 USER'S GUIDE TO WADAM presents tutorial examples. Each example includes a discussion of the modelling, execution and results interpretation phases. Both simple examples and engineering applications are included.

Chapter 4 EXECUTION OF WADAM describes the input and output files of Wadam. The memory and disk storage requirements are discussed together with some rules of thumb on execution time for different types of analysis. Finally, the chapter lists the problem size limitations in Wadam.

Chapter 5 PREWAD COMMAND DESCRIPTION contains a detailed description of the input commands available in Prewad for establishing the Wadam analysis control data.

Appendix A contains input and output for tutorial examples of Chapter 3.

Appendix B includes additional theory description for Wadam.

1.4 Terminology and Notation

Composite model	A hydro model consisting of a panel model and Morison model representing separate parts of the structure. See Section 2.1.5.
Dual model	A hydro model consisting of a panel model and Morison model representing the <i>same</i> part of the structure. See Section 2.1.4.
FE	Abbreviation for 'finite element' like in FE model
HydroD	The hydrodynamic design tool. This is a modern graphical tool for modelling the input data to Wadam. Wadam is started directly from within this application.
Hydrodynamic Results Interface File	A file containing results from a global response analysis. This file is termed G-file for short. The postprocessor Postresp performs statistical postprocessing of these results. See Section 2.2 and Section 4.1.4.
Hydro model	Hydrodynamic model. A model used for calculating hydrodynamic loads from potential theory and Morison's equation. See Section 2.1.
Hydro property	Hydrodynamic properties including added mass, drag coefficients, element diameters and anchor characteristics required for calculating hydrodynamic loads.
Input Interface File	A file containing geometrical information of the structure (FE model plus hydro model). This file is termed T-file for short. See Section 4.1.3.


Loads Interface File	A file containing loads for a subsequent structural analysis. This file is termed L-file for short. See Section 4.1.4.
Prewad	Wadam's interactive preprocessor
RSQ File	Wadam's save-restart file named WADAM.RSQ; see Section 2.7 and Section 4.1.5.
S-file	A file containing information on the relation between load cases and wave frequencies. See Section 2.3.
swl	Abbreviation for still water level.

1.5 Status List

There exists for Wadam (as for all other SESAM programs) a Status List providing additional information. This may be:

- Reasons for update (new version)
- New features
- Errors found and corrected
- Etc.

The most recently updated status lists can be accessed over the internet. Go to www.dnv.com/software and select the Support tab. Then click on the "SESAM Status lists" entry. A user name and password is required to access this site. These can be obtained from Software Support (Software.Support@dnv.com).

Alternatively you may use the program Status for looking up information in the Status List: In Manager click . Then give File | Read Status List and select Wadam. In the Status List Browser window narrow the number of entries listed:

- Entries relevant to a specific version only
- Entries of a specific type, e.g. Reasons-for-Update
- Entries containing a given text string

Click the appropriate entry and read the information in a Print window.

1.6 Wadam Extensions

Wadam has the following extensions which require separate passwords:

2ORD	Calculation of second order sum- and difference- frequency transfer functions for bodies in monochromatic and bi-chromatic incident waves.
NBOD	Calculation of first-order hydrodynamic analysis of multiple bodies.

STRU	Transfer of hydrodynamic loads to structural finite element models with beam, shell and solid elements.
WDD	Computation of Wave Drift damping coefficients.

2 FEATURES OF WADAM

This chapter describes the features of the Wadam program. The chapter is organised with Section 2.1 describing the modelling concepts adopted in Wadam. Thereafter, Section 2.2 and Section 2.2 describe the two main analysis capabilities:

- Global response analysis for calculating rigid body type of results
- Detailed load calculation for transfers of finite element type of loads to a structural model

The environmental definition including both surface waves and current profiles is introduced in Section 2.4. The description of the results produced by Wadam is included in Section 2.5. Basic calculation methods are described in Section 2.6. Additional information on calculation methods is included in Appendix B.

2.1 Definition of Model Types in Wadam

The definition of models in Wadam includes three main model types: (1) the hydro model which is used to calculate hydrodynamic forces, (2) the structural model where hydrodynamic and hydrostatic loads are represented as finite element loads and (3) the mass model. The mass model is relevant for floating structures only and may be defined either as finite elements with mass properties or as a global mass matrix. The different model types, see Figure 2.1, are described in this section. Wadam reads the various models from Input Interface Files generated by e.g. the SESAM preprocessors Patran-Pre, Prefem, Genie and Presel.

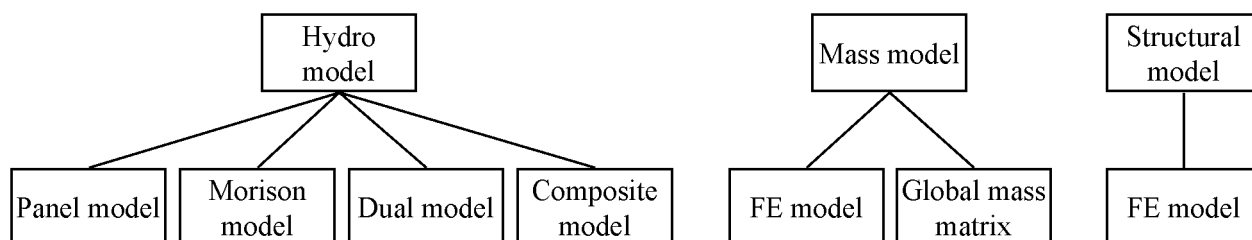


Figure 2.1 Overview of model types in Wadam

The hydro model may, see Figure 2.1, consist of either:

- A *panel model* for calculation of hydrodynamic results from potential theory
- A *Morison model* for calculation of hydrodynamic loads from Morison's equation
- A combination of a panel- and a Morison model — called a *composite model*. The composite model is used when potential theory and Morison's equation are applied to *different parts* of the hydro model.
- A combination of a panel- and a Morison model — called a *dual model*. The dual model is used when both potential theory and Morison's equation shall be applied to the *same part* of the hydro model. The dual model must be used when pressure distribution from potential theory shall be transferred to a beam structural model.

The legal combinations of panel and Morison models are shown in Figure 2.2.

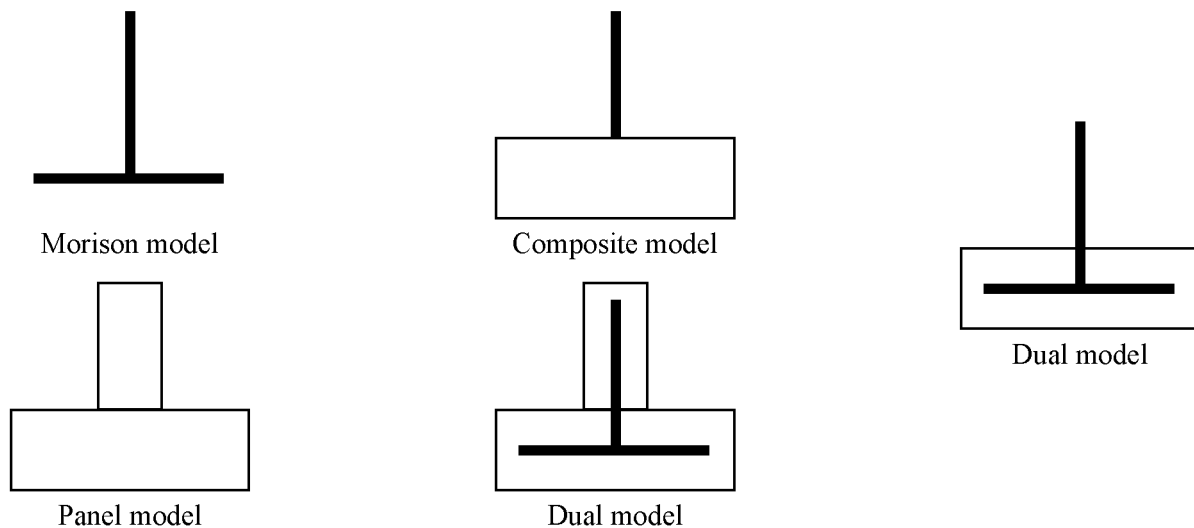


Figure 2.2 Hydro model combinations

The element types interpreted by Wadam are listed in Table 2.1. Other element types present in the various Wadam models will be neglected.

Table 2.1 Overview of SESAM element types interpreted in the various Wadam models

Type of element	Number of nodes	Panel model	Morison model	Mass model	Structural model
Beam elements					
Beam	2		√	√	√
Curved beam	3			√	
Shell elements					

Table 2.1 Overview of SESAM element types interpreted in the various Wadam models

Type of element	Number of nodes	Panel model	Morison model	Mass model	Structural model
Triangular flat thin shell	3	√		√	√
Quadrilateral flat thin shell	4	√		√	√
Subparametric curved triangular thick shell	6	√		√	√
Subparametric curved quadrilateral thick shell	8	√		√	√
Multilayered curved triangular shell	6	√		√	√
Multilayered curved quadrilateral shell	8	√		√	√
Solid elements					
Triangular prism	6	√		√	√
Linear hexahedron	8	√		√	√
Tetrahedron	4	√		√	√
Isoparametric triangular prism	15	√		√	√
Isoparametric hexahedron	20	√		√	√
Isoparametric tetrahedron	10	√		√	√
Mass elements					
One node mass element	1			√	√

2.1.1 The Coordinate Systems

Wadam uses three different coordinate systems for single-body hydro models:

- A global coordinate system
- An input coordinate system
- Local finite element coordinate systems

For multi-body hydro models a more general definition applies to the coordinate systems; see Section 2.1.7.

The global coordinate system, denoted $(X_{glo}, Y_{glo}, Z_{glo})$, is right handed with the origin in the still water level. The Z-axis is normal to the still water level and the positive Z-axis is pointing upwards as shown in the Figure 2.3 and Figure 2.4.

Note: The results refer to the global coordinate system. The origin is termed the result reference point or the motion reference point.

The input coordinate system, denoted $(x_{inp}, y_{inp}, z_{inp})$, is the coordinate system in which the hydro model and the structural model are defined. Wadam imposes the restriction that all input models, i.e. the panel, Morison, mass and FE models must be modelled with the same input coordinate system. The coordinates of the off-body points are given in the global coordinate system. The relation between the global coordinate system and the input coordinate system is defined as follows:

- The origin of the input coordinate system must lie along the positive or negative Z-axis of the global coordinate system. It may also coincide with the origin of the global coordinate system.
- A parameter is used to define the position of the origin of the input coordinate system relative to the origin of the global coordinate system. If the origin of the input coordinate system is below the still water level then this parameter, called ZLOC, shall have a negative value.
- The x- and y-axes of the input coordinate system must be parallel with the x- and y-axes of the global coordinate system and point in the same direction.

If the Hydrodynamic preprocessor HydroD is used, there are no constraints on the position or orientation of the input coordinate system. The input coordinate system is then specified in relation to the global coordinate system by 3 translations and 3 Euler angles.

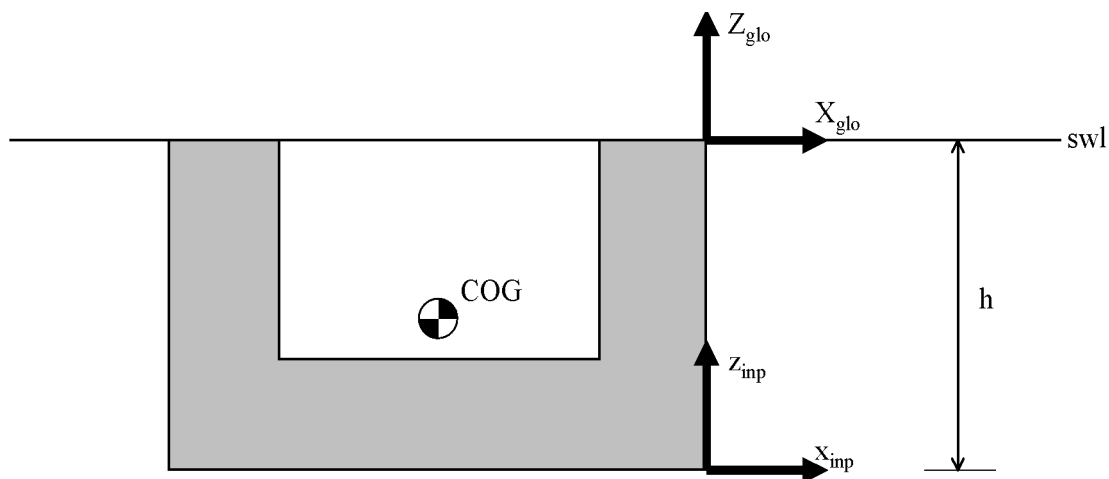


Figure 2.3 2D representation of a TLP hull with input coordinate system below the swl, ZLOC=-h

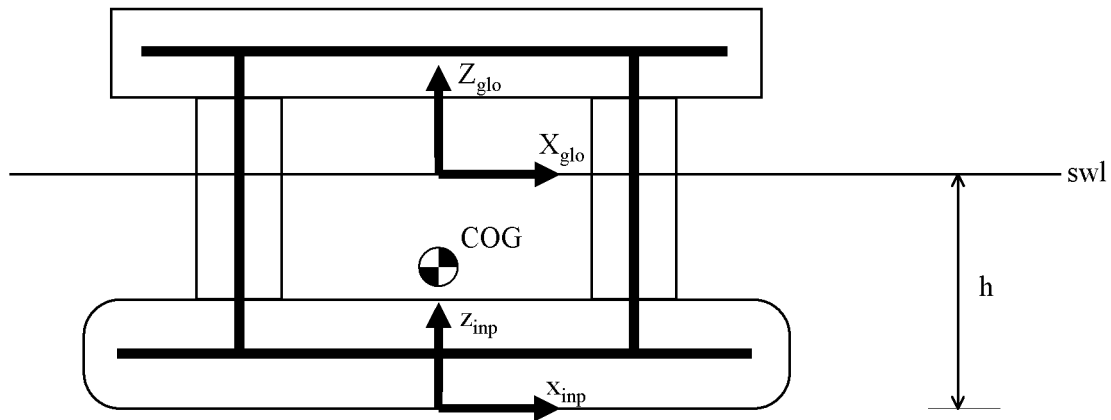


Figure 2.4 2D representation of a semi-submersible with centre of gravity along the global z-axis, ZLOC=-h

Local finite element coordinate systems are also used in the hydro model when this includes a Morison model. These local coordinate systems are discussed in the sections where they are referred to.

2.1.2 The Panel Model

The panel model is used to calculate the hydrodynamic loads and responses from potential theory.

The panel model may be a single superelement or a hierarchy of superelements. It may describe either the entire wet surface or it may take advantage of either one or two planes of symmetry of the wet surface. With symmetry planes employed the computational effort to solve the potential problem is reduced both with respect to CPU and disk space resources. When the panel model includes more than one body, see Section 2.1.7, there is the restriction that no planes of symmetry can be exploited.

The symmetry plane option requires that the basic part, i.e. the actually modelled part, is modelled on the positive side of the symmetry planes as shown in Figure 2.5. Figure 2.7 also shows the basic part of a Tension Leg Platform (TLP) panel model.

Note: No panels are allowed in the symmetry plane(s).

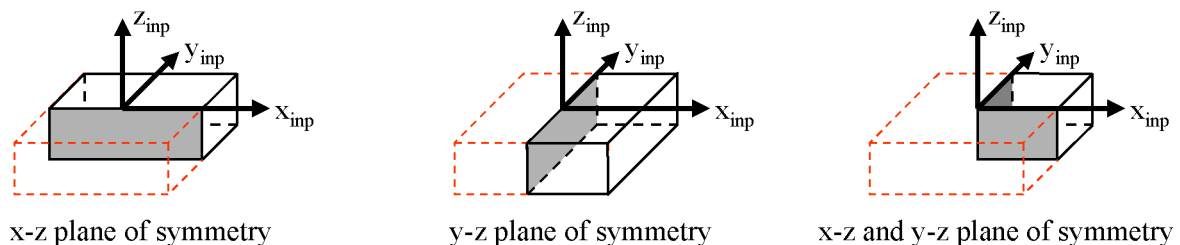


Figure 2.5 Symmetry plane definitions

The basic part of a panel model consists of quadrilateral or triangular panels representing the wet surfaces of a body. The panel model is modelled in the Patran-Pre or Prefem preprocessor using standard finite elements. If more than one superelement is modelled the superelements must be assembled in Presel. The elements accepted in the panel model are defined in Table 2.1.

Note that panels are constructed by drawing straight line segments between the corner nodes of the finite element sides. Therefore twisted panels are forced to be planar by projecting element corner nodes onto panel vertices in the plane defined by the line segment midpoints.

The wet surface of a panel model is identified by defining a dummy load on the panel model in Patran-Pre or Prefem. In Prefem this is achieved by applying a so-called HYDRO-PRESSURE load with load case number one to all wet surfaces of the model. Panels will be generated for all element sides below the still water level and above the sea bed where HYDRO-PRESSURE load is defined. The model may be verified in Prefem by displaying the mesh on the wet surface and adding the HYDRO-PRESSURE load. The load is illustrated by arrows pointing from the fluid onto the wet element sides. In Patran-Pre the corresponding option is the Hydro, Element Uniform load.

Wadam will automatically adjust the wet element sides extending above the still water level into panels with its uppermost edge and vertices in the still water level. Depending on the shape and orientation of the wet element sides this may actually lead to either an adjustment or a division of a wet element side into new panels as shown by examples in Figure 2.6. This automatic algorithm is also used to adjust panels extending below the sea-bed.

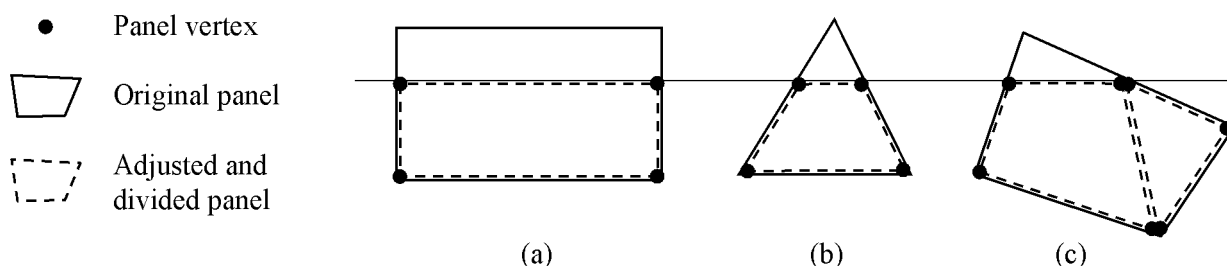


Figure 2.6 Panel adjustments at the still water level

The Wadam data check reports all the panels extracted from the input panel model noting specifically those panels which have been adjusted or divided into two separate panels.

The modelling of a panel model with thick shell elements, which often is the case when the panel model is defined as the wet surface of a structural model, may introduce significant deviations in the representation of volume and area exposed to wave forces. It may be required to establish a separate panel model with nodes on the outer surface of the thick shell structural model.

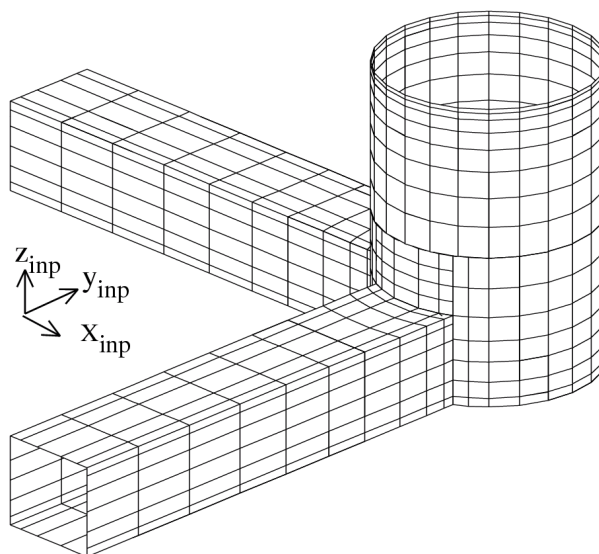


Figure 2.7 The basic part of a TLP panel model

2.1.3 The Morison Model

The Morison model is used to calculate hydrodynamic loads based on Morison's equation. In addition to representing the complete or parts of the structure the Morison model is used to include external forces from mooring lines and tethers in a hydro model. Furthermore, if hydrodynamic loads from potential theory, i.e. pressure loads calculated on panels, shall be transferred to a beam structural model then the Morison model is used as an intermediate step to define correspondence between panels and beam elements; see Section 2.1.4.

The Morison model is put together from a set of Morison elements. The Morison elements are based on 2 node beam elements and single nodes in a first level superelement generated by Patran-Pre, Prefem or Genie. The Morison elements are actually defined by assigning hydrodynamic properties to nodes and beam elements in HydroD or Prewad.

The different types of Morison elements available for calculation of hydrostatic and hydrodynamic effects are:

- 2D Morison elements for calculation of hydrostatic and hydrodynamic loads on wet 2 node beam elements
- 3D Morison elements for calculation of hydrostatic and hydrodynamic loads in three directions in specific nodes
- Pressure area elements for calculation of hydrostatic and hydrodynamic loads at the ends of 2D Morison elements
- Dry Morison elements for transfer of hydrostatic and hydrodynamic loads from potential theory to 2 node beam elements
- Point mass elements for modelling of additional nodal mass in specific nodes

- Mooring and tether elements for calculation of additional restoring contributions in specific nodes

The inertia loads due to the mass of Morison elements may also be calculated. This option is available for all elements except the mooring and tether elements.

Note: The Morison model must be modelled as one single first level superelement. No symmetry plane options are available for the Morison model.

Figure 2.8 shows a beam model and Figure 2.9 the corresponding Morison model representation with 2D Morison elements and pressure area elements. The modelling principles for establishing different types of Morison elements are discussed in the following subsections.

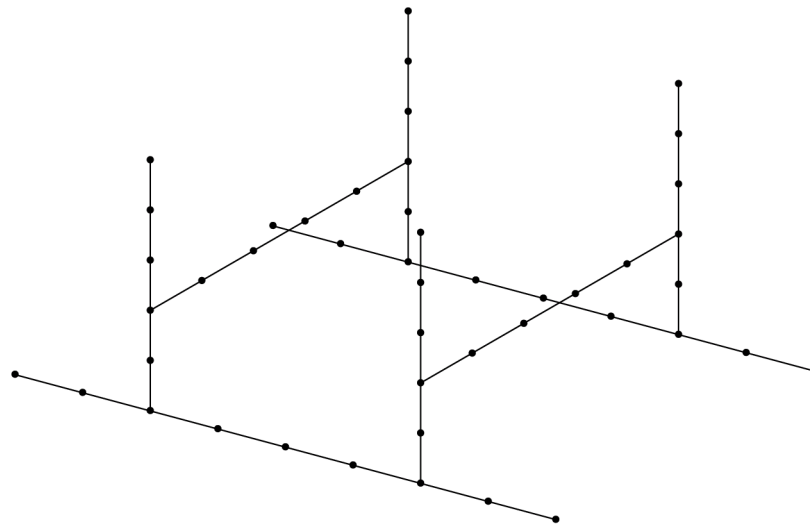


Figure 2.8 2 node beam element model of a semi-submersible platform

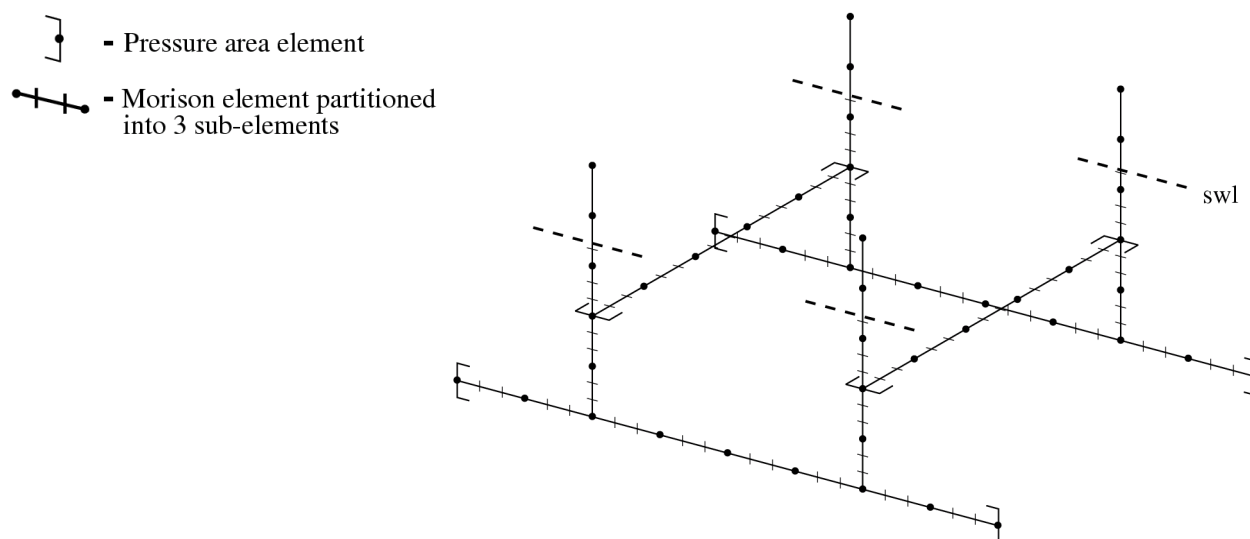


Figure 2.9 Morison model representation of a semi-submersible platform with 2D Morison elements and pressure area elements

2D Morison Elements

A 2D Morison element is most conveniently defined as a 2 node beam element in a preprocessor and assigned a section number to be matched by a hydro property section specified in HydroD or Prewad.

A 2D Morison element is used to include added mass and drag forces according to Morison's equation; see Section 2.6.4. It is also used to include hydrostatic restoring contributions.

The hydro property description for a 2D Morison element include added mass and viscous drag coefficients in the two directions perpendicular to the longitudinal element axis. The hydrodynamic coefficients are specified in a coordinate system local to each 2D Morison element; see Figure 2.12. In addition, the mass per unit length and the diameter of the element is specified. The length and diameter may either be taken from the preprocessor generated beam model or specified by HydroD or Prewad.

The section numbers play an important role in the analysis of a Morison model. The use of section numbers to include different hydrodynamic effects in the Morison model should therefore be carefully planned before section numbers are assigned to 2D beam elements in the preprocessor. E.g. if different drag and inertia coefficients shall be used in different locations this should be reflected by the section definitions.

The hydrodynamic coefficients specified for a 2D Morison element apply to circular cross sections. For elements with non-circular cross-sections the hydrodynamic coefficients in the ξ and ζ directions are directly related to an equivalent cross-sectional diameter. Wadam calculates this equivalent diameter as the circumscribing diameter shown for the examples in Figure 2.10.

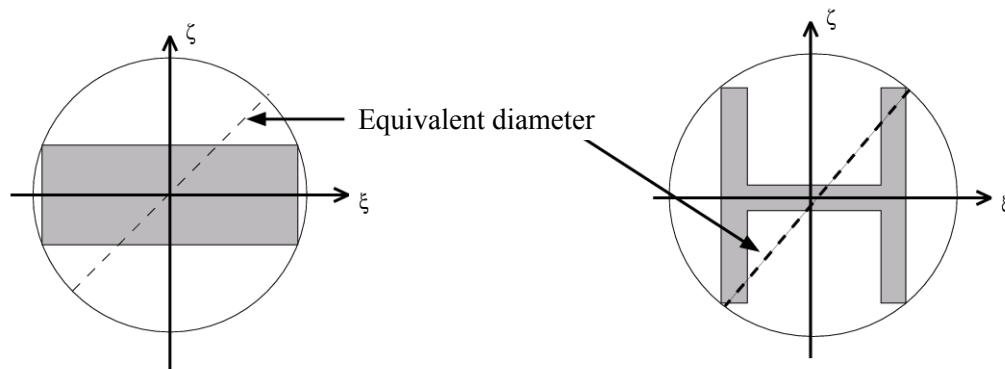


Figure 2.10 Equivalent diameters for non-circular cross sections

The 2D Morison elements may be divided into sub-elements each of which may be assigned different hydro property sections. The sub-elements may have equal or varying lengths.

Figure 2.11 shows three different locations of a Morison element with respect to the still water level. The figure illustrates how Wadam automatically performs the subdivision of elements depending on whether they intersect the still water level or not.

Figure 2.11 (a) shows an element with five sub-elements as specified in HydroD or Prewad. It has one node on each side of the still water level. This element is first divided into five sub-elements. The sub-element intersecting the still water level is further divided into two new sub-elements such that a sub-element border lies in the still water level. The result is actually six sub-elements of which the first five receives hydro loads and optionally inertia forces. The last sub-element will only receive inertia forces.

Figure 2.11 (b) shows elements with one node below and one in the still water level. Note that the sub-element numbering starts at the deepest node irrespective of which is the first and which is the second node when defining the Morison element. This forced ordering of sub-element numbers is performed for all elements with one node below and the other either at or above the still water level. For completely submerged or dry elements the sub-element division is straight forward, i.e. increasing sub-element numbers from the first to the second node; see Figure 2.11 (c).

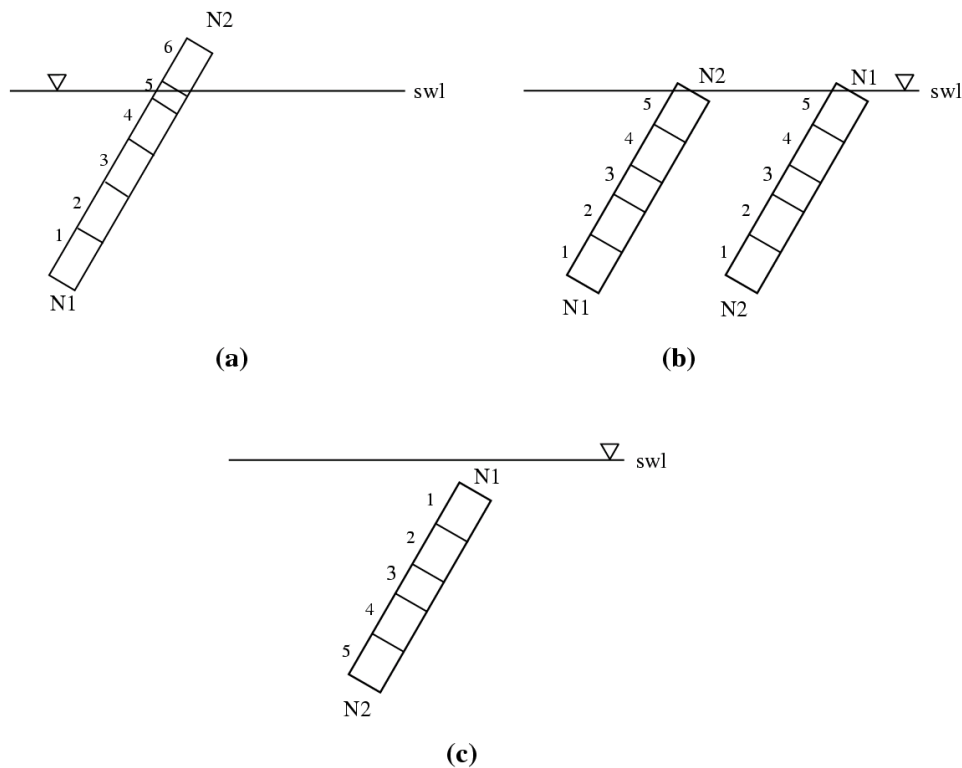


Figure 2.11 The sub-element division of 2D Morison elements

The local coordinate system for a 2D Morison element (ξ , η , ζ) is defined as follows:

- The ξ -axis is normal to the element and parallel with the xy-plane of the input coordinate system.
- The η -axis points along the element from node N_1 to node N_2 where N_1 is the first node defining the 2D Morison element as shown in Figure 2.12 (a).
- The ζ -axis is the third axis in the right handed cartesian coordinate system defined by ξ and η .
- The ξ -axis is parallel with the x_{inp} -axis if the η -axis is parallel with the z_{inp} -axis; see Figure 2.12 (b).

In addition to the 2D Morison elements connected to 2 node beam elements defined by preprocessors 2D Morison elements may also be defined directly by HydroD or Prewad. Such additional Morison elements must however be related to existing nodes in the Morison model defined in a preprocessor. Additional Morison elements may be used to include specific load contributions in a global response analysis.

Note: The loads from additional 2D Morison elements will, however, not be transferred to loads in a subsequent structural analysis thus resulting in load imbalances in the structural analysis.

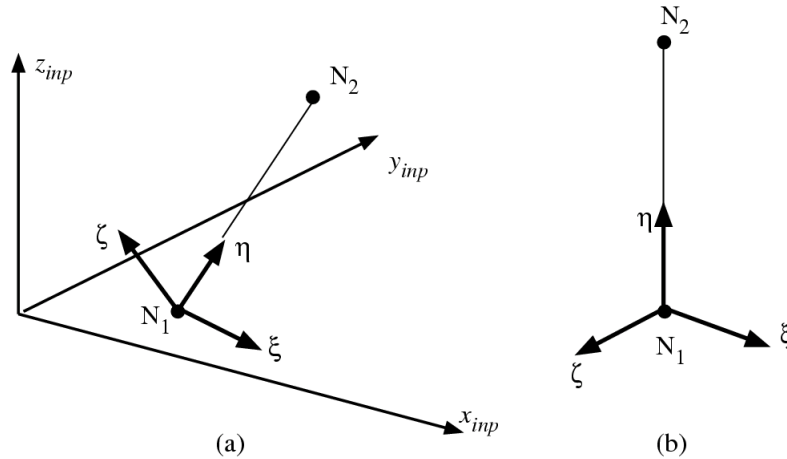


Figure 2.12 Local coordinate system of 2D and 3D Morison elements

3D Morison Elements

A 3D Morison element is defined in HydroD or Prewad and can only be connected to nodes in the Morison model.

A 3D Morison element may be used to include loads which cannot be represented with a 2D Morison element in a hydro model. Drag forces and added mass forces in the longitudinal direction of a 2D Morison element are examples of forces that can be included with a 3D Morison element.

A 3D Morison element may be viewed as a submerged sphere which can receive both hydrostatic and hydrodynamic loads. It will not contribute to the restoring matrix.

The hydro property description for a 3D Morison element includes added mass and viscous drag coefficients in three directions together with a diameter of the submerged sphere.

The local coordinate system for a 3D Morison element (ξ , η , ζ) will by default coincide with the coordinate system of the Morison model (x_{inp} , y_{inp} , z_{inp}). If the local coordinate system shall be different from that of the Morison model a guiding point defining the local η -axis must be specified. Figure 2.12 shows this with node N_1 being the 3D Morison element and node N_2 being the guiding point. The ξ - and ζ -axes are defined as described above for 2D Morison elements.

The forces on a 3D Morison element is acting at the node to which the 3D Morison element is connected.

Pressure Area Elements

A pressure area element is defined in HydroD or Prewad and connected to a node in the Morison model. The node represents the centre of the circular pressure area element. The direction of the element is defined by a guiding point and the area with diameter d as shown in Figure 2.13.

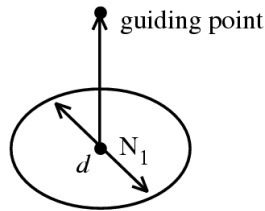


Figure 2.13 The pressure area element definition

The pressure area element includes the hydrostatic and Froude-Krylov pressure force. (The Froude-Krylov force is the force due to the undisturbed incoming wave.) The force is applied in node N1 in the direction of the element normal, i.e. from N1 to the guiding point. The Froude-Krylov pressure force represents a simplified approximation to the correct pressure. Therefore 3D Morison elements must be used to include the end effects of added mass and viscous damping.

The pressure area element has three main application areas. These are:

- Include normal pressure at submerged ends of a cylinder; see Figure 2.14 (a)
- Adjust (subtract) the pressure at intersection between cylinders; see Figure 2.14 (b)
- Include longitudinal forces due to varying cylinder diameters; see Figure 2.14 (c)

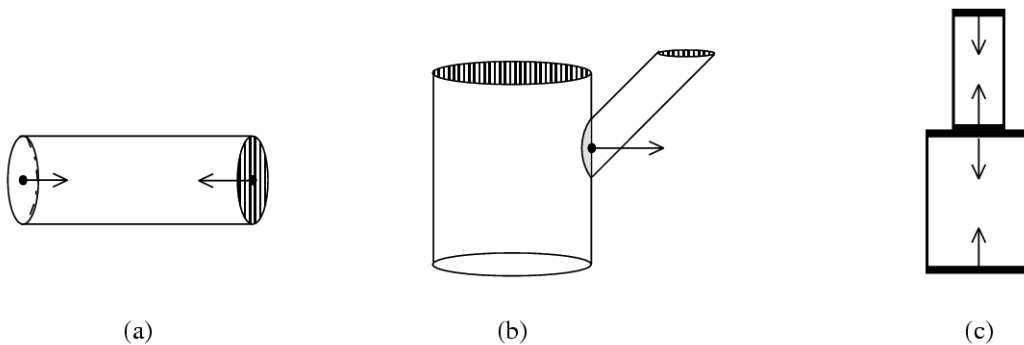


Figure 2.14 Application areas for the pressure area element

The use of pressure area elements in the dual and composite hydro model types requires some special attention. This is described in more detail in Section 2.1.4 and Section 2.1.5.

Dry Morison Elements

A dry Morison element is defined as a 2 node beam element with no assigned hydro properties. This is most conveniently achieved by defining a beam element in the preprocessor with a section number not matching any hydro property section number specified in HydroD or Prewad.

A dry Morison element may be used to transfer panel pressures directly to 2 node beam elements in a structural model by means of the dual model; see Section 2.1.4. No calculation of hydrodynamic loads is performed on a dry Morison element.

A dry Morison element includes only the mass per unit length and the diameter of the element. A dry Morison element may alternatively be defined directly in HydroD or Prewad. The end nodes of the dry Morison element must in this case be connected to nodes existing in the Morison model.

A dry Morison element specified directly in HydroD or Prewad is not part of a structural model. Therefore, when the loads on a structural model are calculated, panel pressures connected to dry Morison elements defined directly in HydroD or Prewad will not be mapped onto the structural model and load imbalance will occur.

Point Mass Elements

A point mass element is defined in HydroD or Prewad and can only be connected to existing nodes in the Morison model.

A point mass element may be used to include nodal masses in a Morison model whereby point masses defined by the preprocessors are created as point mass elements in Wadam. (The point mass element numbers are generated automatically starting at element number 400,000.) The point mass section numbers are generated in the range 1001 to 1999. Note that no other element or section numbers may coincide with those automatically generated for the point mass elements.

The property description for a point mass element includes the mass of the node. The point mass elements may alternatively be defined directly in HydroD or Prewad.

Note: Contrary to some of the other element types specified directly in HydroD or Prewad the nodal loads from point mass elements will be mapped onto the structural model.

Mooring Elements

A mooring element is defined in HydroD or Prewad and can only be connected to nodes in the Morison model. Appendix B 2.1 includes a detailed description of the mooring element formulation. The mooring element is also termed anchor element.

A mooring element may be used to include external restoring forces from weightless mooring lines with linear stiffness characteristics.

The mooring elements are connected to nodes in the Morison model. The first connection node for the mooring element is the guiding point, also termed the fairlead. The second connection point may be at a windlass as shown in Figure 2.15 (a). The two mooring element connections may optionally be the same node. The hydro properties of a mooring element include the element orientation, the pre-tension and the restoring characteristics.

The element orientation includes two different angles; The angle α_{inc} between the still water level and the mooring line and the angle α_x between the positive x-axis and the mooring line as shown in Figure 2.15 (b). Note that the angle $\alpha_{inc} \leq \pi/2$ with respect to the negative x-axis for nodes with $x < 0$.

The restoring contributions from the mooring elements are assembled into the body restoring matrix and hence contribute to the rigid body motion. The rigid body motion computed yields dynamic restoring forces

acting in the mooring element nodes. They are mapped onto the structural model as nodal loads. No nodal moment loads are transferred to the structural model.

Note: Spring elements on the Input Interface File are neglected.

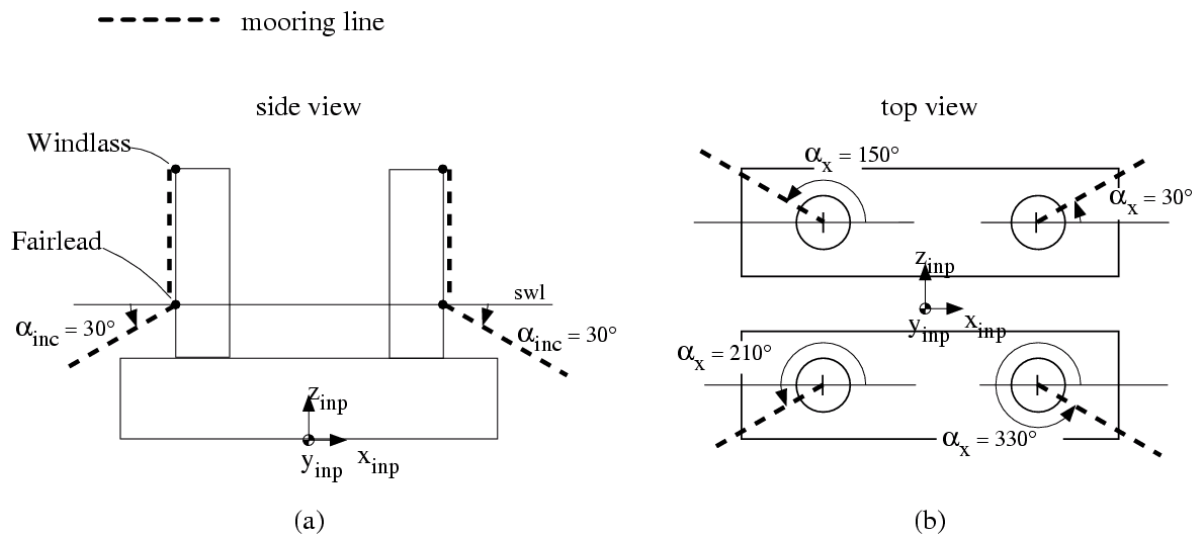


Figure 2.15 Mooring element definitions

TLP Mooring Elements

A TLP mooring element is defined in HydroD or Prewad and connected to nodes in the Morison model. It is based on the formulation given in Ref. /5/. In addition Appendix B 2.2 summarises the description of the TLP mooring element formulation.

A TLP mooring element may be used to include external restoring forces from a weightless tether with linear tether characteristics.

The hydro properties of a TLP mooring element include the length L of the tether, the pre-tension and the elastic stiffness parameter λ . A horizontal offset position x_{offset} , y_{offset} may also be specified as shown in Figure 2.16. Note that the tether length shall be the actual length at the offset position.

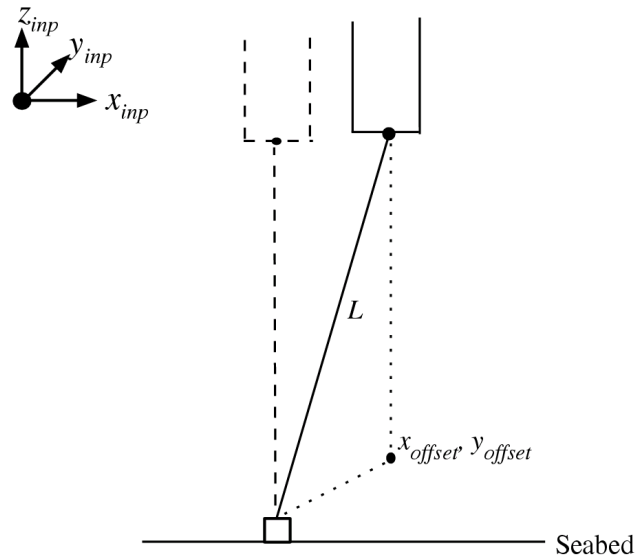


Figure 2.16 The TLP mooring element

The restoring contributions from the TLP mooring elements are assembled into the body restoring matrix and hence contribute to the rigid body motion. The rigid body motion computed yields dynamic restoring forces acting in the mooring element nodes. They are mapped onto the structural model as nodal loads.

Note: No nodal moment loads are transferred to the structural model.

2.1.4 The Dual Model

The dual model is a hydro model where a panel model and a Morison model represents the *same* part of a structure; see Figure 2.17. The basic idea with the dual model is that panel model with potential theory is used to include the forces related to added mass and potential damping whereas the Morison model is used to include the viscous drag forces.

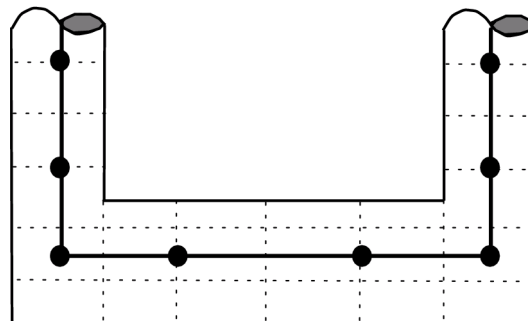


Figure 2.17 A dual model with both a panel model and a Morison model representing a structure

The dual model is mandatory when hydrodynamic loads from potential theory shall be used in the structural analysis of a beam model.

In a dual model the hydrodynamic loads are always transferred from a panel model to a Morison model. The viscous drag forces are calculated from Morison's equation on the Morison model while the contributions from potential theory are represented as loads on Morison sub-elements according to a panel-to-Morison element correspondence defined by the user. Panel pressures may be transferred to loads on 2D Morison elements, 3D Morison elements, pressure area elements and dry Morison elements. For 2D Morison elements the panel pressures are transferred specifically to each sub-element as shown in Figure 2.18.

The loads on Morison elements are transferred to a beam model as line loads for 2D Morison elements and dry Morison elements. For the 3D Morison element and the pressure area element the loads are transferred as nodal loads.

The hydrostatic load transferred to the structural model is computed from the Morison model including the pressure area elements.

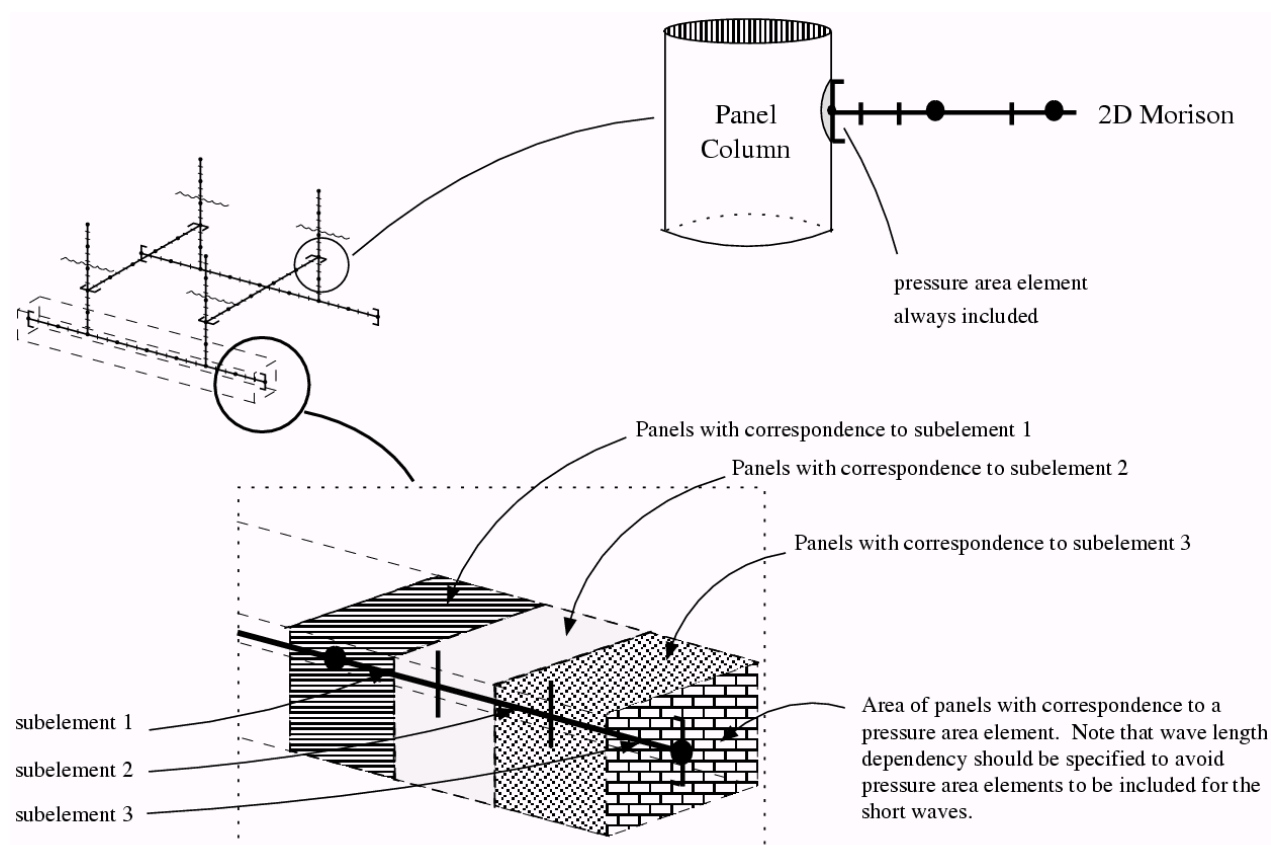


Figure 2.18 The correspondence between panels and a 2D Morison element

In a dual model all the panels must be connected to Morison elements. There may, however, be Morison elements in a dual model without connections to panels as shown in Figure 2.2.

Note that no moment loads will be transferred to a Morison element from integration of panel pressures. That is, the transfer of panel pressures will only be correct if the pressures integrated gives no resulting moment with respect to the Morison element.

Pressure area elements must always be used to include end effects of Morison elements which are not part of a dual model.

The panel model included in a dual model may utilise the standard symmetry plane options for panel models. In this case Wadam will map the panel pressures to the symmetric parts of the Morison model although a correspondence is only specified for the basic part of the panel model. Figure 2.19 indicates the modelling of a dual model which includes a two-plane symmetric panel model and a Morison model.

Note: It is not possible to have a correspondence from a panel to a beam which lies in a plane of symmetry.

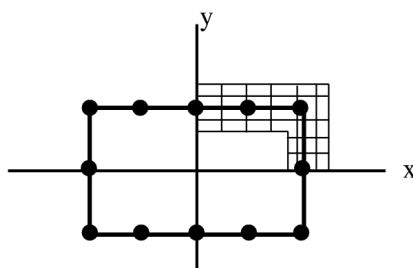


Figure 2.19 Dual model with a two-plane symmetric panel model

2.1.5 The Composite Model

The composite model is a hydro model suitable for structures consisting of both slender and large volume parts. The slender parts are represented with a Morison model and the large volume parts with a panel model.

The hydrodynamic forces on a composite model are computed from potential theory for the panel model and from Morison's equation for the Morison model. The hydrodynamic exciting forces and matrices from both theories are accumulated in the system of equation of motions for the composite model.

The wave kinematics applied in Morison's equation may either be taken from the incident wave field, or it may be specified to depend on the diffracted wave field generated from solving the diffraction problem for the panel part of the composite model. Figure 2.20 shows a composite model where the risers, modelled with 2D Morison elements, may optionally be exposed to loads from a diffracted wave field caused by the shaft of the large volume structure.

With a composite model the pressure area element shall normally be included in the Morison model for all wave lengths.

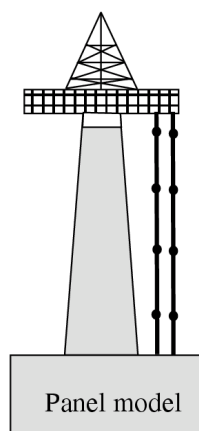


Figure 2.20 Example of a composite model with a panel model and a non-overlapping Morison model

2.1.6 Single Super element Composite model

From version 8.1-09 of Wadam, the beams receiving loads from the Morison model and the shells or solids receiving loads from the panel model may be modelled in the same 1. level super element. The panel model may then be defined separately, whereas the Morison model is the same super element as the structural model. It is also possible to have the panel model, the Morison model and the structural model all in the same super element.

2.1.7 Multi-Body Modelling

The hydrodynamic and mechanical interaction between a number of structures can be analysed with the multi-body option. The hydrodynamic interaction is computed from the potential theory as applied for a single structure with the principal extension that the number of degrees of freedom is increased from 6 to $6N$ where N is the number of structures. A stiffness coupling between structures cannot be described directly in Wadam.

Each of the bodies may be represented with a hydro model and optionally a structural model and a mass model. The bodies may be either fixed or floating.

A hierarchical set of coordinate systems is introduced in which the individual structures and their input models are specified. The coordinate systems applied in a multi-body analysis are therefore different from those of a single-body analysis; see Figure 2.21. The coordinate systems are defined as follows:

- The global coordinate system (X_{glo} , Y_{glo} , Z_{glo}) is a right handed cartesian coordinate system with its origin at the still water level and with the z -axis normal to the still water level and the positive z -axis pointing upwards.
- The individual body coordinate systems (x_B , y_B , z_B) of each structure are specified relative to the global coordinate system.

- The input coordinate system (x_{inp} , y_{inp} , z_{inp}) of each input model included in a body is specified relative to the body coordinate system of that body.

The body independent coordinates are described in the global coordinate system, e.g. the fluid kinematics evaluation points.

The coordinates related to a particular body are described in the corresponding body coordinate systems, e.g. the result reference coordinate system.

The coordinates related to the individual input models are described in the input coordinate systems, e.g. nodal coordinates of the input models.

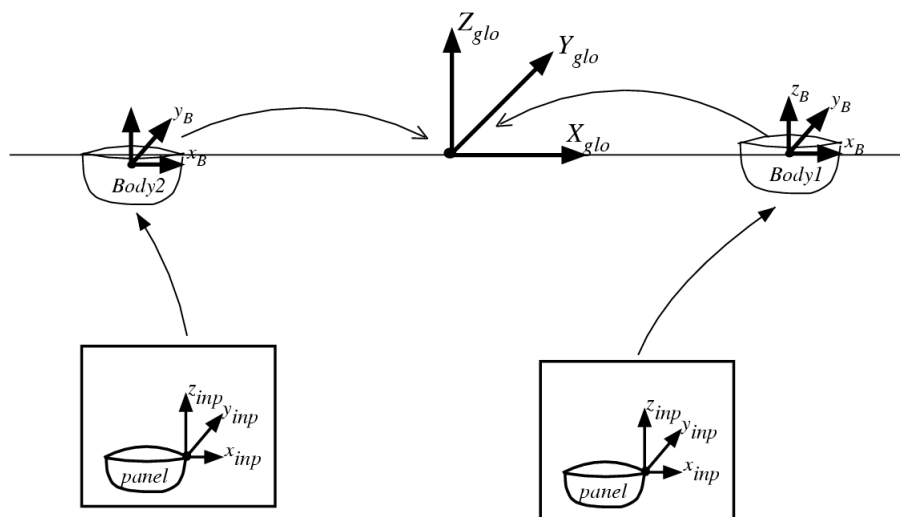


Figure 2.21 The hierarchical coordinate system definition

2.1.8 Mass Modelling

Global mass information is required in Wadam for analysis of floating structures. The mass is used both in the hydrostatic calculations to report imbalances between weight and buoyancy of the structure and in the equation of motion.

Wadam provides two methods to establish global mass matrices:

- Direct input specification of a global mass matrix
- Assembling of a global mass matrix from a mass model (no utilisation of symmetry planes)

Wadam transfers accelerations to Loads Interface Files for subsequent structural analysis. A consistent calculation of inertia loads from these accelerations is ensured in Wadam and Sestra by access to the same module for finite element mass generation.

For beam element models there is the alternative option to calculating inertia loads in Wadam and transferring the loads to the Loads Interface Files.

The remaining part of this section describes the two methods for establishing global mass information.

Direct Input Specification of Global Mass Matrix

The direct input specification of a global mass matrix comprises giving the total mass of the structure together with the centre of gravity, the gyration radii and the products of inertia. The centre of gravity is specified with respect to the input coordinate system. The gyration radii and the products of inertia are specified with respect to the global coordinate system.

The direct input specification of a global mass matrix cannot be used together with the option to integrate forces on sectional planes in the hydro model. This is because the global mass matrix does not include any information of the mass distribution on the particular elements and hence the inertia force contributions from these elements cannot be computed. As described below the option to generate the mass from a mass model must be used to obtain these sectional forces.

Assembling of Global Mass Matrix from Mass Model

The mass model used in the assembling of a global mass matrix may be defined using one of two options:

- It may be defined using the global generate option which interprets a finite element model built from an arbitrary superelement hierarchy. With this option mass contributions are assembled from the element types defined in Table 2.1.
- It may be generated with the distributed mass option which only works with the Morison model. This implies that the entire mass description must be represented in the Morison model. With the distributed mass options contributions are assembled from the following types of Morison elements:
 - 2D Morison elements
 - 3D Morison elements
 - Dry Morison elements
 - Point mass elements

The assembling of a global mass matrix from a mass model must be used together with the option to integrate forces on sectional planes in the hydro model.

The mass model must be defined in the same coordinate system as used for the other input models. This is described in more detail in Section 2.1.1.

The mass model may be identical to the structural model or it may be a completely different superelement hierarchy.

2.1.9 Structural Modelling

Wadam may be used to calculate hydrostatic and hydrodynamic loads on a structural model; see also Section 2.3.

The structural model may be built from an arbitrary large superelement hierarchy. It may include any of the finite element types defined in SESAM. However, only the finite element types listed in Table 2.1 will receive hydrostatic and hydrodynamic loads.

The finite elements which shall receive hydrostatic and hydrodynamic loads must be identified in the modelling phase. The technique to identify elements differs between beam elements and element types with surfaces (shells and volumes) as described in the two subsections below.

Nodal accelerations from rigid body motion will be calculated for all the nodes in a structural model.

If the structural model consists of more than one superelement a combination of loads from different superelements is required in the superelement assembling performed in Presel. The combination of loads is described in Section 2.1.11.

Loads on Superelements with Beams

The beam elements and nodes which shall receive hydrostatic and hydrodynamic loads from Wadam must be included in a Morison model. The loads are transferred to the beam elements and nodes which are connected to Morison elements in HydroD or Prewad; see Section 2.3.5.

Note that both hydrostatic and hydrodynamic load contributions on free ends of beam elements require the element ends to be closed with Morison pressure area elements as described in Section 2.1.3.

Note also that additional 2D Morison elements defined in HydroD or Prewad do not correspond to beam elements in the structural model and hence cannot contribute to the structural loads. The additional Morison elements should be used with care; They are a source to imbalances between the loads calculated in a global response analysis and the element and nodal forces transferred to a structural model.

Loads on Superelements with Shell and Solid Elements

For shell and solid elements loads are transferred to the finite element sides which are identified as wet. The so-called HYDRO-PRESSURE load option in Prefem (or Hydro, Element uniform load in Patran-Pre) is used to identify the wet element sides. The definition of wet sides of the structural model is equivalent to the definition of panels in the panel model; see Section 2.1.2. Wet element sides may be included in several superelements of a structural model.

Wadam transfers pressure loads to both the external wet surface of a structural model and to the wet surfaces of internal tanks. The dummy load case number of the HYDRO-PRESSURE load must be used to identify which of the wet elements shall receive external and which shall receive internal HYDRO-PRESSURE loads. The rules for this dummy load case numbering is the following:

External wet surface: The HYDRO-PRESSURE load case number must be equal to one.

Internal wet surface: The HYDRO-PRESSURE load case for the first internal wet surface (tank) must be equal to two. Additional internal tanks are numbered consecutively with load case number three assigned to tank number two and so on.

It is important in the definition of wet element sides that the direction of the pressure load is pointing from the fluid towards the element side. For this purpose both Patran-Pre and Prefem provides an option to visualise the direction of the pressures defined on the finite element mesh. Figure 2.22 shows an idealised view of the normal vectors pointing towards wet element sides. This load can also be visualized and verified in HydroD.

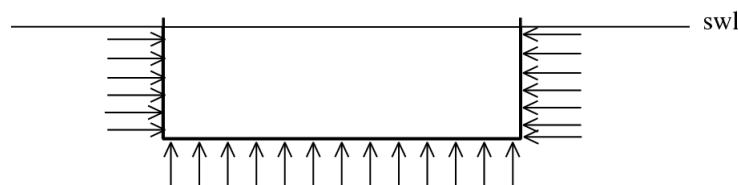


Figure 2.22 Idealised view of hydro pressures on structural element sides

The dummy HYDRO-PRESSURE load cases used to identify wet structural elements will not be in conflict with load cases generated by Wadam or other load cases defined by the preprocessors.

2.1.10 Free Surface Modelling

The free surface model used in the second order sum- and difference- frequency force calculation in Wadam may be generated by Patran-Pre or Prefem. It may optionally also be interpreted directly from the Wamit version 5.3S free surface format, Ref. /2/.

The part of the free surface actually modelled by surface panels is defined by the radius of a circle as shown in Figure 2.23. This so-called partitioning radius R must enclose the hydro model. It should be determined according to the decaying rate of local waves. An appropriate approximation is $R \sim O(h)$ for shallow water and $R \sim O(\lambda)$ for deep water. Here h is the water depth and $\lambda \gg h$ is the longest wave length involved. The ratio h/λ may have to be substantially larger than 1 to achieve accuracy in deep water, Ref. /3/.

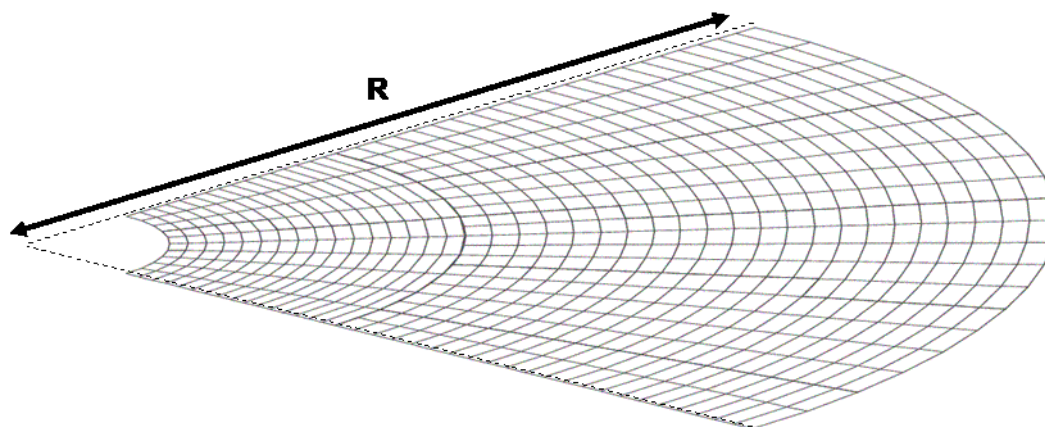


Figure 2.23 Free surface mesh

The free surface must be meshed with 4 node shell elements (no 3 node elements). The HYDRO-PRESSURE load case must point in the negative z-direction.

The free surface model shall have the same symmetry properties as the panel model.

2.1.11 Load Case Numbering and Load Case Combinations

The default load case numbers LC generated by Wadam on the Loads Interface Files are given from the following equation.

$$LC = (((MM - 1) \cdot NOK + (LL - 1)) \cdot NPHA + IPHA) \cdot I \cdot NSEL + ISEL \quad (2.1)$$

where:

MM	is the actual heading number
NOK	is the total number of frequencies
LL	is the actual frequency number
NPHA	is the number of phase angles if the time output option is specified, NPHA = 1 if complex loads are generated
IPHA	is the actual phase angle number, IPHA = 1 if complex loads are generated
I	is zero for static load cases and one for dynamic load cases
NSEL	is the number of occurrences of the first level superelement in question
ISEL	is the actual occurrence number of the first level superelement in question

For a given first level superelement with complex loads Equation (2.1) will generate load case numbers 1 through NSEL as static load cases and load cases number NSEL+1 through NOK · NOH · (NSEL+1) as dynamic load cases. Table 2.2 illustrates the correspondence between superelement occurrence and wave frequency and heading angle.

The relation between superelement occurrence numbers in Wadam and the superelement index numbers in Presel is important when performing load case combinations in Presel. This is discussed in Example 2.2.

For loads transferred to a structure modelled with shell or solid elements Wadam includes some options to manipulate the generation of loads on the Loads Interface Files and the numbering of load cases. More specifically, for floating structures Wadam by default generates four different types of loads represented as static and dynamic loads respectively. These are:

- Hydrostatic pressure and gravity summed together in the first global load case.
- Hydrodynamic pressure loads and nodal accelerations summed together for each combination of incident wave frequency and heading angle into global load cases starting with load case number two.

For the case of load transfer from a panel model to a shell/solid model each of the four load types above may optionally be either suppressed or divided into separate load cases. This is controlled from HydroD or Pre-wad.

For structural models consisting of one superelement only Wadam will by default generate a hydrostatic load case for the still water condition and a sequence of hydrodynamic load cases, one for each specified combination of wave frequency and wave direction. If deterministic load calculation is specified separate

load cases are also created for each specified phase angle. The load cases generated by Wadam will be the global load cases for single superelement structural models.

For structural models defined from a hierarchy of superelements the hydrostatic and hydrodynamic load cases for each superelement will include the load cases for all the occurrences of each particular superelement. Equation (2.1) is used to assign the unique load case numbers for all occurrences of superelements.

Furthermore, for structural models defined from a hierarchy of superelements the load cases created by Wadam for first level superelements are combined into new higher level load cases in Presel. The load case combination is performed recursively, i.e. repeated for each new higher level superelement created in Presel. At the structure level the load case combinations coincides with the global load cases. See also the SESAM System Manual for a description of the assembling of superelement hierarchies and load combinations.

The term superelement occurrence number defines the actual location of a superelement in a superelement hierarchy. The number is found by counting the occurrences of a superelement from left to right in a superelement hierarchy (or from top and down in hierarchy as printed by Presel).

Two simple examples are included to describe the relation between global load case numbers and the load case numbers generated by Wadam. In both examples the set of global loads include one static load case and 6 dynamic load cases defined as the combinations of three incident wave frequencies and two heading angles.

Example 2.1 Load case numbering for a single superelement model

This example consists of a structural model built from one single superelement. Here the load case numbers generated by Wadam directly coincides with the global load case numbers. Table 2.2 shows the correspondence between the global load case numbers and the wave frequency and heading combinations.

Table 2.2 Load case numbering for a single superelement structural models

Load case number (global = Wadam)	Load case description
1	Hydrostatic
2	$\beta = 0^\circ, \omega = 0.0$
3	$\beta = 0^\circ, \omega = 0.1$
4	$\beta = 0^\circ, \omega = 0.2$
5	$\beta = 90^\circ, \omega = 0.0$
6	$\beta = 90^\circ, \omega = 0.1$
7	$\beta = 90^\circ, \omega = 0.2$

Example 2.2 Load case numbering for a model assembled in a superelement hierarchy

This example is a model consisting of a first level superelement, superelement number 10, used in two different positions in a two level superelement hierarchy. The top level superelement number is 100. Adopting the terms used above there are two occurrences of the same first level superelement in this hierarchy. Figure 2.24 shows the superelement hierarchy.

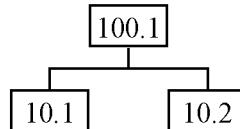


Figure 2.24 Two-level superelement hierarchy with occurrence 1 and 2 of superelement 10 included in superelement 100

Table 2.3 shows the correspondence between the global and Wadam generated load case numbers. The table also includes the superelement occurrence numbers, a description of the separate load cases and the Presel generated superelement index numbers.

Table 2.3 Load case numbering for a model assembled in a superelement hierarchy

Global load case number	Wadam load case number	Load case description	Occurrence of superelement 10	Presel index
1	1	static	1	1
1	2	static	2	2
2	3	$\beta = 0^\circ, \omega = 0.0$	1	1
2	4	$\beta = 0^\circ, \omega = 0.0$	2	2
3	5	$\beta = 0^\circ, \omega = 0.1$	1	1
3	6	$\beta = 0^\circ, \omega = 0.1$	2	2
4	7	$\beta = 0^\circ, \omega = 0.2$	1	1
4	8	$\beta = 0^\circ, \omega = 0.2$	2	2
5	9	$\beta = 90^\circ, \omega = 0.0$	1	1
5	10	$\beta = 90^\circ, \omega = 0.0$	2	2
6	11	$\beta = 90^\circ, \omega = 0.1$	1	1
6	12	$\beta = 90^\circ, \omega = 0.1$	2	2
7	13	$\beta = 90^\circ, \omega = 0.2$	1	1
7	14	$\beta = 90^\circ, \omega = 0.2$	2	2

In this very simple example there is a one-to-one correspondence between occurrence numbers and Presel index numbers. This one-to-one correspondence is not required. However, when the occurrence numbers and the Presel indices do not match the load combination in Presel should be carefully performed to ensure that the indices correspond to the correct occurrence numbers.

The one-to-one correspondence may be violated for particular choices of using the same first level superelement in several sub-hierarchies of a multi level superelement model.

2.2 Global Response Analysis

2.2.1 General

The global response feature in Wadam computes the response of fixed and floating structures due to wave loads. Results computed are forces and response transfer functions assuming rigid bodies. Also global matrix results data, sectional loads and off-body kinematics results may be produced. The results can be transferred to the statistical postprocessor Postresp for graphics presentation and further results processing through a Results Interface File.

The statistical postprocessing in Postresp consists of statistical analysis of transfer functions including calculation of response spectra and short and long term statistics. Postresp also includes the option to calculate the equation of motion from the global matrices and exciting forces transferred from Wadam.

The global response analysis is performed for a system consisting of a hydro model and a mass model. The latter is only required if the system is specified to be floating. Additional mooring and tether stiffness characteristics may also be provided for floating systems.

The hydro model may consist of either a panel model, a Morison model built from beam elements or a combination of these two model types. The hydro model represents different types of hydrostatic and hydrodynamic loads. The hydro model concept is described in detail in Section 2.1.

A mass model is required when the global response analysis includes calculation of motions. A mass model may either be defined as a FE model where the mass of each finite element contributes to a 6 by 6 body mass matrix, also termed the global mass matrix. Alternatively the mass model may be specified directly as an input global mass matrix. The mass model is described in more detail in Section 2.1.8.

2.2.2 Computation of Wave Loads

Wadam calculates wave induced forces for a specified set of wave frequencies and heading angles by one of the following three calculation methods:

- Morison's equation applied to a Morison model
- The MacCamy-Fuchs formula applied to a Morison model
- The potential theory applied to a panel model
- A method in which Morison's equation and the potential theory both are applied to compute hydrodynamic loads on the same hydro model. This calculation method restricts the hydro model to be built from either:

— Non-coupled Morison and panel models

This type of hydro model is termed a composite model and is described in Section 2.1.5. With the composite model the wave kinematics applied in Morison's equation may optionally be modified to take into account the diffracted wave field due to the presence of a panel part in the hydro model.

— A Morison model partly or completely coupled to a panel model

This type of hydro model is termed a dual model and is described in Section 2.1.4. The dual model serves two purposes. It provides a mechanism to add viscous drag forces from Morison's equation to the damping terms calculated from potential theory. It also provides a mechanism to calculate hydrodynamic pressure loads on a panel model and to subsequently represent these loads as line loads on beam elements in a structural model.

The motion responses for a hydro model is obtained by solving the equations of motion for a set of wave frequencies and heading angles. The rigid body added mass, damping and restoring matrices used in the equations of motion may be calculated by applying Morison's equation, the potential theory or the composite method as described above. Except for frequency dependent added mass matrices these matrices may alternatively be specified directly by the user.

2.2.3 The Global Response Results

The wave induced forces and moments and the motion responses calculated by Wadam are reported with respect to a motion reference point which is located at the intersection between the still water level and a vertical line through the common origin of the models used in the analysis. The coordinate systems in Wadam are described in Section 2.1.1.

The results available from a global response analysis of a hydro model include transfer functions for:

- Wave exciting forces and moments
- Motion responses
- Sectional loads
- Rigid body matrices
- Off-body kinematics
- Surface elevations

Section 2.5 describes all these results types in more detail.

2.3 The Calculation of Detailed Loads on a Structural Model

2.3.1 General

The detailed load calculation feature provides a tool for automatically transferring wave loads from a hydrodynamic analysis into finite element loads for a structural analysis.

Both hydrostatic and hydrodynamic loads on a structural model may be calculated. The results, which may be both FE pressure loads and nodal loads, will be transferred to Loads Interface Files for subsequent linear static or dynamic analysis in Sestra. Wadam also transfers environmental information and load case numbering information to Sestra on a separate file (the S-file). The latter is specifically required for a subsequent stochastic fatigue analysis using Framework.

2.3.2 The Structural Load Types

Three different load types may be generated by Wadam and transferred to a structural model. These are:

- Hydrostatic loads with contributions from forces in the still water condition and pre-tension from mooring and tether systems
- Gravity load representing the weight of the structure
- Hydrodynamic loads with contributions from exciting forces from incident waves, forces from wave induced motion and rigid body accelerations

Detailed descriptions of distributed loads are included in Section 2.5.15 and Section 2.5.16.

Wadam generates separate load case numbers for the hydrostatic load and for each of the hydrodynamic loads, i.e. for each wave frequency and heading. These loads may be combined into new load cases with Presel. The new combined load cases will be used during subsequent structural analysis and postprocessing. Section 2.1.11 contains a more detailed description of load case numbering and load case combinations in SESAM.

2.3.3 Deterministic Loads

Wadam also provides the option to report transfer functions for FE loads as deterministic loads (time domain). That is loads represented for specified phase angles of incident waves with given wave amplitudes.

The deterministic results presentation may also be used together with the option to calculate the following types of loads:

- Non-linear viscous drag forces from Morison's equation for fixed structures.
- Pressure loads up to the instantaneous free surface, see Section 2.6.7.
- Time invariant current profiles added to the incident wave field in the calculation of forces by Morison's equation. See Section 2.4.2 for the description of current profiles in Wadam.

Note: Deterministic loads cannot be computed for a dual model.

2.3.4 Detailed Loads Transfer to a Model with Shell or Solid Elements

The transfer of detailed loads to a large volume structure modelled with shell or solid elements is performed as follows:

- The hydrostatic load at still water condition is calculated as normal pressures directly on the shell and solid element surfaces defined as wet sides.
- The hydrodynamic pressure loads on shell or solid elements can only be obtained from a potential theory calculation based on a panel model. The actual mapping of panel pressures into normal pressure loads in a structural model is automatically performed by the algorithm described in Appendix B 3.3.
- Independent nodal loads require a Morison model to be used together with the panel model. More specifically, if loads from mooring lines and tethers shall be included in a structural system a Morison model consisting of the connection nodes must be created.

2.3.5 Detailed Loads Transfer to a Model with Beam Elements

The transfer of loads to a slender structure, for example a jacket or a jackup, modelled with beam elements is performed as follows:

- The hydrostatic load at the still water condition is represented as loads on beam elements and nodes in the structural model.
- The hydrodynamic loads are calculated for the beam elements and nodes corresponding to the Morison elements. The method of load calculation depends on the connection between the hydro model and the structural model:
 - If the hydro model is a Morison model then the hydrodynamic pressure loads obtained by Morison's equation are represented directly as line loads and nodal loads on the beam element model.
 - If the hydro model is a panel model then the hydrodynamic loads are first calculated as panel pressures and then transferred to a Morison model according to a panel-to-Morison element correspondence. The Morison element loads are subsequently represented as line loads and nodal loads on the beam element model.

2.4 Environmental Description

2.4.1 Surface Waves

The models in Wadam may when first order potential theory and Morison's equation are applied be exposed to planar and linear harmonic waves, i.e. waves described by the Airy wave theory. For the second order option for the potential theory see Ref. /3/ for a detailed description of the theoretical background.

The incident waves may be specified by either wave lengths, wave angular frequencies or wave periods. The direction of the incident waves are specified by the angle β between the positive x-axis and the propagating direction as shown in Figure 2.25 (a).

The incident wave used in Wadam is defined as

$$\eta = \text{Re}[A e^{i(\omega t - k(x \cos \beta + y \sin \beta))}] \quad (2.2)$$

which alternatively may be written as

$$\eta = A \cos(\omega t - k(x \cos \beta + y \sin \beta)) \quad (2.3)$$

This represents a wave with its crest at the origin for $t = 0$ as shown in Figure 2.25 (b).

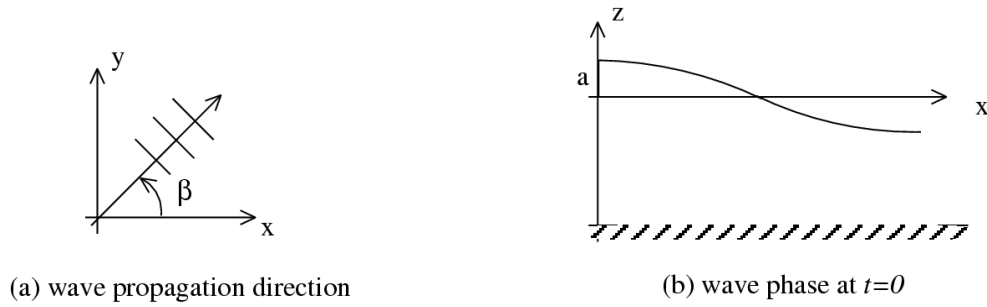


Figure 2.25 Surface wave definitions

The fluid velocity $\mathbf{v} = v_x \mathbf{i} + v_y \mathbf{j} + v_z \mathbf{k}$ and acceleration $\mathbf{a} = a_x \mathbf{i} + a_y \mathbf{j} + a_z \mathbf{k}$ for the incident waves are:

$$v_h = v_x \mathbf{i} + v_y \mathbf{j} = A \omega \frac{\mathbf{k} \cosh(kz + kd)}{\sinh(kd)} \cos(\omega t - \mathbf{k} \cdot \mathbf{x}) \quad (2.4)$$

$$v_z = -A \omega \frac{\sinh(kz - kd)}{\sinh(kd)} \sin(\omega t - \mathbf{k} \cdot \mathbf{x})$$

$$a_h = -a_x \mathbf{i} + a_y \mathbf{j} = A \omega \frac{2 \mathbf{k} \cosh(kz + kd)}{\sinh(kd)} \sin(\omega t - \mathbf{k} \cdot \mathbf{x}) \quad (2.5)$$

$$a_z = -A \omega \frac{2 \sinh(kz + kd)}{\sinh(kd)} \cos(\omega t - \mathbf{k} \cdot \mathbf{x})$$

where

d	Depth
k	Absolute value of wave number
ω	Wave angular frequency
A	Wave amplitude
\mathbf{x}	$= x \mathbf{i} + y \mathbf{j}$ — location in the x-y plane
\mathbf{k}	$= k (\mathbf{i} \cos \beta + \mathbf{j} \sin \beta)$ — two dimensional wave number
z	Vertical coordinate with z-axis upward, $z = 0.0$ at still water level
β	Direction of wave propagation

The finite depth dispersion relation used in the above expressions is

$$\omega^2 = gk \tanh(kd) \quad (2.6)$$

The wave period is given by

$$T = \frac{2\pi}{\omega} \quad (2.7)$$

and the wave length is

$$\lambda = \frac{2\omega}{k} \quad (2.8)$$

For a more detailed description of linear wave theory see Ref. /8/.

The fluid kinematics above the still water level is obtained by constant extrapolation in Wadam.

2.4.2 Current Profiles

Wadam provides the option to specify time invariant current profiles for the calculation of deterministic Morison element forces.

Note: The current can only be used for fixed structures.

The current profile may be specified at a set of positions along the z-axis of the global coordinate system. Current values at intermediate z-positions are obtained by linear interpolation. The direction of the current in the horizontal plane is specified at each positions.

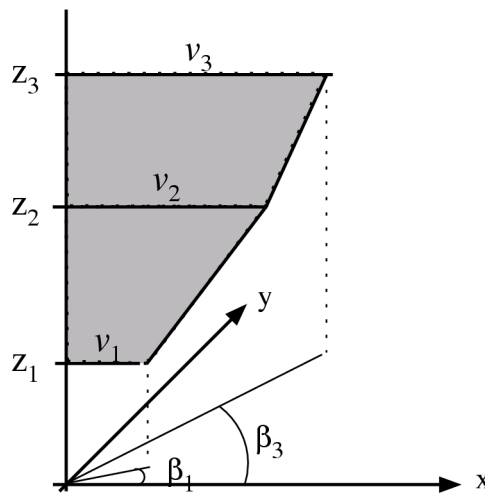


Figure 2.26 Current profile definition

2.4.3 Water Depth

Wadam provides the option to specify a water depth. The water depth is used in two different calculation phases in the program:

- It is used in the processing of the panel model to remove all panels below the sea-bed.
- It is used in the calculation of Green's functions for finite water depth.

2.5 Results Types Reported from Wadam

2.5.1 Units

When performing an analysis with SESAM the user must apply a set of consistent units. The same units must be used in all programs throughout the analysis from modelling to results presentation.

The basis for determining a set of consistent units is the fundamental equation:

$$\mathbf{f} = m \mathbf{a} \quad (2.9)$$

In terms of the fundamental units of mass [M], length [L] and time [T] this equation may be written:

$$\left[F = \frac{ML}{T^2} \right] \quad (2.10)$$

Force, stress, density, etc. are not fundamental units and must be derived in terms of the units of mass, length and time. Whenever possible it is simplest to use S.I. units:

[L]	Length in meters (m)
[M]	Mass in kilograms (kg)
[T]	Time in seconds (s)

Force will then be in Newton (N):

$$1N = 1 \frac{kg \ m}{s^2} \quad (2.11)$$

The units used in Wadam is controlled by the acceleration of gravity $[L/T^2]$ and the fluid density $[M/L^3]$. All other input data must be expressed in terms of these units. For example:

- Fluid kinematic viscosity: $[L^2/T]$
- Fluid velocity: $[L/T]$

2.5.2 Result Reference Point

For single-body structures the results from Wadam are reported with respect to a result reference point which is coinciding with the origin of the global coordinate system; see Section 2.1.1. For multi-body structures there is one result reference point for each body coinciding with the body coordinate systems; see Section 2.1.7.

2.5.3 Dimensioning of Results

Wadam reports results on dimensionalised and non-dimensionalised form as follows:

- The Hydrodynamic Results Interface File contains dimensionalised results.
- The Loads Interface Files contain dimensionalised results.
- The Wadam print file contains both forms as follows:
 - Chapters 2 and 5 contain dimensionalised results.
 - Chapter 4 contains non-dimensionalised results.

The non-dimensionalising factor D_n specified in Table 2.4 and Table 2.5 may be used to obtain dimensionalised results F_d from the formula:

$$\mathbf{F}_d = \mathbf{D}_n \mathbf{F}_n \quad (2.12)$$

where \mathbf{F}_n is a non-dimensionalised result reported in chapter 4 in the Wadam print file. The factors used in the tables are:

ρ	Density of the fluid
g	Acceleration of gravity
L	Characteristic length
V	Displaced volume of the body
A	Amplitude of the incoming wave, equal to one for harmonic results

Table 2.4 Dimensionalising factors for matrices

Result type	D_n entry _{<i>i,j</i>}		
	$i=1-3, j=1-3$	$i=1-3, j=4-6$ $i=4-6, j=1-3$	$i=4-6, j=4-6$
Inertia matrix	ρV	$\rho V L$	$\rho V L^2$
Added mass matrix	ρV	$\rho V L$	$\rho V L^2$

Table 2.4 Dimensionalising factors for matrices

Result type	D_n $entry_{i,j}$		
	$i=1-3, j=1-3$	$i=1-3, j=4-6$ $i=4-6, j=1-3$	$i=4-6, j=4-6$
Damping matrix	$\rho V \sqrt{g/L}$	$\rho V \sqrt{g/L}$	$\rho V L \sqrt{g/L}$
Restoring matrix	$\rho V g/L$	$\rho V g$	$\rho V g L$

Table 2.5 Dimensionalising factors for results

Result type	D_n $mode_i$	
	$i=1-3$	$j=4-6$
Exciting forces	$\rho V g A/L$	$\rho V g A$
Motion	A	A/L
Drift forces	$\rho g L A^2$	$\rho g L^2 A^2$
Sectional loads	$\rho V g A/L$	$\rho V g A$
Fluid pressures	$\rho g A$	
Fluid velocities	$A \sqrt{g/L}$	
Fluid accelerations	$A g/L$	
2nd order forces	$\rho g L A^2$	$\rho g L^2 A^2$
2nd order motions	A^2/L	A^2/L^2
2nd order pressures	$\rho g A^2/L$	

2.5.4 Transfer Functions and Phase Definitions

The transfer functions in Wadam describe responses for bodies in harmonic waves. The reported responses are normalised with respect to the incident wave amplitudes. With a transfer function $H(\omega, \beta)$ the corresponding time dependent response variable $R(\omega, \beta, t)$ can be expressed as

$$R(\omega, \beta, t) = A \operatorname{Re}[H(\omega, \beta) e^{i\omega t}] \quad (2.13)$$

where A is the amplitude of the incoming wave, ω is the frequency of the incoming wave, β describes the direction of the incoming wave and t denotes time. The phase angle ϕ between the incident wave and the time varying response is defined from

$$R(\omega, \beta, t) = A \operatorname{Re}[|H(\omega, \beta)|e^{i(\omega t + \phi)}] \quad (2.14)$$

where $|H|$ is the amplitude of the transfer function. The transfer function and the phase angle may be expressed as

$$H = H_{\operatorname{Re}} + iH_{\operatorname{Im}} \quad \text{and} \quad \phi = \operatorname{atan} \frac{H_{\operatorname{Im}}}{H_{\operatorname{Re}}} \quad (2.15)$$

The time varying response can alternatively be expressed as

$$R(\omega, \beta, t) = A[H_{\operatorname{Re}} \cos \omega t - H_{\operatorname{Im}} \sin \omega t] \quad (2.16)$$

The phase lead ϕ of the response relative to an incident wave with the wave crest at the origin of the global coordinate system is shown in Figure 2.27.

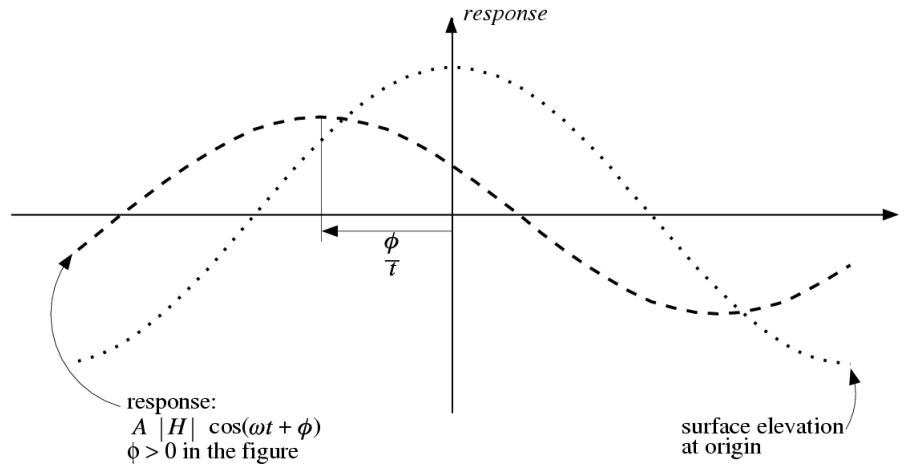


Figure 2.27 Definition of phase between the response and the incident wave

2.5.5 Hydrostatic Restoring Results

Wadam calculates the hydrostatic restoring results from the hydro model. It is given with dimensions and include:

- The sum of displaced volume of the panel and Morison part of the model

The total displaced volume is reported together with the separate contributions from the panel and Morison parts.

For the panel model the volume is reported from three different calculations, i.e. from summing up of control volumes in the three different directions. The reported total volume is taken as the median of the three volumes (not mean but middle value of three values).

Note: If the separate control volumes are differing by a significant number this normally indicates that the wet surface of the model is not properly defined.

- The centre of buoyancy
- The water plane area
- The metacentric height
- The global hydrostatic restoring matrix assembled from both hull restoring and additional stiffness terms

The additional hydrostatic stiffness terms included in the hydro model may include contributions from:

- Risers, mooring lines or tethers represented with Morison mooring or tether elements
- Stiffness matrices specified directly on the analysis control data

For multi-body models the hydrostatic restoring matrix for each body is reported.

Note: By definition, the global hydrostatic restoring matrix from the dual part of a hydro model is calculated from the panel model. The hydrostatic restoring from the Morison elements with no panels connected are also assembled to the global hydrostatic restoring data.

Note: The global hydrostatic restoring calculation differs from the calculation of the hydrostatic load case in a subsequent detailed load calculation. As described in Section 2.5.15 the hydrostatic loads on a structural beam model is calculated directly from the beam elements irrespective of any dual model. This definition requires a high degree of hydrostatic similarity between a panel model and its dual beam model if consistency shall be preserved between Wadam and a structural analysis in Sestra.

Note: In the hydrostatic restoring contribution from the Morison elements the local waterplane moment for each Morison member is not included. This can cause errors if some of the beams have a large diameter. The fix to this problem is to include this restoring contribution as an additional restoring matrix.

2.5.6 Global Mass Matrix

A 6 by 6 mass inertia coefficient matrix is reported for each body. It is generated according to the input definition and hence may be calculated from either:

- The hydro model
- The structural model
- A specific mass model
- The input definition of an inertia mass matrix based on:
 - Specifying the centre of gravity and the radii of gyration together with the total mass
 - Specifying the 6 by 6 global mass matrix

2.5.7 Added Mass Matrix

The 6 by 6 added mass matrix is reported for each separate body. The added mass interaction matrices between any two bodies in a multi-body system are also reported. The added mass matrix is calculated according to the type of the hydro model as follows:

- Frequency dependent added mass from potential theory
- Frequency independent added mass from Morison's equation

For the composite hydro model the added mass at a given frequency is reported with both frequency dependent and independent contributions.

2.5.8 Damping Matrix

The 6 by 6 damping matrix is reported for each separate body. The potential damping interaction matrices between any two bodies in a multi-body system are also reported. The damping matrix is calculated according to the type of the hydro model as follows:

- Frequency dependent damping from potential theory
- Frequency independent linearised viscous damping from Morison's equation
- HydroD or Prewad specified frequency dependent or frequency independent 6 by 6 damping matrices

For the composite hydro model type the damping for a given frequency is reported as both frequency dependent and independent contributions.

2.5.9 Exciting Forces and Moments

The transfer functions for exciting forces and moments due to the incident waves are reported for each body at all the combinations of frequencies and wave headings. The transfer functions for rigid body forces and moments are calculated as follows:

- By integration of exciting forces from all types of Morison elements obtained from the linearised Morison's equation
- By integration of pressures on all the panels obtained by solving the diffraction problem
- By applying the Haskind relation on the radiation potentials if no detailed panel pressures shall be calculated

For the dual and composite model types the exciting forces from the panel and Morison parts are reported both separately and as the combination used in the subsequent analysis, e.g. in the equation of motion.

By selecting time domain output the above results will be reported as deterministic forces and moments at specified phases of the incident waves with given wave amplitudes.

For fixed structures the deterministic Morison option may be used to include the following non-linear effects in Morison's equation:

- Non-linear viscous drag formulation
- Time invariant current may be superimposed on the fluid velocities.
- Forces and moments may be calculated up to the free surface by constant extrapolation of the linear wave profile.

2.5.10 Rigid Body Motion

The transfer functions for rigid body motion due to the incident waves are reported for each body for all the combinations of wave frequencies and heading angles. The roll, pitch and yaw motions are reported in radians.

The equation of motion is assembled from the calculated global matrices and transfer functions as described in the previous sections. The HydroD or Prewad specified damping and stiffness matrices will be added to the otherwise calculated matrices.

By specifying the time domain output format the motions will be reported as deterministic motions at specified phases of the incident waves with given wave amplitudes.

2.5.11 Second Order Mean Drift Forces

The second order mean drift forces due to the linear incident waves are reported both on the print file and in the Hydrodynamic Results Interface File. They are calculated by one of the following methods:

- Momentum conservation in the three horizontal degrees of freedom
- Pressure integration in all six degrees of freedom. This method will also give the mean drift forces on each individual body in a multi-body analysis.

2.5.12 Second Order Sum and Difference Frequency Results

The transfer functions for sum and difference frequencies are reported in the print file and on the Hydrodynamic Results Interface File. The following second order results are available:

- The quadratic second order force
- The second order forces on the body by an indirect calculation method
- The second order forces on the body by a direct calculation method
- The second order pressure distribution on the body (only available in the print file)
- The second order wave elevation at specified points (only available in the Wamit output file format)

2.5.13 Fluid Kinematics

The transfer functions for pressure and particle velocity in specified points in the fluid is reported both on the print file and in the Hydrodynamic Results Interface File. The fluid kinematics points are specified in the fluid domain outside the hydro model. The fluid kinematics depends on the type of hydro model:

- It is obtained from the incident undisturbed wave field if only Morison's equation is applied.
- It is obtained from the diffracted wave field if the potential theory is applied to a fixed structure.
- It is obtained from the radiated and diffracted wave field if the potential theory is applied to a floating structure.

By specifying the time domain output format the fluid kinematics will be reported as deterministic pressure and velocities at specified phases of the incident waves with given wave amplitudes.

The surface elevation η in a radiated and diffracted wave field is obtained from potential theory as

$$\eta = \frac{p}{\rho g} \quad (2.17)$$

where p is the non-dimensionalised pressure at the still water level.

2.5.14 Wave Drift Damping

The Wave Drift Damping describes the rate of change of the Mean Drift force with forward speed computed at zero speed. The sign of this rate of change is in most cases negative, meaning that this will represent a damping mechanism for the slow drift motion excited by the second-order difference frequency forces or due to the interaction of the waves with a current.

The 3x3 Wave Drift Damping matrix (surge, sway, yaw) is reported in the Hydrodynamic Results Interface File. This matrix is computed according to the methods described in Ref. /9/.

The computation of the wave drift damping requires a free surface mesh which is defined as input exactly like the free surface mesh for second-order analysis. The mesh used in the Wave Drift Damping computations does, however, not need to have a circular outer boundary.

A Morison model can not be used if Wave Drift Damping is to be computed.

The iterative equation-solver for the potential-solution can not be applied if Wave Drift Damping is computed

2.5.15 Distributed Hydrostatic Loads

The hydrostatic loads on a structural model is calculated directly on the individual finite elements of the model. It is represented on the Loads Interface Files as a real load case.

Structural Beam Models

For wet beam structural superelements the hydrostatic load case is represented as line loads on the beam finite elements and as nodal loads on nodes receiving loads from 3D Morison elements and pressure area elements. In addition, the pre-tension from Morison anchor and TLP elements are included as nodal loads in the hydrostatic load case.

The gravity component of the static load is only included as direct loads if the mass model is specified as a distributed mass model. When using other types of mass models the gravity acceleration only will be written to the Loads Interface File.

A general description of line loads on beam finite elements is included in Appendix B 3.2.

Note: Pressure Area Elements should always be defined at the end of vertical members such as the legs on a semi-submersible.

Structural Shell or Solid Models

For wet surfaces of shell and solid elements in a structural model the hydrostatic loads are represented as normal pressures. Because the hydrostatic pressure intensities are evaluated individually at the z-coordinate of each node the normal pressure on wet element sides will have a variation in the z-direction as opposed to the hydrodynamic loads which are constant over each element.

The gravity component of the static load is included by writing the acceleration of gravity to the Loads Interface File.

2.5.16 Distributed Hydrodynamic Loads

The distributed hydrodynamic loads are calculated in a body fixed coordinate system and include the following contributions:

- Exciting forces from incident waves
- Forces from wave induced motion
- Fluctuating hydrostatic pressure forces due to the body motion

The distributed forces presented in the Wadam print file are:

- Transfer functions for pressures on the panels in the hydro model ¹
- Transfer functions for forces acting at the centre of gravity for 2D Morison and dry Morison elements
- Transfer functions for nodal forces acting on nodes in the hydro model which are connected to the following Morison element types:
 - 3D Morison elements
 - Pressure area elements
 - Mooring and TLP elements
 - Point mass elements

The distributed loads transferred to the Loads Interface Files are:

- Transfer functions for normal pressures on the wet sides of shell and solid elements. The pressures are constant over the elements. These loads originate from pressures at the centroid of panels according to the mapping algorithm described in Appendix B 3.3. They include fluctuating hydrostatic pressure.

1. Not including fluctuating hydrostatic pressure.

- Transfer functions for line loads on beam elements. These loads originate from forces at the centre of gravity of 2D Morison sub-elements and dry Morison elements. The calculation of line loads on 2 node beam elements is described in Appendix B 3.2.
- Transfer functions for loads at nodes which are connected to Morison elements
- An acceleration field acting on all the nodes in the structural model
- The inertia components are only included as loads if the mass model is specified as a distributed mass model.

Wadam and the structural analysis program Sestra both employ the standard SESAM finite element library to generate a mass representation. This implies that the connection between accelerations and inertia loads is consistently handled in the two programs.

2.5.17 Load Sum Reports

Load sums are important tools to verify both the correctness of input models to Wadam and of the consistency between Wadam and subsequent structural analyses.

Wadam reports load sums on both the structural model and the hydro model in chapter 5.1 in the print file. Note that these load sums are reported with dimensions.

- Load sums for the loads transferred to the structural beam model:
 - The sum of hydrostatic loads transferred to a beam model is reported in the print file as static loads. It includes the hydrostatic forces from each Morison type of element as follows:
 - The buoyancy and pre-tension components from mooring and TLP elements are always included.
 - The gravity components are only included if the mass model is specified as a distributed mass model.
 - The sum of hydrodynamic loads acting on the beam model is reported in the print file for each incident wave frequency and wave heading. It includes the hydrodynamic forces from each Morison type of element as follows:
 - The hydrodynamic pressure components acting on beams and nodes
 - The inertia components are only included if the mass model is specified as a distributed mass model.
- Load sums for the loads transferred to the structural shell/solid model:
 - The sum of hydrostatic loads transferred to a shell/solid model is reported in the print file as static loads. It includes the buoyancy of the structure.
 - The sum of hydrodynamic pressure loads transferred to the shell and solid structural model is reported in the print file for each incident wave frequency and wave heading. It includes the part of the hydrodynamic loads actually transferred to normal pressure loads on shell and solid elements. Note that this load sum does not include inertia loads.
 - The sum of pressures and inertia loads acting on the structural model may be calculated from the Sestra data check where the accelerations transferred from Wadam are converted into inertia loads; see Section 2.5.16.
- Load sums for the hydro model:

- The sum of hydrodynamic forces acting on a panel model is reported in the print file for each incident wave frequency and heading. It includes the pressures acting at the centroid of each panel in the hydro model. Note that this load sum does not include inertia loads.

2.5.18 Sectional Loads

Wadam calculates sectional loads by integration of distributed forces on specified sides of given planes intersecting a hydro model. The frequency dependent exciting and inertia forces are included in the integration. The sectional planes are specified in the input coordinate system and must be normal to one of the main axes of the global coordinate system. A moment reference point is specified for each plane. Figure 2.28 displays a simple submerged beam model with a sectional plane $x_{inp} = 0$. The moment reference point is defined in the input coordinate system $(x_{inp}, y_{inp}, z_{inp})$.

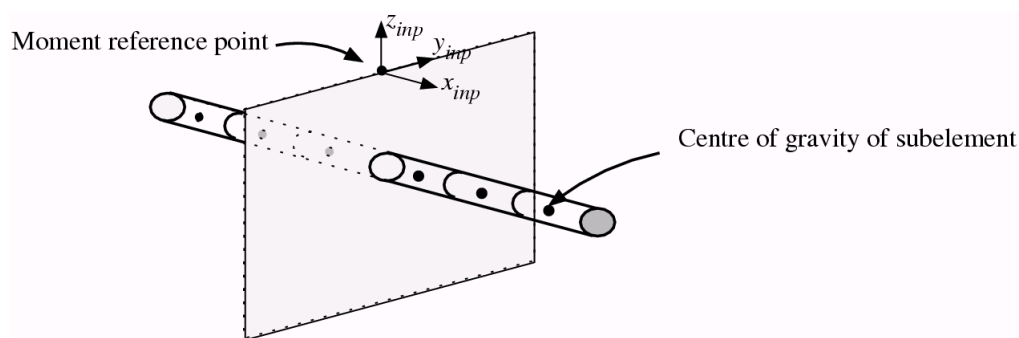


Figure 2.28 Sectional loads at a plane through $x=0$

The sectional loads are reported in the Wadam print file and on the Hydrodynamic Results Interface File as complex transfer functions.

Still water sectional loads are reported on the Wadam print file.

The sectional loads are integrated with respect to a body fixed coordinate system. The sectional load on a cut comes from the integration of $\mathbf{F} \cdot \mathbf{ma}$ over that part of the structure which is on the positive or negative side of the cut. The components of the load are in the global system. This means that for the dynamic loads the load computed by integration over the positive side and the load computed by integration over the negative side will be equal in magnitude, but have a phase difference of 180 degrees.

As an example we consider a ship cut at $x=0$ normal to the x -axis:

If integration over the positive side is specified the sectional load will be the force acting on the part of the hull with $x < 0$ from the part with $x > 0$. This means that the static bouyancy force will give a positive vertical shear force and a negative vertical bending moment. We will also find that the phase angle of the vertical bending moment in a hogging situation is close to zero for long waves.

If integration over the negative side is specified the static bouyancy force will give a positive vertical shear force and a positive vertical bending moment. The phase angle for the vertical bending moment in a long wave will be close to ± 180 degrees.

The contributions to the sectional loads from different hydro models are computed as follows:

- For Morison models the exciting and inertia forces, obtained at the centre of gravity of each Morison sub-element on the specified side of the sectional plane, are included.
- For panel models the exciting forces at the centroid of each panel are included. The inertia forces are included with respect to a centre of gravity calculated for the part of the model that is on the specified side of the sectional plane.
For panel models the sectional loads from integrating the hydrostatic pressure loads on the panel model are also reported in the print file (LIS-file).
- For dual models the forces represented at the centre of gravity of the Morison sub-elements are included. This implies that the potential pressures transferred to the Morison sub-elements according to a correspondence list are included together with the viscous forces calculated directly on the Morison element.

Note: Sectional loads calculation should be used with care when global matrices are specified directly as input to Wadam. This is because the global matrices do not provide the detailed information required to integrate distributed force contributions.

In addition to the total sectional loads it is also possible to compute and write to the Global Results Interface File (G-file) different parts of the sectional load. This includes sectional added mass matrix, sectional damping matrix, sectional body mass matrix and sectional excitation force. These quantities cannot be handled by Postresp, but they may be read into DeepC.

To compute these sectional load details a modification of the Wadam*.FEM file must be done manually: Open this file in an editor and find the card WADAMA1. (This is one of the first cards on the file.) Change the 19th number on this card from 0 to 1.

2.5.19 Roll Damping Coefficients

Wadam calculates the roll damping coefficient B_{44} by including contributions from the following hydrodynamic effects:

- Potential damping from surface wave radiation
- Linearised viscous damping from eddy-making of the bilge keel
- Linearised viscous damping from skin-friction of the hull
- Linearised viscous damping from bilge keel

The potential damping effect is included in the radiation potentials and is defined within the regular linear theory.

The linearised viscous roll damping effects from eddy-making due to the naked hull is computed based on empirical data given by Tanaka, Ref. /6/, while the damping coefficient from skin-friction and eddy-making from bilge keels are computed according to Kato, Ref. /7/. These originally non-linear viscous damping contributions are linearised in order to be included in the harmonic equations of motion.

The potential damping and the skin friction contributions are calculated from a strip model which is automatically generated from a panel model. The other two effects are calculated from information about the bilge keel.

The viscous damping coefficient is generally defined as

$$B_{44}^* = K\eta_{4_{max}}$$

In Wadam the coefficient K is calculated approximately as a function of the wave-frequency, the hull form and the bilge keel dimensions. The variable $\eta_{4_{max}}$ is the maximum expected roll angle.

When viscous roll damping is included in the equation of motion the roll angle amplitude is not known in advance rather it is a part of the solution. Therefore, the user has to estimate the maximum expected roll angle for each wave heading. The calculated transfer function for roll motion is compared with the maximum value specified for that heading. If the computed roll motion is ‘close’ to the specified angle then the roll transfer function for that value is assumed to be ‘correct’. If the difference is not acceptable then another η estimate must be made and the roll motion re-computed. Note, however, that the potential solution is independent of η . Hence the potential should be saved during the first computation and the program should be submitted with a restart option during this iteration process. If the maximum roll angle is taken from short term statistics (only one sea state) then Wadam can perform the iteration process automatically. If the maximum roll angle is taken from long term statistics then the iteration must be carried out manually.

It should be kept in mind that these coefficients are only valid within the range of tests and models used in the experiments. Extrapolation outside this range should be performed with care.

The roll damping option in Wadam also includes a linearised roll restoring coefficient in the equation of motion. The calculation of this coefficient is described in Appendix B 3.1.

Note: The Roll damping model can only be used for ship-like structures with symmetry about the XZ-plane.

Note: The computation of the bilge keel damping breaks down when the bilge keel is very small. The symptom is that the damping starts to increase when the width of the bilge keel decrease. The exact limit is case dependent, but as an indication the width of the bilge keel should not be smaller than 10cm.

2.5.20 Global drag-coefficient for roll-damping

A global coefficient for quadratic damping of the roll-motion can be given as user-specified input. This makes it possible to use results from model-tests directly. The quadratic damping is linearized by stochastic linearization. This way, model tests performed independent of sea-states can be used in connection with any given sea-state valid for the actual location of the structure. The formulation of the method of stochastic linearization is explained in Appendix B 3.5.

Note: This kind of damping should not be combined with any other types of damping effects, except the potential damping. In other words, the old roll-damping model, the Morison model or user-specified linear damping are not to be combined with the global torsional drag.

2.6 Calculation Methods

2.6.1 Calculation of Wave Loads from Potential Theory

The potential theory as described in Newman, Ref. /1/, is applied in Wadam to calculate first order radiation and diffraction effects on large volume structures. The actual implementation is based on Wamit¹, Ref. /2/, which uses a 3D panel method to evaluate velocity potentials and hydrodynamic coefficients.

This implementation can be used for infinite and finite water depths and both single bodies and multiple interacting bodies can be analysed. The flow is assumed to be ideal and time-harmonic. The free surface condition is linearised for the first order potential theory while the non-linear free surface condition is imposed for the second order potential theory computation. The radiation and diffraction velocity potentials on the wet part of the body surface are determined from the solution of an integral equation obtained by using Green's theorem with the free surface source potentials as the Green's functions. The source strengths are evaluated based on the source distribution method using the same source potentials.

The integral equation is discretised into a set of algebraic equations by approximating the body surface with a number of plane quadrilateral panels. The source strengths are assumed to be constant over each panel. Two, one or no planes of symmetry of the body geometry may be present. The solution of the algebraic equation system provides the strength of the sources on the panels. The equation system, which is complex and indefinite, may be solved by a direct LU factorisation method or by an iterative method.

Boundary Value Problem Formulation

The assumption of potential flow allows defining the velocity flow as the gradient of the velocity potential Φ that satisfies the Laplace equation

$$\nabla^2 \Phi = 0 \quad (2.18)$$

in the fluid domain. The harmonic time dependence allows defining a complex velocity potential ϕ related to Φ by

$$\Phi = \text{Re}(\phi e^{i\omega t}) \quad (2.19)$$

where ω is the frequency of the incident wave and t is time. The associated boundary-value problem will be expressed in terms of the complex velocity potential ϕ with the understanding that the product of all complex quantities with the factor $e^{i\omega t}$ applies. The linearised form of the free-surface condition is

$$\phi_z - K\phi = 0 \quad z = 0 \quad (2.20)$$

where $K = \omega^2/g$ and g is the acceleration of gravity. The velocity potential of the incident wave is defined by

$$\phi_0 = \frac{igA}{\omega} \frac{\cosh(kz + H)}{\cosh kH} e^{-k(x \cos \beta + y \sin \beta)} \quad (2.21)$$

where the wave number k is the real root of the dispersion relation and β is the angle between the direction of propagation of the incident wave and the positive x-axis.

1. Wamit is a computer program developed by Massachusetts Institute of Technology.

Linearisation of the problem permits decomposition of the velocity potential ϕ into the radiation and diffraction components:

$$\phi = \phi_R + \phi_D \quad (2.22)$$

$$\phi_R = i\omega \sum_{j=1,6} \xi_j \phi_j \quad (2.23)$$

$$\phi_R = \phi_0 + \phi_7 \quad (2.24)$$

The constants ξ_j denote the complex amplitudes of the body oscillatory motion in its six rigid-body degrees of freedom and ϕ_j the corresponding unit-amplitude radiation potentials. The velocity potential ϕ_7 represents the disturbance of the incident wave by the body fixed at its undisturbed position. The total diffraction potential ϕ_D denotes the sum of ϕ_7 and the incident wave potential.

On the undisturbed position of the body boundary the radiation and diffraction potentials are subject to the conditions

$$\phi_{jn} = n_j \quad (2.25)$$

$$\phi_{Dn} = 0$$

where $(n_1, n_2, n_3) = \mathbf{n}$ and $(n_4, n_5, n_6) = \mathbf{r} \times \mathbf{n}$, $\mathbf{r} = (x, y, z)$. The unit vector \mathbf{n} is normal to the body boundary and points out of the fluid domain. The boundary value problem must be supplemented by a condition of outgoing waves applied to the velocity potentials $\phi_j, j=1, \dots, 7$.

2.6.2 Calculation of Wave Loads from Second Order Potential Theory

The second order theory applied in Wadam is described in Ref. /3/ and Ref. /4/. Wadam calculates sum- and difference-frequency components of the second order forces, moments and rigid body motions (Quadratic Transfer Functions) in the presence of bi-chromatic and bi-directional waves.

2.6.3 Removal of Irregular Frequencies

Wadam provides an option to remove the irregular frequencies from the radiation-diffraction solution. This method is based on a modified integral equation obtained by including a panel model of the internal water plane. The panel model of the water plane is automatically created by Wadam.

2.6.4 Morison's Equation

Morison's equation is used in Wadam to calculate contributions to the equation of motion Equation (2.30) and to calculate the detailed forces \mathbf{F} acting on 2D Morison elements and 3D Morison elements. The form of Morison's equation used in this calculation is given in Equation (2.26) with the effect of relative motion included.

$$\mathbf{F} = \omega^2 (\mathbf{M} + \rho V_M \mathbf{C}_a) \xi - \omega^2 \rho V_M (\mathbf{C}_a + \mathbf{I}) \mathbf{x} + i\omega \mathbf{B} (\mathbf{x} - \xi) + \mathbf{f}_c + \mathbf{f}_g + \mathbf{f}_b \quad (2.26)$$

Where:

ω	Incident wave frequency
\mathbf{M}	3 by 3 diagonal mass inertia matrix
\mathbf{C}_a	3 by 3 diagonal added mass coefficient matrix
\mathbf{I}	3 by 3 identity matrix
ρ	Density of water
V_M	Displaced volume of the Morison element
\mathbf{B}	Linearised viscous damping matrix expressed as

$$\mathbf{B} = \frac{1}{2}\rho\sigma\mathbf{C}_D \cdot \frac{8}{3\pi}V_{max}$$

\mathbf{C}_D	3 by 3 diagonal drag coefficient matrix
σ	Projected area of the Morison element
\mathbf{x}	Complex amplitude of the incident wave field
ξ	Complex amplitude of the motion
\mathbf{f}_c	Fluctuating hydrostatic restoring force representing the first order restoring contributions integrated in the equation of motion
\mathbf{f}_g	Fluctuating gravity force representing the acceleration of gravity calculated in a coordinate system fixed with the Morison model
\mathbf{f}_b	Fluctuating buoyancy force calculated in a coordinate system fixed with the Morison model

The linearised viscous damping matrix \mathbf{B} in Morison's equation (Equation (2.26)) is obtained from linearisation of the general viscous drag force \mathbf{F}_D expressed as

$$\mathbf{F}_D = \frac{1}{2}\rho\sigma\mathbf{C}_D(\mathbf{v} - \dot{\mathbf{x}})|\mathbf{v} - \dot{\mathbf{x}}| = \frac{1}{2}\rho\sigma\mathbf{C}_D\frac{8}{3\pi}V_{max}(\mathbf{v} - \dot{\mathbf{x}}) = \mathbf{B}(\mathbf{v} - \dot{\mathbf{x}}) \quad (2.27)$$

The term

$$\frac{8}{3\pi}V_{max} \quad (2.28)$$

is a standard result obtained by assuming equal work done at resonance by the non-linearised and the equivalent linear damping term. V_{max} is a linearising velocity amplitude specified as input to Wadam. The one and same V_{max} is applied in the linearised drag force calculation for all the motion modes and for all the incident wave frequencies.

For deterministic analysis of fixed structures Morison's equation is expressed on the form

$$\mathbf{F} = \rho V_M (1 + C_a) \dot{\mathbf{v}} + \frac{1}{2} \rho \sigma C_D \mathbf{v} |\mathbf{v}| \quad (2.29)$$

where time independent current may be included in \mathbf{v} .

The contributions from Morison elements are calculated in the particular element local coordinate systems. The contributions are transformed into the body coordinate system prior to the assembling of rigid body quantities.

The wave kinematics in Equation (2.26) and Equation (2.29) may be taken from the incident wave field as described in Section 2.4.1. Optionally the wave kinematics may also be taken from the diffracted wave field calculated from potential theory.

2.6.5 The Equation of Motion

The equation of motion in Wadam is established for harmonic motion of rigid body systems expressed in the global coordinate system.

By applying Newtons law and including the added mass, damping and exciting force contributions acting on the panel and Morison parts of a hydro model the complex 6 by 1 motion vector $\mathbf{X}(\omega, \beta)$ can be found from the equation of motion

$$[-\omega^2 (\mathbf{M} + \mathbf{A}(\omega)) + i\omega (\mathbf{B}(\omega)_p + \mathbf{B}_v) + \mathbf{C} + \mathbf{C}_e] \mathbf{X}(\omega, \beta) = \mathbf{F}(\omega, \beta) \quad (2.30)$$

where

\mathbf{M}	represents the 6 by 6 body inertia matrix
$\mathbf{A}(\omega)$	represents the 6 by 6 frequency dependent added mass matrix
$\mathbf{B}(\omega)_p$	represents the 6 by 6 frequency dependent potential damping matrix
\mathbf{B}_v	represents the 6 by 6 linearised viscous damping matrix
\mathbf{C}	represents the 6 by 6 hydrostatic restoring matrix
\mathbf{C}_e	represents the 6 by 6 external restoring matrix
$\mathbf{F}(\omega, \beta)$	is the 6 by 1 complex exciting force vector for frequency ω and incident wave heading angle β

The eigenvalues λ and eigenvectors Φ of the rigid body system is obtained for a given incident wave frequency by solving the eigenvalue problem

$$[-\lambda (\mathbf{M} + \mathbf{A}(\omega)) + \mathbf{C}] \Phi = \mathbf{0} \quad (2.31)$$

The natural periods of the rigid body system at a given incident wave frequency is expressed as

$$T = \frac{2\pi}{\sqrt{\lambda}} \quad (2.32)$$

2.6.6 Calculation of Tank Pressures

Wadam calculates by an approximate algorithm the harmonic pressure load on the wet finite element sides in internal tanks.

The loads are calculated by applying a hydrostatic pressure distribution in the accelerated reference frame fixed with respect to the tank. The pressure load is divided in a constant and an oscillating part and represented by separate load cases. The pressure gradient is given by

$$\nabla p = \rho(\mathbf{g} - \mathbf{a}) \quad (2.33)$$

where \mathbf{g} is the acceleration due to gravity, \mathbf{a} is the complex acceleration of the mid-point of the tank and ρ is the mass density of water. The gravity vector described in a coordinate system oscillating with the body has a constant and an oscillating part. Accordingly, the pressure gradient described in the body-fixed coordinate system has a constant part $\rho\mathbf{g}$ and an oscillating (dynamic) or fluctuating part:

$$\nabla p_f = \rho(\mathbf{g}_f - \mathbf{a}) \quad (2.34)$$

where \mathbf{g}_f is the fluctuating part of gravity. A detailed outlining of the tank pressure calculation is included in Appendix B 3.4.

The tanks are modelled by assigning the HYDRO-PRESSURE load to those surfaces which are the walls of the tanks. The number of the HYDRO-PRESSURE load will be the number of the tank. This numbering must start at 2 since the HYDRO-PRESSURE with load case 1 is the external pressure. All surfaces with the same HYDRO-PRESSURE number will be assumed by Wadam to be the same tank.

The filling of the tanks is controlled by assigning the hydro-pressure load only to the wet part of the tank walls. No sloshing effects are included, i.e. the fluid is assumed to move like a rigid body.

Note: The mass of the tank fluid must be included in the mass model for Wadam. In the structural (FE) model the inertia forces from the tank fluid are represented as pressure loads and should therefore not be included in the structural mass.

2.6.7 Pressure Loads up to Free Surface

Wadam may be used to extrapolate to the free surface the panel pressures calculated by first order potential theory (up to the still water level). Note that this implies that the dry finite elements below the still water level will receive no loads when the free surface is below the still water level as shown in Figure 2.29. A constant extrapolation, also called stretching, of pressures above the still water level is applied. This pressure extrapolation option depends on the amplitudes of the waves and hence this option is only available when results in the time output format is specified.

Note that the pressures only will be received by the finite elements above the still water level defined as wet in the structural model.

For a panel model this option is available for both fixed and floating structures, but the intersection of the structure and the free surface must be vertical. If a Morison model is included the option is only available for fixed structures.

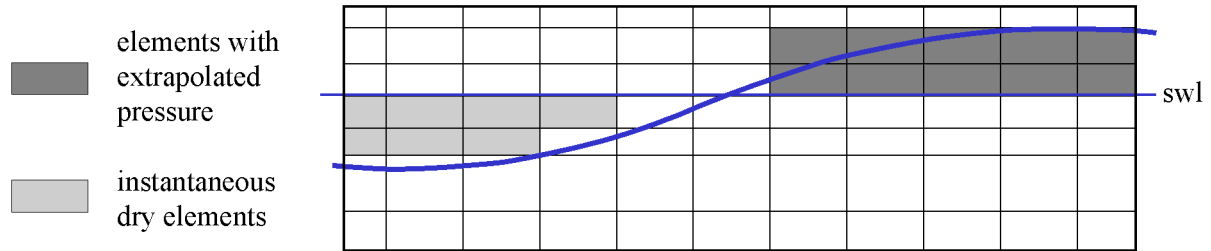


Figure 2.29 Constant extrapolation of panel pressures to the free surface

2.6.8 Reduced pressure up to the free surface

One of the "stretching" methods is the approach referred to as reduced loads. This is a kind of "mean-stretching" applied in frequency domain.

In this procedure, the loads are multiplied with a linearly attenuated reduction factor in a zone between some given distance below and above the still-water level. Below the still-water level, the reduction factor is applied directly. Above the still-water level, the reduction factor is applied to the loads extrapolated from just below (ideally at) the still-water level.

The loads are attenuated linearly down to zero as the level increases from still-water level and up to a given amplitude. This amplitude is typically an extreme-level of the waves (eg a 20 year level). For an amplitude A the pressure load on a panel with centroid at level z_c above the still-water level z_w are then:

$$P_R = wP_0; \quad z_w \leq z_c \leq A \quad (2.35)$$

where P_0 is the pressure at the panel-centroid nearest to still-water level approximately vertically below the panel with centroid at z_c and w is the linear attenuation factor defined by

$$w = \frac{A - (z_c - z_w)}{2A} \quad (2.36)$$

The reduction is continued down below the still-water level, but is then applied to the pressure at the panel - centroid:

$$P_R = wP(z_c); \quad A \leq (z_c - z_w) < 0 \quad (2.37)$$

where $P(z_c)$ is the pressure at the panel-centroid at z_c . $P(z_c)$ and P_0 are the standard pressure-calculations from the boundary value problem bounded by the still-water level.

2.7 The Save-Restart System

The save-restart option in Wadam provides a mechanism to store potentials from the solution of the radiation and diffraction problem from one Wadam run to the next. Hence, for a given model the radiation and diffraction potentials for combinations of incident wave frequencies and heading angles need only be calculated once.

The save-restart file may be viewed as a database for the calculated potentials. That is, potentials for different combinations of frequencies and heading angles may be appended to the save-restart file from a sequence of runs. Furthermore, Wadam may extract potentials for a subset of the frequencies and heading angles stored on the file.

If the model is changed the save-restart database (Wadam.RSQ) must be deleted. Otherwise Wadam will not run. Notice, however, that when Wadam is executed from HydroD this application allows for management of multiple restart databases.

3 USER'S GUIDE TO WADAM

This chapter describes how to use Wadam to analyse typical hydrodynamic problems involving fixed, floating and tethered structures. Simple tutorial examples as well as more real life engineering problems are presented. Some practical modelling guidance is also provided.

The examples cover the most common Wadam applications. They do not cover all program features or all ways in which the program may be used.

Section 3.1 describes the following two simple examples:

- Motion response analysis of a floating box
- Motion response analysis of a tethered floating box with transfer of loads to a shell finite element model of the box

For the simple examples of Section 3.1 descriptions are given together with the appropriate input commands for Prewad. The preprocessor inputs required for establishing the models are included in Appendix A.

Section 3.2 describes three engineering application examples:

- Motion response analysis of a TLP with transfer of loads to a shell finite element model of the TLP hull and deck
- Motion response analysis of a semi-submersible platform with transfer of loads to a 3D beam model of the pontoons, columns, braces and deck
- Motion response analysis of a ship hull

3.1 Simple Examples

3.1.1 Motion Response of Floating Box

The panel model representing the box is shown in Figure 3.1 (see the input in Appendix A 1). The box dimensions are 90 by 90 metres with a draft of 40 metres. The box is freely floating. Since the box is double-symmetric the panel model need only represent the part of the box in the first quadrant. The arrows in the figure pointing from the fluid onto the panel model defines the wet surface of the model. See also the definition of wet surfaces in Section 2.1.2.

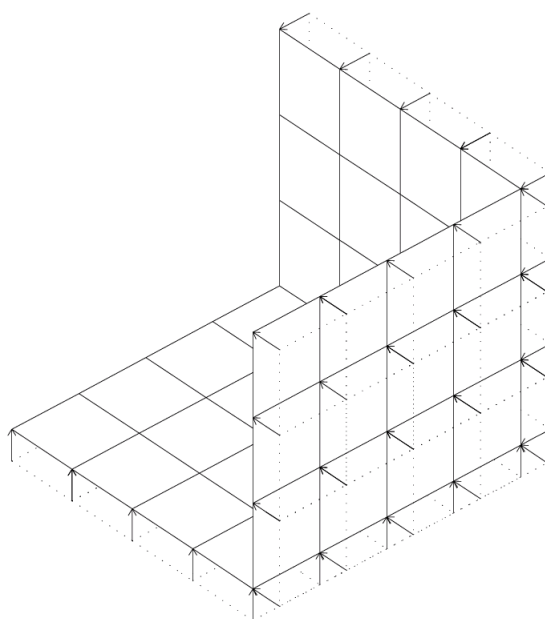


Figure 3.1 Prefem plot of the panel model representing a quarter of the box. Notice the arrows showing the direction of the HYDRO-PRESSURE load.

This example is a plain global analysis for a panel model. The Wizard for setting up the input for such an analysis in HydroD is shown in Figure 3.2. Figure 3.3 shows the box model as it may be viewed in HydroD with the HYDRO-PRESSURE load displayed. This picture shows a finer discretisation than the Prefem model.

The Prewad input for motion response analysis of the freely floating box is presented below. Bold font highlights the commands as opposed to comments. If this input is found in a file with name Prewad_in.jnl then start Prewad *and* Wadam from Manager as illustrated in Figure 3.4.

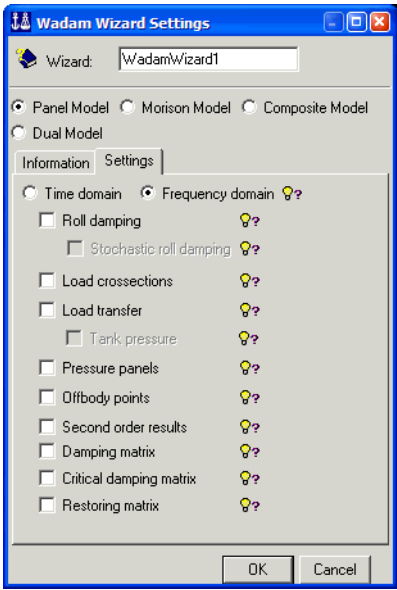


Figure 3.2 HydroD wizard for the floating box example.

3 Mar 2004 09:08
floating box

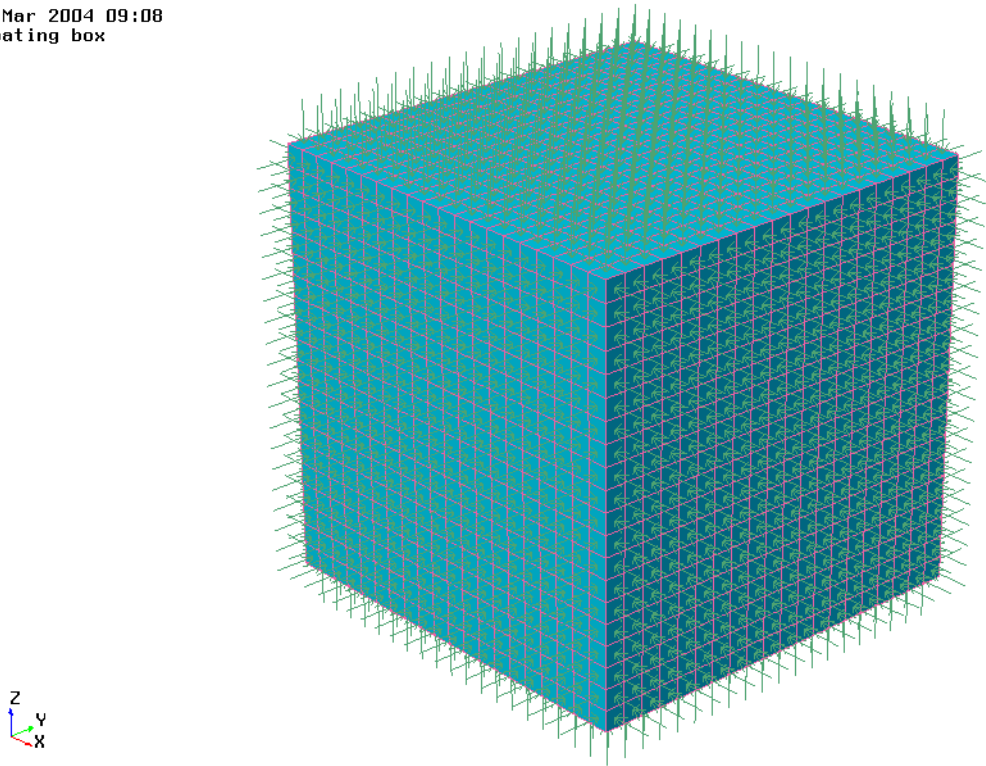


Figure 3.3 Display of HYDRO-PRESSURE load in HydroD.

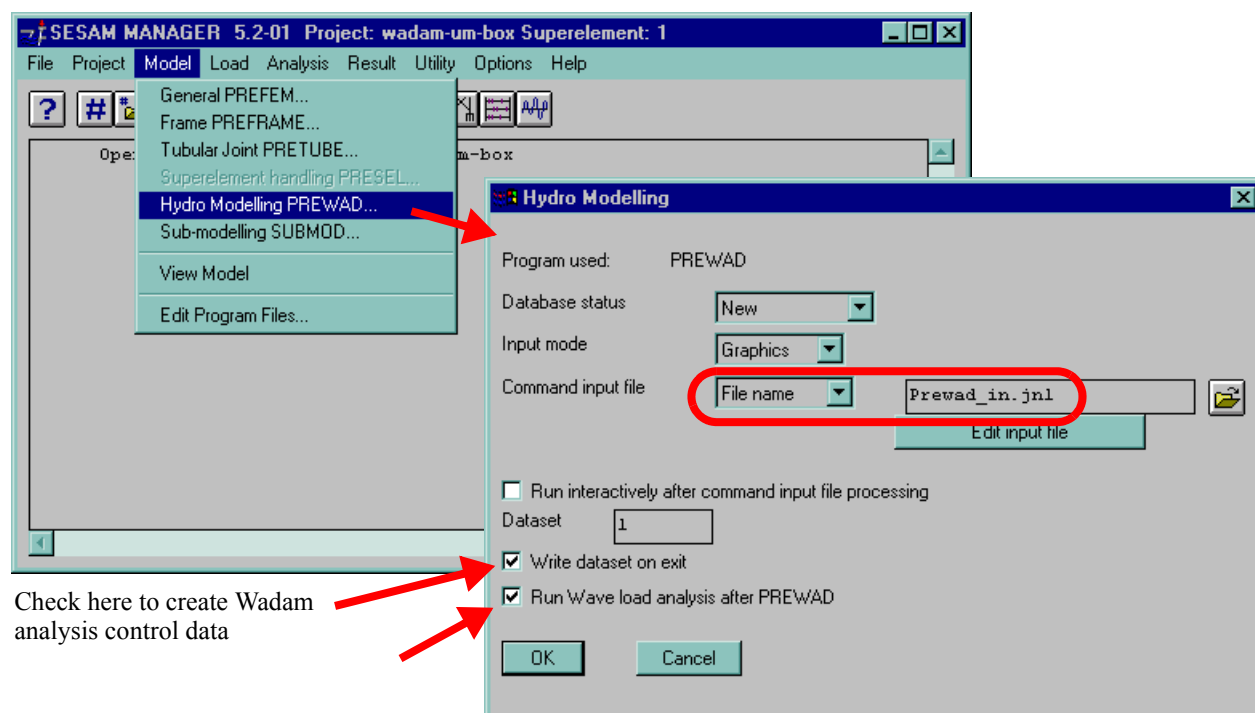


Figure 3.4 Starting Prewad and Wadam from SESAM Manager.

```

%
% Define general information about the model
%
DEFINE
  GENERAL
%
% Specify the analysis models to be used for,
%       'mass model'   - Global Mass Matrix
%       'panel model'  - Superelement 1
%       'Morison model' - Not needed in this example
%
% For the 'user-specified' global mass matrix give
%       - coordinates of c.g. in input coord. syst.
%       - radii of gyration about global x- y- z-axes
%       - products of inertia about global x- y- z-axes
%       - total mass of box
%
  ANALYSIS-MODELS
    MASS-MODEL      GLOBAL-MASS-MATRIX
                      USER-SPECIFIED
                        0.   0.  29.38
                        33.04 32.09 32.92
                        0.   0.   0.
                        332.1E06
    SINK-SOURCE  1
  END
%

```



```
% Specify the constants      - characteristic length (90. metres)
%                             - mass density of water (1025. Kg * / m**3)
%                             - accn. due to gravity (9.81 m / sec**2)
%                             - linearising velocity (not relevant here)
%                             - z-location of input coord. system (-40.metres)
%                             - 3 dummy values = 0. or > 0.
%
```

CONSTANTS

```
90. 1025. 9.81 0. -40. 0. 0. 0.
```

```
% Specify the execution directives:
%
% - analysis type is global motion response
% - calculation of horizontal drift forces
% - the model is a floating structure with
%   2-planes of symmetry YZ-XZ
%   yes, calculate eigenvalues for motions
% - for potential solution (panel model)
%   use an iterative equation solution and
%   do not remove the irregular frequencies
% - store motions results on file for further
%   postprocessing in e.g. Postresp
%
```

EXECUTION-DIRECTIVES

```
ANALYSIS-TYPE GLOBAL-RESPONSE
HORIZONTAL-DRIFT YES
FIXED-FLOATING
    FLOATING YZ-XZ-PLANE
    YES
POTENTIAL-THEORY
    EQUATION-SOLUTION
    ITERATION
    IRREGULAR-FREQUENCY
    NO-REMOVAL
END
RESULT-FILES
    GLOBAL-RESPONSE SIF
END
END
```

```
% Give 3 lines of text to appear in output listing from Wadam
%
```

TEXT

```
' WADAM USER MANUAL - EXAMPLE 3.1A'
' Floating Box 90 x 90 metres and Draft 40 metres'
' Global motions response analysis'
```

```
END
```

```
% Define the environmental data to be used for the motions response
%
% - water depth (100 metres)
% - wave-directions (0. and 45. degrees)
% - wave periods (8. 10. 12. secs) with finite water depth
%
```

```
ENVIRONMENT
    WATER-DEPTH      100.
    WAVE-DIRECTION
        0.
        45.
    END
    WAVE-PERIOD
        8. FINITE
        10. FINITE
        12. FINITE
    END
END
%
% This file contains input data for Wadam.
```

3.1.2 Motion Response of Floating Box Tethered to the Sea-Bed

This section describe the motion response analysis of a tethered box with transfer of loads to a shell finite element model of the same box.

The hydro model used in this example includes the panel model shown in Figure 3.1 and a Morison model consisting of the tether nodes only. The Preframe input defining this Morison model is given in Appendix A 2.1. (Today this would be done in Patran-pre or Genie.)

The structural model receiving pressure loads is assembled in Presel. The structure is shown in Figure 3.5. The springs correspond to the tethers included in the hydro model. The Prefem and Presel inputs for creating the structural model are given in Appendix A 2.2 and Appendix A 2.3 respectively.

The Prewad input for this analysis is presented below. Note that compared with the commands for the freely floating box this Prewad input includes a structural model definition and transfer of loads to a composite model; see Section 2.1.5. Tether element characteristics are also specified and connected to nodes in the Morison model. If this input is found in a file with name Prewad_in.jnl then start Prewad *and* Wadam from Manager as illustrated in Figure 3.4.

The HydroD wizard for this example is shown in Figure 3.6. Since we now have a Morison model included we select 'Composite model' and we tick off for inclusion of TLP elements.

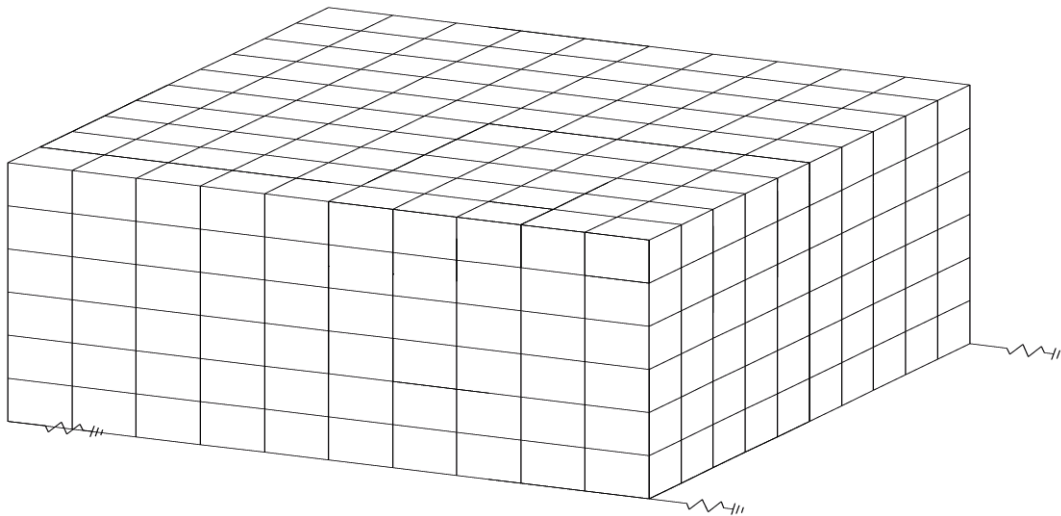


Figure 3.5 Structural model assembly of simple box model tethered to the sea-bed

```
%
% Define general information about the model
%
DEFINE
  GENERAL
%
% Specify the analysis models to be used for:
%   'mass model' - Global mass-matrix generated from 'structural model'
%   'panel model' - Superelement No. 1    (1/4 Box)
%   'Morison model' - Superelement No. 2    (Tethers)
%   'structural model' - Superelement No. 21 (Box (3) + Tethers (2))
%
% The 'Structural model' comprises:
%
%                               T21          T21 created by Presel
%                               !            T3 models 1/4 of Box
%                               !            T2 models the 4 Tethers
%
%                               _____
%                               !      !      !      !      !
%                               T3     T3     T3     T3     T2
%
% Note :   Structural model is also used as mass model
%          No mass is generated for the Tethers
%
%
%                               ANALYSIS-MODELS
%                               MASS-MODEL  GLOBAL-MASS-MATRIX  GENERATE 21
%                               STRUCTURAL-MODEL 21
%                               MORISON-MODEL 2
%                               SINK-SOURCE 1
%
%                               END
%
```

```

% Specify the constants - characteristic length (metres)
% - mass density of water (kg/m**3)
% - accn. due to gravity (m/sec**2)
% - linearising velocity (not relevant here)
% - z-location of input coord. system (metres)
% - 3 dummy values = 0. or > 0.
%
      CONSTANTS
      90. 1025. 9.81 0. -40. 0. 0. 0.

% Specify the execution directives
% - computed tolerances
% - analysis type global motion response
% - calculation of drift forces
% - model is a floating structure with
%     2-planes of symmetry YZ-XZ
%     and, YES, calculate eigenvalues for rigid body
%     degrees of freedom
% - for potential solution (panel model)
%     use an iterative solution
% - do not remove irregular frequencies from solution
% - normal amount of output in print file
% - store motions results on file and
%     generate Loads interface file where
%     structural model is composite i.e.
%     shell + beam (in Morison superelement)
%     and, YES, store hydrostatic loadcase as
%     1st loadcase
%
      EXECUTION-DIRECTIVES
      TOLERANCES
      COMPUTED-TOLERANCES 1.0 1.0 0.1 0.1
      END
      ANALYSIS-TYPE STRUCTURAL-LOADS
      HORISONTAL-DRIFT YES
      FIXED-FLOATING
      FLOATING YZ-XZ-PLANE
      YES
      POTENTIAL-THEORY
      EQUATION-SOLUTION ITERATION
      IRREGULAR-FREQUENCY NO-REMOVAL
      END
      PRINT-SWITCH
      NORMAL
      RESULT-FILES
      GLOBAL-RESPONSE SIF
      STRUCTURAL-LOADS COMPOSITE-STR-MODEL YES
      LOAD-TRANSFER-OPTION
      FILE-FORMAT FORMATTED
      OFFSET-IN-LOAD-CASE-NUMBERS AUTO
      END
      END

```

```

                                END
%
TEXT
  ' WADAM USER MANUAL  -  EXAMPLE 3.1B '
  ' Tethered Floating Box 90 x 90 metres and Draft 40 metres '
  ' Global motions response analysis with transfer of loads '
END
%
% Define the environmental data to be used for the motions response
%   - water depth (metres)
%   - wave-directions (degrees)
%   - wave periods, finite or infinite water depth
%
ENVIRONMENT
  WATER-DEPTH      100.
  WAVE-DIRECTION    0.   45.  END
  WAVE-PERIOD      8.  FINITE 10.  FINITE 12.  FINITE  END
END
%
% Define the input data for the 4-tethers
%   - element no.s and nodes no.s to which they attach
%   - el no.1 to node no. 1, el no.2 to node no.2, etc.
%
ELEMENT
  TLP-MOORING-ELEMENT  1  1  2  2  3  3  4  4
  END
END
%
% Define section types, one type for each different set of properties,
% in this case all tethers have the same properties
%
%   - length (metres)
%   - pre-tension (N)
%   - elastic stiffness (N/metre)
%   - platform offset in x-direction (metres)
%   - platform offset in y-direction (metres)
%
HYDRODYNAMIC-PROPERTY
  SECTION 101
    TLP-MOORING-ELEMENT  965.  9.59E7  2.0E7  20. 20.
  END
%
% Connect section type no.101 to each of the four tethers
%
CONNECT
  101  1  2  3  4  END
  END
END
%
% This file contains input data for Wadam.

```

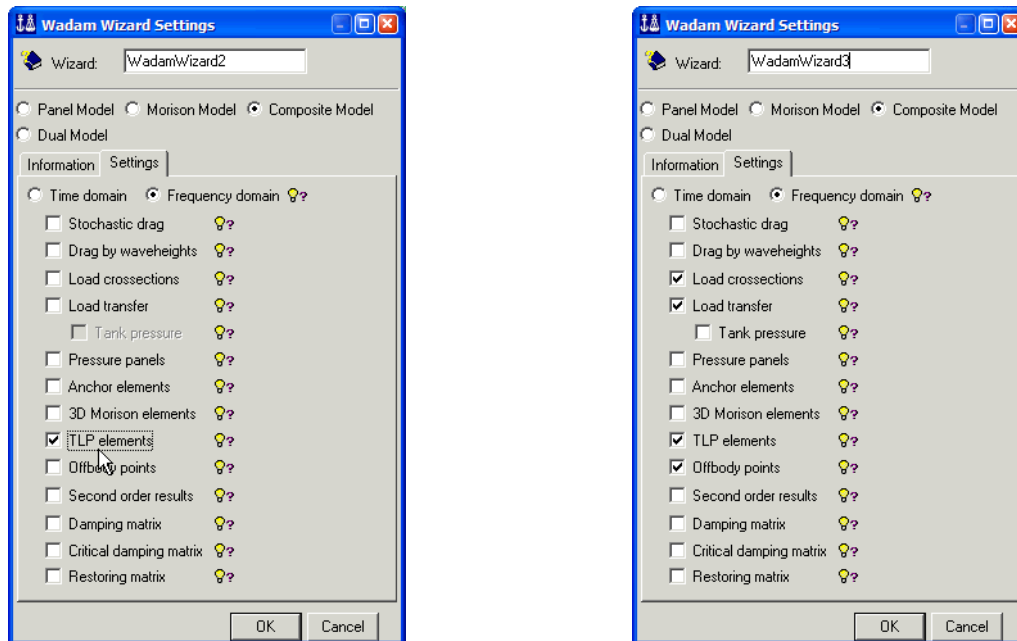


Figure 3.6 HydroD wizard for the tethered box example (left) and the TLP example in Section 3.2 (right).

3.2 Engineering Application Examples

This section describes how Wadam may be applied for typical engineering problems. The examples have been selected to demonstrate the main features of Wadam. They do not cover all options in the program. The text for each example explains the options used in that specific example only.

The panel models shown in this section may be used as guidance during the modelling phase. It is however important to create a panel model suitable for the type of analysis to be performed. A panel model that is suitable for global response analysis is not necessarily acceptable for other types of analyses. This remark is equally important for the structural model.

Section 3.2.1 through Section 3.2.3 show typical steps in the wave analysis of a tension leg platform (TLP) type of structure and covers, in principle, all necessary analyses for calculation of first order wave loads on the TLP. Section 3.2.4 and Section 3.2.5 cover typical wave load analysis for semi-submersible platforms and ships. An overview of the various analysis types discussed in this chapter is included below.

- **Global response calculations for a TLP; see Section 3.2.1**

This analysis covers several aspects that are important for a TLP:

- Rigid body motions are calculated for all six degrees of freedom. These motions may be used to calculate displacements, velocities and accelerations for specified points in the structure. Such calculations are performed with the statistical postprocessor Postresp.
- Constant drift forces are calculated. They may be used to find the maximum offset positions by external programs.

- Sectional forces are calculated for four sections. There is one vertical section in the centre of the platform and one close to the columns. The other horizontal sections are just above the pontoons and below the topsides. The wave periods and headings that give maximum response in the structure are selected on basis of these forces. It may, however, be difficult to select the worst waves only on the basis of sectional forces. The use of simplified structural analysis may also be a valuable help for selection of waves for a more detailed global analysis.
- Wave kinematics is calculated for points around the columns. These are used for calculation of the wave up-welling around the columns and subsequent air gap calculations.

Potential theory is used for all the wave periods.

- **Load transfer to a TLP shell structural model; see Section 3.2.2**

This analysis shows how the loads calculated in Wadam are transferred to a structural shell model. The ultimate limit state (ULS) capacity of the hull is checked in a subsequent structural analysis. All wave periods and headings selected in the global response calculation in Section 3.2.1 are combined with static load cases in the capacity check. The transferred loads include hydrodynamic pressure loads, inertia loads and tether reaction forces due to the rigid body motions. Hydrostatic loads are not transferred.

- **Load transfer to a TLP beam element model; see Section 3.2.3**

This is a typical fatigue analysis of the topsides where Wadam is used to calculate wave loads for many wave periods and headings. Due to the large number of load cases from waves a simplified model of the hull is used for the structural analysis. This model is calibrated against the shell structural model above. The transferred loads include line loads from hydrodynamic pressures, inertia loads and tether reaction forces due to the rigid body motions. Hydrostatic loads are not transferred. Potential theory is used for all wave periods.

- **Global response calculations for a dual model of a semi submersible; see Section 3.2.4**

This analysis is basically equal to the analysis described in Section 3.2.1 except that it is only used for selection of wave periods and headings. These are used in a subsequent structural analysis. Four similar sections are used for sectional load calculation. One vertical section in the centre of the platform and one close to the columns. One horizontal section is just above the pontoons and the other below the topsides. Potential theory is used for low wave periods while Morison's equation is used for higher wave periods (wavelengths longer than 600 m). Morison's equation is used in order to include viscous damping for the heave eigenperiod of 21.5 seconds.

- **Global response calculations for a ship; see Section 3.2.5**

This analysis is used for two different purposes:

- Sectional forces are calculated for several sections along the ship. As the ship, in principle, is equal to a beam with loads sectional forces may be used directly for dimensioning purposes within certain limits. Combinations of the sectional force components are used to calculate stresses in various positions of the ship. It should however be remembered that this is a simplification. Structural analysis should be used for more detailed stress calculations. The sectional forces combination is performed in the statistical postprocessor Postresp.
- Based on the global responses acceleration components and combined accelerations in specified points may be calculated in Postresp. This is of less importance for the tanker used in this example but may be important for other types of ships or barges transporting heavy equipment.

For both alternatives the roll response is of major importance. Non-linear roll damping and restoring are therefore included according to a linearising procedure. Potential theory is used for all wave periods. Forward speed is not allowed in Wadam and is consequently not included.

The different steps in the analyses are described in the following sections. A short description of each analysis including examples of some analysis steps is presented. An extensive set of examples is enclosed in Appendix A.

3.2.1 TLP Global Response Analysis

This example shows the use of Wadam in a typical global response analysis of a TLP. The analysis is mainly used for selection of wave periods and headings to be used in the analysis described in Section 3.2. Potential theory is used for all wave periods. The following calculations are performed in Wadam for this analysis. The first two points are automatically calculated while the rest is chosen for this analysis.

- Hydrostatic calculation in which both the hydrostatic and inertial properties for the structure are calculated
- Calculation of hydrodynamic exciting forces, added mass, damping and global motion response for the TLP
- Eigenvalue calculations for rigid body motions. One set of eigenvalues is calculated for each wave period.
- Sectional forces in specified sections. These are used for selection of waves to be used in a structural analysis.
- Calculation of constant drift forces and moments including the effect of motion. These are used in a succeeding analysis where the maximum offsets for the TLP are calculated.
- Calculation of fluid kinematics in specified points used for air gap and wave up welling analyses. The fluid kinematics include the effect of radiation and reflection of waves from the TLP.

Preparation for this analysis in Wadam consists of the following steps:

- Creation of the panel model in Patran-Pre or Prefem. Symmetry of the structure is used and only one quarter of the TLP is modelled.
- Creation of beam elements for the Morison model in Patran-Pre or Genie
- Transfer of Input Interface Files to the directory where the Wadam analysis is performed
- Definition of execution directives, additional elements, environmental properties, etc. in Prewad

A Morison model is used for inclusion of mass. The tether stiffness is, as required by Wadam, connected to elements in the Morison model.

The TLP considered is a typical double symmetric structure with rectangular pontoons and circular columns. All tethers, three in each column, are connected to the TLP in the column bottom. Tether pre-tension is equal for all tethers. A sketch of the TLP is shown in Figure 3.7.

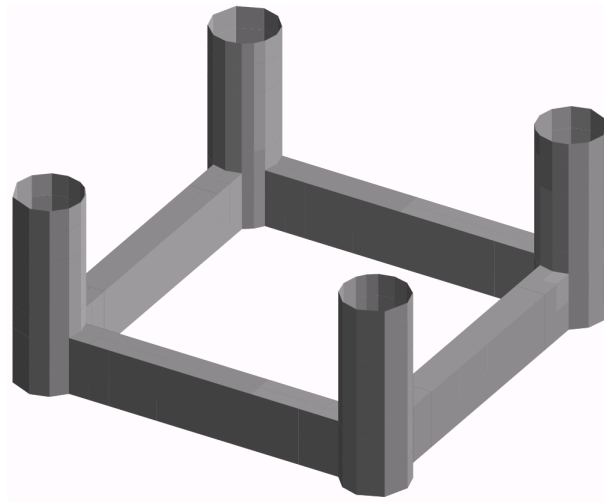


Figure 3.7 TLP geometry

Panel Model

The basic part of the panel model for the TLP is shown in Figure 3.8. Since the TLP is double symmetric only one quarter of the panel model is modelled. The remaining parts of the model are generated in Wadam by the yz-xz symmetry option.

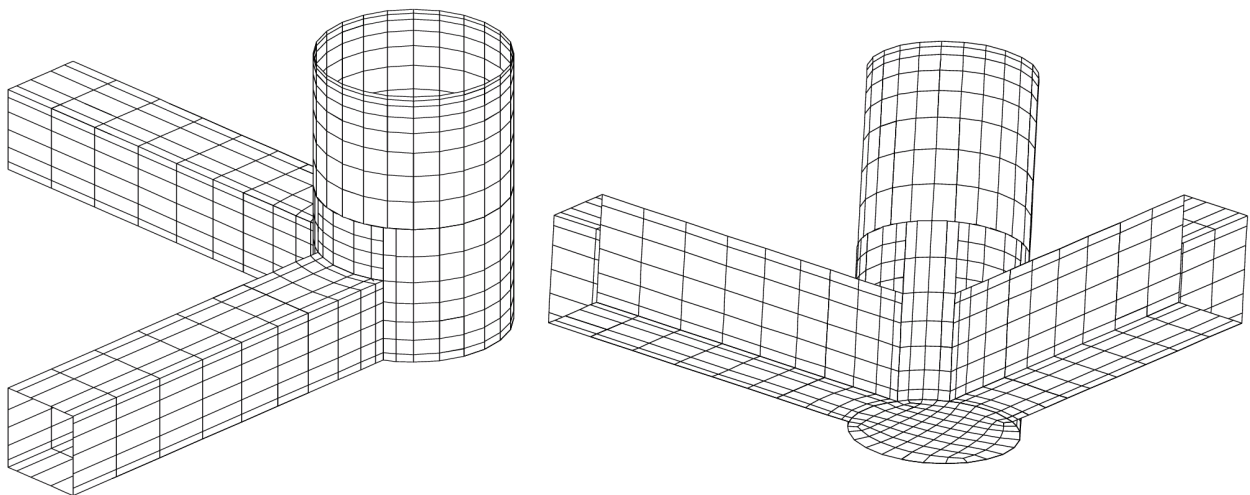


Figure 3.8 Basic part of the TLP panel model from two view points

The basic part of the panel model is modelled as one first level superelement in Patran-Pre or Prefem. It is required that it is modelled in quadrant one, that is with $x, y \geq 0$. The input coordinate system is located at the water level in the centre of the TLP.

The wet sides of the panel model are identified in Prefem by:

- An inside-outside definition

That is, Wadam must know which side to calculate pressures on.

```
DEFINE POINT INS1 x-val y-val z-val END END  
SET INSIDE wet surfaces POINT INS1 END END
```

- Hydrodynamic load definition on outside surfaces

```
PROPERTY LOAD 1 HYDRO-PRESSURE wet surfaces OUTSIDE OUTSIDE-SURFACE END END
```

The mesh density of the structure is important for the hydrodynamic loads. It is of importance that the mesh density reflects the hydrodynamic pressure variation around the structure. In areas where the pressure variation is large element sizes should be small.

The following items should be remembered when modelling a panel model:

- The pressure variation as a function of draught is at a maximum close to the surface, i.e. small element heights should be used close to the surface.
- The pressure variation is large close to the edges in the structure, i.e. element sizes normal to the edge length should be small.
- The elements should be modelled as planar as possible. Elements which are too twisted should be divided into smaller elements.
- Large changes in element size for neighbouring elements should be avoided.
- The largest element diagonal should be smaller than one quarter of the wave length for all wave periods contributing significantly to the wave pressure at given locations.

It is also noted that the mesh refinement of a hydro model normally needs to be high if the mean drift forces by pressure integration shall be obtained. This compared to the calculation of rigid body responses where reliable results may be obtained with a considerably coarser mesh.

Morison Model

The Morison model is a beam element model; see Figure 3.9. The model consists of 2 node beam elements and spring elements representing the tethers. These spring elements are neglected by Wadam and may actually be omitted in the Morison model for this analysis. Node masses are used to include the mass above the still water level. Except for the mass distribution the same Morison model is used for all the analyses for the TLP. This shows the similarity of the analyses. The same input coordinate system as for the panel model is used. This is required by Wadam.

The Morison model is used to connect the tether elements specified in HydroD or Prewad. All additional elements specified in Prewad must be connected to existing elements or nodes in the Morison model. The tether elements are consequently connected to appropriate nodes in the Morison model.

The mass distribution used in the sectional force calculations is taken from the Morison model. It is therefore important that the distribution is correct.

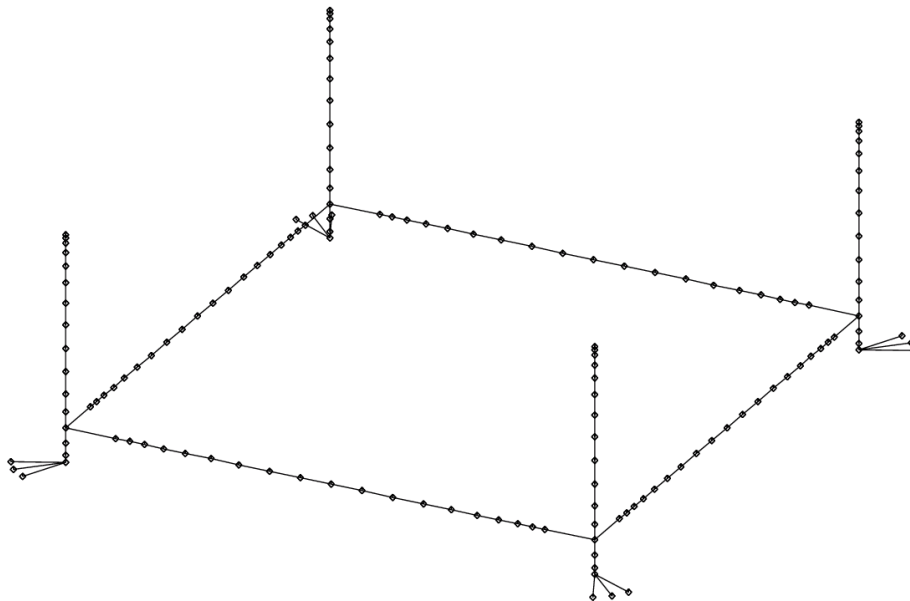


Figure 3.9 Morison model

Additional Elements

For this analysis the following additional elements are defined in Prewad:

- TLP mooring elements

The TLP mooring elements are specified for inclusion of tether stiffness. One element is specified for each tether. The inclusion of stiffness for one tether in Prewad is defined as follows:

```

DEFINE ELEMENT TLP-MOORING-ELEMENT
% elno  node1
   11    131
END      END      END
%-----
DEFINE HYDRODYNAMIC-PROPERTY SECTION
% ref          len    pre    stiff    xoff  yoff
   21 TLP-MOORING-ELEMENT 965.0  5.0E7  9.59E7  35.0  35.0
END      END      END
%-----
DEFINE HYDRODYNAMIC-PROPERTY CONNECT
% ref  elno
   21   11
END    END    END
    
```

Check of Results

Several checks should be performed during a Wadam analysis. The following checks should as a minimum be made after a global response analysis:

- Error and warning messages

Wadam will give error or warning messages if the Prewad input data and the input models contain inconsistencies.

- Hydrostatic properties calculated on the model

All hydrostatic data are printed in the Wadam listing. These properties are more closely explained in Section 2.5.5.

- Mass properties

A summary of the mass calculations is given in the Wadam listing.

- Rigid body eigenperiods for the structure

The eigenperiods show whether Wadam has interpreted the stiffness and mass properties as expected and is an extra check of these values.

- Transfer functions for exciting forces, added mass, damping and rigid body motions The transfer functions should generally not be too irregular. Large jumps in the transfer functions, especially for added mass and potential damping, may be caused by too large wave period steps, the presence of irregular frequencies or numerical problems in Wadam. The irregular frequencies may usually be removed by the removal of irregular frequency option. This option is specified in Prewad by the following command:

```
DEFINE GENERAL EXECUTION-DIRECTIVES POTENTIAL-THEORY
  IRREGULAR-FREQUENCY REMOVE alpha
END    END    END
```

This feature should, however, be used with care as there is no alpha value that will remove the irregular frequencies for all geometries. The selection of alpha must be based on trial and error. A key point is to observe that the responses are not disturbed in a large frequency range for some ALPHA values. For most geometries 0.2 has shown to be a good starting value. See Section 2.6.3 for further description.

3.2.2 TLP Load Transfer to a Shell Structural Model

Load transfer to a structural shell model for the TLP shown in Figure 3.7 is performed. The transferred loads are used in a subsequent structural analysis and are together with other load cases used to check the capacity of the hull.

The panel and Morison models used in this analysis are the same as those in Section 3.2.1 except that the Morison model is without mass. Reference is therefore made to Section 3.2.1 for model descriptions and a description of the additional elements.

The following calculations are performed in Wadam for this analysis. The first two tasks are automatically calculated while the others are specified for this analysis.

- Hydrostatic calculation in which both the hydrostatic and inertial properties for the structure are calculated
- Calculation of hydrodynamic exciting forces, added mass, damping and global motion responses for the TLP
- Eigenvalue calculations for rigid body motions. One set of eigenvalues is calculated for each wave period.

- Detailed load calculations and load transfer to a structural model. This includes:
 - Rigid body accelerations and fluctuating gravity
 - Pressure loads caused by waves, damping and added mass
 - Tether reaction forces caused by rigid body motions of the TLP

Preparations for this analysis in Wadam consist of the following steps:

- Creation of the panel model with Patran-Pre or Prefem. Symmetry of the structure is used and only one quarter of the TLP is modelled.
- Creation of beam elements for the Morison model with Patran-Pre or Genie.
- Creation of the structural model with Genie, Patran-Pre and Presel.
- Transfer of Input Interface Files to the directory where the Wadam analysis is performed.
- Definition of execution directives, additional elements, environmental properties, etc. in HydroD or Pre-wad.

Potential wave theory is used for all the wave periods and the panel model is thus used for calculation of all wave loads. A Morison model is used to include the tether reaction loads transferred to the structural model.

Structural Model

The underwater part of the structural model is shown in Figure 3.10. The geometry assembly for the entire structural model is shown in Figure 3.11.

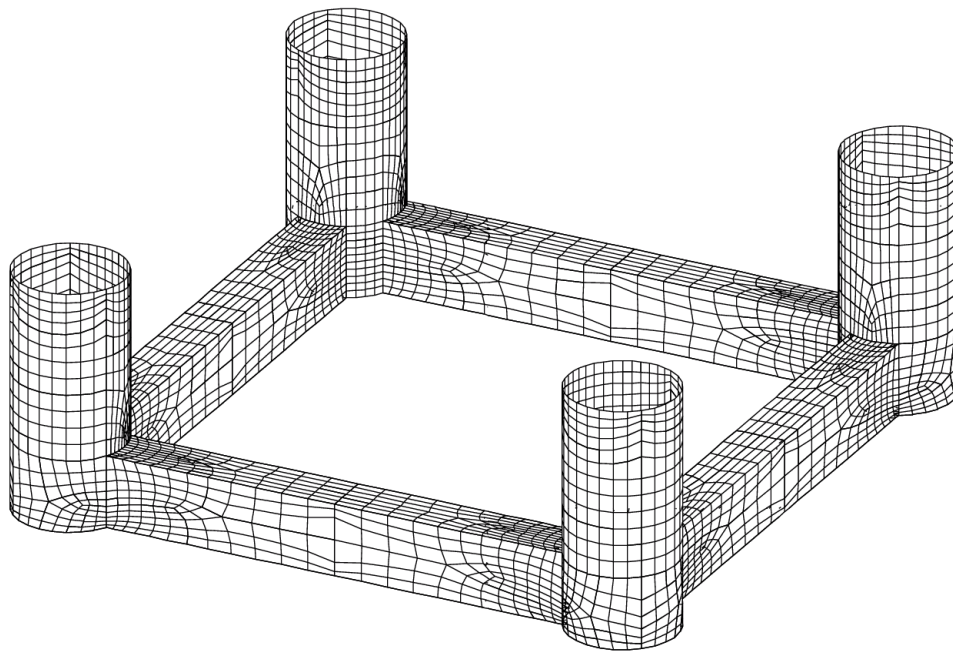


Figure 3.10 The sub-sea part of the structural shell model

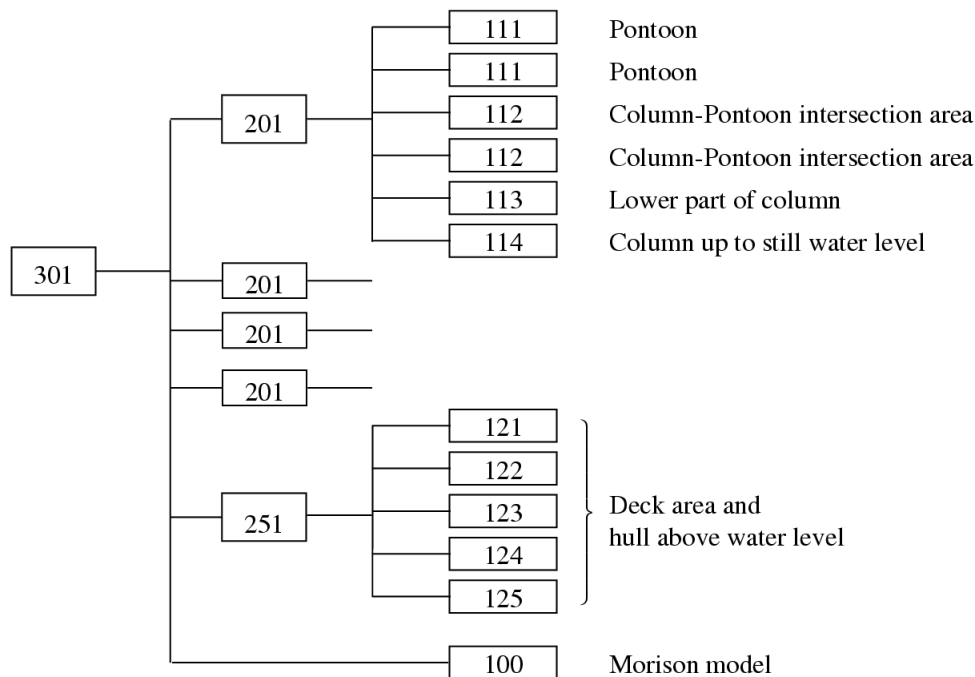


Figure 3.11 The geometry assembly for the structural shell model

The model is built from first level superelements created in e.g. Patran-Pre and Genie and then built together in the hierarchy shown in Figure 3.11. Both the geometry assembly and the description of load case numbers is built using Presel. The load case number description includes wave loads from Wadam and loads defined in the preprocessors. See Section 2.1.11 for further description.

Wet surfaces on the structural model are identified in Patran-Pre or Prefem by use of the same modelling steps as for the panel model. See Section 2.1.9 for further description.

The structural model could also have been used as the hydro model for calculation of hydrodynamic loads. Separate models are normally used to optimise panel dimensions and shapes as well as to minimise the number of panels in the panel model.

Structural mass is distributed with a high degree of accuracy in the model. This is necessary in order to include the inertia forces, transferred as nodal accelerations, in a proper way in the structural analysis.

Load Transfer

The following loads are transferred to the structural model:

- Hydrodynamic wave pressures

Pressure distribution from exciting forces, added mass and potential damping are transferred to each wet element in the structural model.

- Inertia loads

Rigid body accelerations are transferred to all nodes in the structural model.

- Tether reaction forces

The rigid body tether reaction forces are transferred to the nodes in the Morison model where the tether elements are connected.

Loads are automatically transferred to the structural model in Wadam. Tether loads may, however, only be transferred to nodes in a beam structural model corresponding to a Morison model. Such loads are consequently written to a composite structural model.

Wave exciting forces, added mass and damping are transferred to the structural model as pressure loads on the elements with specified hydro-pressure. Inertia forces due to rigid body motions are transferred as nodal accelerations to all the nodes in the structural model.

Tether reaction forces are transferred to the appropriate nodes in the Morison model. The Morison model corresponds to a superelement in the structural model such that the tether reaction forces are transferred to the structural model.

This load transfer is defined by the following commands:

```

DEFINE GENERAL EXECUTION-DIRECTIVES
%
STRUCTURAL-LOADS COMPOSITE-STR-MODEL NO
END END END
%-----
DEFINE GENERAL ANALYSIS-MODELS
MORISON-MODEL 100
STRUCTURAL-MODEL 301
END END END

```

The structural model contains several static load cases to be used in the dimensioning of the TLP. These load cases are numbered in increasing order, starting at one, in the different first level superelements included in the structural model. Subsequently, the wave load numbers start at the first idle load case number for each first level superelement. Unformatted Loads Interface Files are used in the load transfer to the structural analysis. This is specified in Prewad as follows:

```

DEFINE GENERAL EXECUTION-DIRECTIVES RESULT-FILES LOAD-TRANSFER-OPTION
OFFSET-IN-LOAD-CASE-NUMBER AUTOMATIC
FILE-FORMAT UNFORMATTED END END END END END

```

Local load cases for all first level superelements are created. There are 40 global load cases in the analysis (8 wave headings and 5 wave periods) but the number of local load cases is larger for superelements that are repeated. For superelement 111 the total number of local load cases is 320 (8 occurrences each with 40 load cases).

The loading on the elements and nodes in the structural model is written to Loads Interface Files used in the structural analysis. One file containing all local wave load cases is written for each first level superelement. In addition, an S-file is created containing input to Sestra about wave periods, headings and load cases. This file, S301.FEM, must be located in the same physical directory as the Input Interface Files when the structural analysis is performed. The S-file is mandatory for the structural analysis only if information about wave periods and headings is used in the postprocessing and could be omitted for this analysis.

- L100.FEM — Tether reaction forces due to rigid body motions for superelement 100 (Morison model)
- L111.FEM — Pressure loads and nodal accelerations for superelement 111 (Pontoon)

- L112.FEM — Pressure loads and nodal accelerations for superelement 112 (Intersection area)
- L113.FEM — Pressure loads and nodal accelerations for superelement 113 (Lower part of the column)
- L114.FEM — Pressure loads and nodal accelerations for superelement 114 (Middle part of the column)
- L12*.FEM — Nodal accelerations for all other first level superelements
- S301.FEM — Input file for subsequent Sestra analysis

Check of Results

In addition to the checkpoints mentioned in Section 3.2.1 the following points should be checked in the analysis to make sure that the results are reliable:

- Information about matching between elements in the panel model and the structural model
All wet elements in the structural model should receive wave pressure loads from the analysis. If the distance from one element in the structural model to the nearest element in the panel model or the difference in orientation of the element normals is too large then Wadam will not transfer any loads to the element. A warning will be given in the print file; see Appendix B 3.3. In such cases the tolerances specified in Prewad, i.e. `distol` and `angtol`, should be increased. It is, however, important to be aware of the possible problems when the tolerances are increased. The transferred pressures may not be correct for these elements and the load sums for the structural model and the panel model may not be satisfactory.
- Difference between calculated loads on the panel model and loads transferred to the structural model
The total pressure loads transferred from the panel model to the structural model are printed in the Wadam listing. These load sums should be checked against the sum of calculated pressures on the panel model. A large difference indicates that a new analysis should be performed changing either the tolerance, the panel model or the structural model. The transfer of pressure loads from the panel model to the structural model is described in detail in Appendix B 3.3.
- Load sums for the wave loads in the structural analysis
The sum of loads printed in the Wadam listing contains pressure loads on wet elements only. Inertia forces are not included and thus the total load sums cannot be checked. The total load sums must therefore be checked in the structural analysis. Since all loads are transferred from Wadam — including the tether restoring loads — the load sums for wave load cases should be close to zero in the structural analysis. Large forces in the load sums indicate errors either in the load transfer or in the load combinations in Presel.

3.2.3 TLP Load Transfer to Beam Element Model

Load transfer to a structural beam model for the TLP shown in Figure 3.7 is performed. The transferred loads are used in a subsequent structural analysis where fatigue damage is calculated for parts of the topside structure. The beam element model is used to reduce CPU consumption and disk requirements.

The panel model is the same as in the previous examples. Reference is made to Section 2.1.2 for description of the panel model and to Section 2.1.3 for a description of the additional elements.

The following calculations are performed in Wadam for this analysis. The first two tasks are automatically calculated while the others are specified for this analysis.

- Hydrostatic calculation in which both the hydrostatic and inertial properties for the structure are calculated
- Calculation of hydrodynamic exciting forces, added mass, damping and global motion response for the TLP
- Eigenvalue calculations for rigid body motions. One set of eigenvalues is calculated for each wave period.
- Detailed load calculations and load transfer to structural model. This includes:
 - Nodal accelerations for all nodes in the structure
 - Line loads on the beams corresponding to Morison elements. The loads are obtained from integration of panel pressures in a dual model; see Section 2.1.4.
 - Tether reaction forces caused by rigid body motions of the TLP

Preparations for this analysis in Wadam consist of the following steps:

- Creation of the panel model in Patran-Pre or Prefem. Symmetry of the structure is used and only one quarter of the TLP is modelled.
- Creation of beam elements in Genie or Patran-Pre for the Morison and structural models
- Creation of the remaining part of the structural model in Genie and/or Patran-Pre and Presel
- Transfer of Input Interface Files to the directory where the Wadam analysis is performed
- Definition of execution directives, additional elements, environmental properties, etc. in HydroD or Prewad
- Definition of correspondence between panels in the panel model and elements in the Morison model for transfer of integrated pressure loads

Potential wave theory is used for all wave periods and the panel model is thus used for calculation of all wave loads. The mass from the structural model is used in the calculation of motions in Wadam.

Structural Model

The structural model is equal to the one used for load transfer to the shell element model, see Section 3.2.2, except that the sub-sea part of the structure is substituted by the Morison model. One extra superelement is also used to connect the Morison model to the rest of the structural model. This extra superelement is shown in Figure 3.12. Figure 3.13 shows the geometry assembly for the structural model.

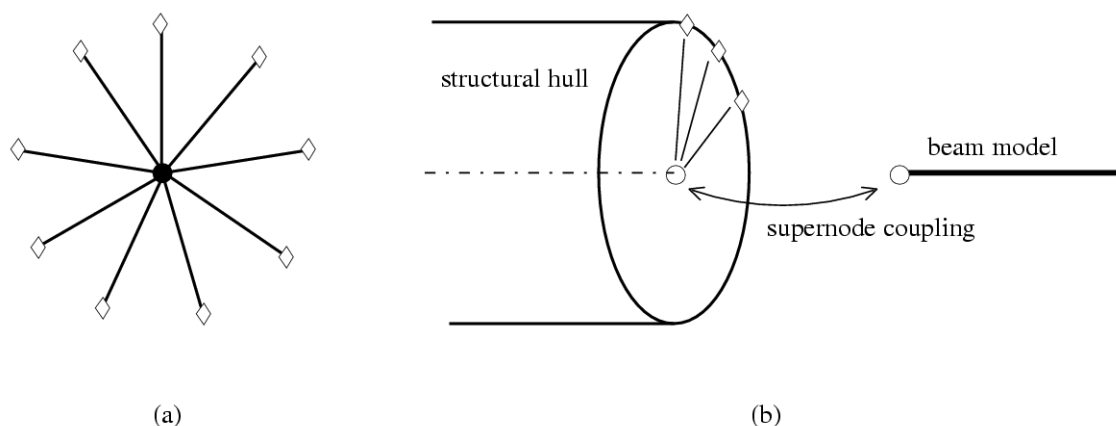


Figure 3.12 (a) Extra superelement for connection of Morison model to the rest of the structural model and (b) Example of use of the extra superelement

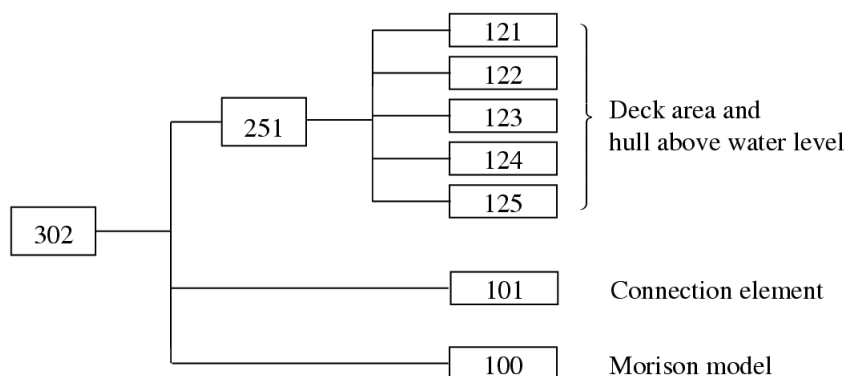


Figure 3.13 Geometry assembly for the TLP structural model

The model is built up from first level superelements created in Patran-Pre and Genie and then built together in the hierarchy shown in Figure 3.13. Both the geometry assembly and the description of load case numbers is built up using Presel. As this is a fatigue analysis only wave loads from Wadam are included in the load combinations. See Section 2.1.11 for further description.

Structural mass is distributed with a high degree of accuracy in the model. This is necessary in order to include the inertia forces, transferred as nodal accelerations, in a proper way in the structural analysis.

In this analysis the same superelement represents the Morison model in the Wadam analysis and is a part of the structural model. The structural spring stiffness defined in the tether attachment points are used as support conditions in the structural analysis. Such spring stiffness is disregarded by Wadam. Tether elements are defined in Prewad to include the tether stiffness in the Wadam analysis.

Morison Model

The Morison model is equal to the one used in Section 3.2.1 except that the point masses used to include mass above the still water level is removed. This mass is now included in the structural model.

Unlike the global response calculations performed in Section 3.2.1 the structural stiffness of the Morison model is now very important. This stiffness is modelled with 2 node beam and bar elements for columns and pontoons respectively. The stiffness is calibrated against the shell element model in Section 3.2.2 to ensure correct stiffness.

Load Transfer

The following loads are transferred to the structural model:

- Hydrodynamic wave pressures
Pressure forces are summed up from exciting forces, added mass and potential damping. It is transferred as line load to each element specified in the correspondence command in Prewad.
- Inertia loads
Accelerations from rigid body motions are calculated for all nodes in the structural model.
- Tether reaction loads
The rigid body tether reaction forces are calculated on the Morison model. This means that the reactions forces are written to the nodes specified in Prewad.

All wave induced loads are written to the structural model. The line loads are written to the Morison model. The Morison model is now a part of the structural model defined in Presel and the load transfer is defined through the following commands in Prewad:

```

DEFINE GENERAL EXECUTION-DIRECTIVES
%
    STRUCTURAL-LOADS BEAM-STR-MODEL    YES    NO    NO
    END    END    END
%-----
DEFINE GENERAL ANALYSIS-MODELS STRUCTURAL-MODEL 302    END    END    END

```

The transfer of pressure loads from the panel model to the Morison model is not automatic. Correspondence between panel model and Morison model must be defined through the following command in Prewad:

```

DEFINE CORRESPOND
%  elno  selno  seltyp  index          ssno1  ssno2  ssinc
    114    1    99      1    GROUP 713    897    8    END
    115    1    99      1    GROUP 714    898    8    END
    END    END

```

Pressure loads on the panel model are summed up and applied as line loads on the corresponding elements in the Morison model, i.e. no moments are transferred. It is thus important to specify load transfer to the correct elements in the Morison model.

Inertia loads are included as rigid body accelerations.

Local load cases for all first level superelements are created starting on load case 1 (since no static load cases are included). There are 160 global load cases in the analysis (8 wave headings and 20 wave periods).

The loading on the elements and nodes in the structural model is written to Loads Interface Files used in the structural analysis. One file containing all local load cases is written for each superelement. In addition, the S-file, S302.FEM, is created containing input to Sestra about wave periods, headings and load cases. This file must be located in the same physical directory as the Input Interface Files when the structural analysis is performed. If this file is not included in the structural analysis fatigue postprocessing cannot be performed.

- L100.FEM — Tether reaction loads due to rigid body motions, line loads from hydro pressure and nodal accelerations for superelement 100 (Morison model)
- L101.FEM — Nodal accelerations for superelement 101 ('Connection' superelement)
- L12*.FEM — Nodal accelerations for all other first level superelements
- S302.FEM — Input file for subsequent Sestra analysis

3.2.4 Global Response of a Semi-Submersible using Dual Model

This example shows the use of Wadam in a typical global response calculation of a semi submersible. The analysis is mainly used for selection of wave periods and headings to be used in analyses similar to the one described in Section 3.2.2. The Morison model is used to include viscous damping for the heave eigenperiod of 21.5 seconds.

The following calculations are performed in Wadam for this analysis. The first two tasks are automatically calculated while the others are specified for this analysis.

- Hydrostatic calculation in which both the hydrostatic and inertial properties for the structure are calculated
- Calculation of hydrodynamic exciting forces, added mass, damping and global motion response for the semi-submersible
- Eigenvalue calculations for rigid body motions. One set of eigenvalues is calculated for each wave period.
- Sectional forces and moments in specified sections

Preparations for the analysis in Wadam include the following steps:

- Creation of a panel model in Patran-Pre/Prefem and Presel. Symmetry of the structure is used and only one quarter of the semi-submersible is modelled.
- Creation of beam elements for the Morison model in Genie or Patran-Pre.
- Transfer of Input Interface Files to the directory where the Wadam analysis is performed
- Definition of execution directives, additional elements, environmental properties, etc. in Prewad
- Definition of correspondence between panels and Morison elements

The mass is included as distributed mass on the Morison model.

The semi-submersible considered in this example is a typical double symmetric twin pontoon structure with the connection between the pontoons and the deck consisting of four columns, two transverse braces and four diagonal braces. The upper part of the structure consists of an upper and a lower deck and a derrick in the middle of the upper deck. The geometry of the semi-submersible is shown in Figure 3.14.

A symmetrical mooring system is used with mooring lines connected at the fairlead and windlass of the platform.

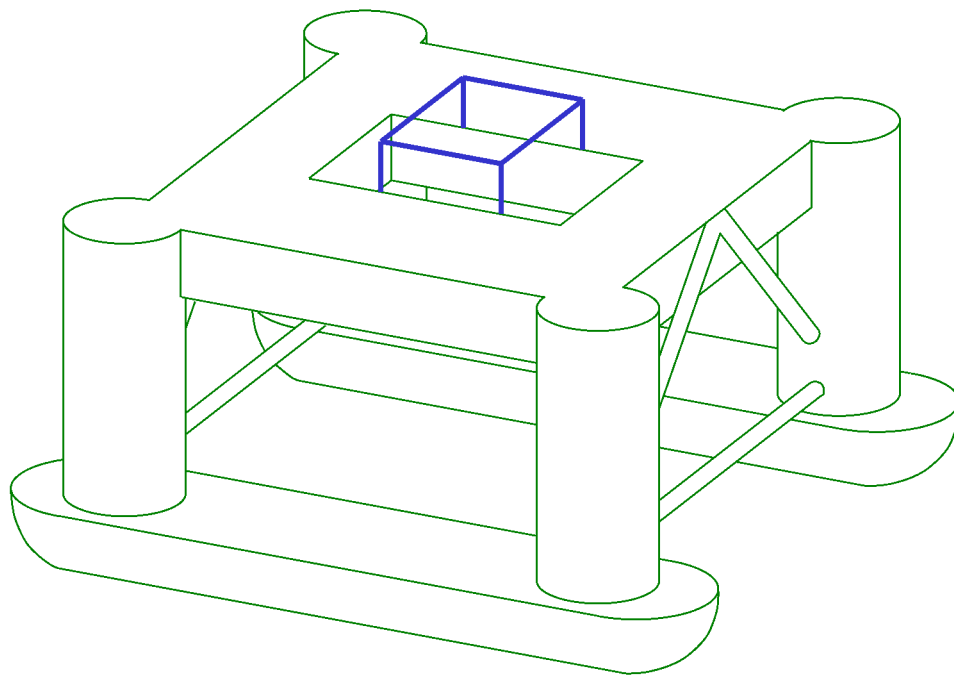


Figure 3.14 Geometry of the semi-submersible

Panel Model

The basic part of the panel model for the semi-submersible is modelled as two first level superelements in Prefem and combined into a second level assembly in Presel. The superelements and the assembly are shown in Figure 3.15. Since the semi-submersible is double symmetric only one quarter of the panel model is modelled. The remaining parts of the model are generated in Wadam by reflection (mirroring) of the basic part.

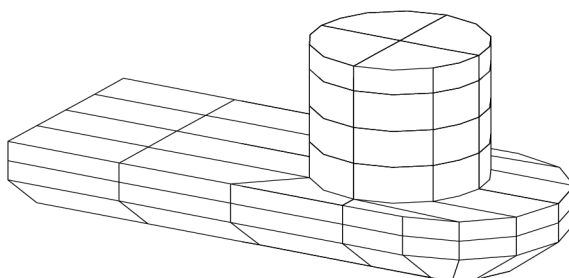


Figure 3.15 Quarter of a double symmetric panel model for the semi-submersible

The element sizes for this model may seem very large at first glance. However, no waves with periods below six seconds are assumed to give dimensioning stresses. Hence only higher periods are included in the analysis. Thus the element size is acceptable for this analysis.

The mesh density of the structure is of major importance for the hydrodynamic loads. It is important that the mesh density reflects the hydrodynamic pressure variation around the structure. In areas where the pressure variation is high element size should be small. Reference is also made to Section 2.1.2 for modelling principles of panel models.

Morison Model

The Morison model is a beam element model created in Preframe; see Figure 3.16 (today Genie or Patran-Pre would have been used). The model consists of 2 node beam elements and point masses. Additional elements are defined in Prewad in order to include correct hydrostatic and hydrodynamic behaviour. The inclusion of these elements is described in Section 2.1.3.

The input coordinate system used is the same as for the panel model as required by Wadam.

Dry Morison elements are included to model the structural properties and weight of parts of the structure above the still water level as well as other internal parts of the structure, e.g. the inside of the junction between the columns and pontoons. No hydro properties will be defined for these elements. This means that the section numbers used for dry and 2D Morison elements modelled in Genie or Patran-Pre, both represented by beam elements, must be different. This is the case even if the beam elements have identical structural properties.

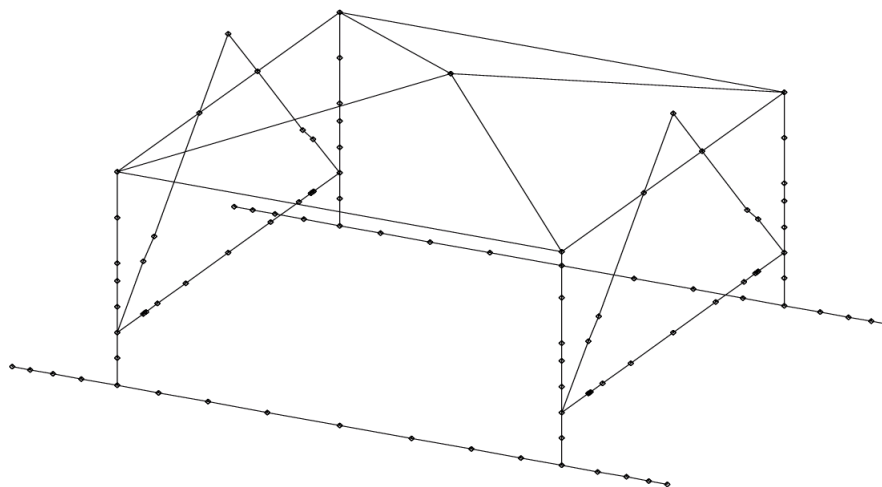


Figure 3.16 Beam elements of the Morison model

Additional Elements

Hydrodynamic properties for 2D Morison elements are together with the consecutive additional elements defined in Prewad:

- The 2D Morison element

All beam elements in the Morison model that receive hydrodynamic loads are identified in Prewad. The reference number (11 below) is the same as a section number specified in the Morison model. All the loads are automatically transferred to the correct elements. Retained mass, termed dm below, means that the mass defined on the Input Interface File will be used.

```
DEFINE HYDRODYNAMIC-PROPERTY SECTION
% ref          stot    dia    dm      cksi  czeta  aksi  azeta
  11 2D-MORISON-ELEMENT 1    7.4035 RETAINED 0.7   0.7   1.0   1.0
END    END    END
```

Retained mass means that the distributed mass on the Input Interface File will be used.

- The 3D Morison element

One 3D Morison element is defined at all ends of the pontoons. In this way the effect of added mass in the longitudinal direction of the pontoons is included. The commands for inclusion of one 3D Morison element are shown below:

```
DEFINE ELEMENT 3D-MORISON-ELEMENT
% elno  node1
  201    1
END    END    END
%-----
DEFINE HYDRODYNAMIC-PROPERTY SECTION
% ref          dia    dm  drag  addmass  x2 y2 z2
  201 3D-MORISON-ELEMENT HYDRODYNAMIC 12.3608 0.0  0 0 0  0.7 0 0  0 0 0
END    END    END
%-----
```

```

DEFINE HYDRODYNAMIC-PROPERTY CONNECT
% ref elno
    201 201
    END    END    END

```

- The pressure area element

A total of 72 pressure area elements are included to account for free ends, diameter changes and junctions between beam elements. Since each pressure area element must have a unique point specifying the direction of the force there must be a separate set of hydro-properties for each element.

The Prewad definition for one element is shown below:

```

DEFINE ELEMENT PRESSURE-AREA-ELEMENT
% elno  node1  node2
    601    1      1
    END    END    END
%-----
DEFINE HYDRODYNAMIC-PROPERTY SECTION
% ref                                     dia      x2      y2      z2
    601 PRESSURE-AREA-ELEMENT WAVE-LENGTH-DEPENDENT 9.885  27.36  27.36  0.0
    END    END    END
%-----
DEFINE HYDRODYNAMIC-PROPERTY CONNECT
% ref  elno
    601 601
    END    END    END

```

- Anchor element

The mooring system consists of four anchor elements, one for each column. The fairlead is defined at the bottom of the columns and windlass at the third node from the top of the column. The Prewad definition for the element in the first quadrant is shown below:

```

DEFINE ELEMENT ANCHOR-ELEMENT
% elno  node1  node2
    101    2      5
    END    END    END
%-----
DEFINE HYDRODYNAMIC-PROPERTY SECTION
% ref          angin  angx  force  skh  skv
    101 ANCHOR-ELEMENT 30.0  45.0  0.0  265.2  0.0
    END    END    END
%-----
DEFINE HYDRODYNAMIC-PROPERTY CONNECT
% ref  elno
    101 101
    END    END    END

```

3.2.5 Global Response for a Ship

This example illustrates how Wadam may be used in a typical global response analysis for a ship with no forward speed. This calculation is in principle equal to global response analysis for other types of structures.

The two significant differences are the non-linear viscous roll damping and the corrections in restoring forces due to the non-linear GZ-curve. Both effects are introduced in a linearised form.

The following calculations are performed in Wadam for this analysis. The first two tasks are automatically calculated while the others are specified for this analysis.

- Hydrostatic calculation in which both the hydrostatic and inertial properties for the structure are calculated
- Calculation of hydrodynamic exciting forces, added mass, damping and global motion response for the ship
- Eigenvalue calculations for rigid body motions. Added mass for the first wave period is used in the calculations.
- Calculation of sectional forces in specified sections
- Calculation of linearised viscous roll damping and restoring terms

Preparations for the analysis in Wadam consist of the following steps:

- Creation of the panel model in Patran-Pre/Prefem and Presel. Symmetry of the structure is exploited and only one half of the ship is modelled.
- Creation of beam elements for the mass model in Genie or Patran-Pre.
- Transfer of Input Interface Files to the directory where the Wadam analysis is performed
- Definition of execution directives, damping models, environmental properties, etc. in HydroD or Prewad

The ship used in this example is a typical Aframax tanker with a 62.4 metre long bilge keel on each side.

Panel Model

The total panel model of the ship is shown in Figure 3.17. The basic part of the panel model consists of one half only. The total model is generated in Wadam through reflection (mirroring) of the basic part.

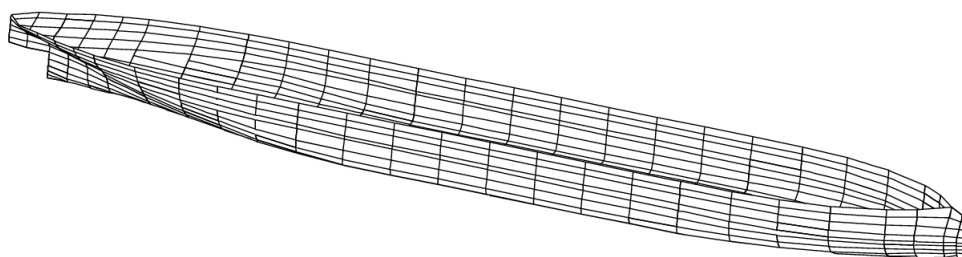


Figure 3.17 Total panel model of the ship including reflected part

The basic part of the panel model is modelled as one first level superelement in Prefem. The coordinate system for the model is located at the water level above the centre of gravity of the ship. Modelling advice for the panel model is given in Section 2.1.2.

Mass Model

The mass model for the ship is shown in Figure 3.18. This is a global response calculation where the local mass distribution is modelled in a manner adequate for the sectional force calculations. The mass is simply modelled as transverse beams representing the mass of each section thereby ensuring that the roll radius of gyration and metacentric heights are correct. Large additional masses are modelled with point masses.



Figure 3.18 Mass model for the ship

Roll Damping Model

For a ship or barge the roll motions will generally be much larger than for floating offshore structures. These large roll motions increase the viscous damping significantly. The non-linear damping contributions are therefore included in a linearised manner in Wadam; see Section 2.5.19. The non-linear behaviour of the roll restoring is also linearised and included in the model. Reference is made to Appendix B 3.1 for further description.

The following non-linear contributions are included in the model:

- Viscous damping from skin friction and eddy-making for the naked hull

This part of the viscous damping is included for all sections of the ship model as follows:

```

DEFINE GENERAL ROLL-DAMPING-MODEL
%           nos xoff      xbow
  STRIP-MODEL 25 -113.412 -112.112 FP-TO-AP
%           bst  bilgr sect
           2.6 0.0   BOW-SECTION
           .   .     ...
          12.0 1.8   MID-SECTION      (repeated for all 25 sections)
           .   .     ...
           5.6 0.0   STERN-SECTION
          END   END   END

```

- Viscous damping and eddy making from the bilge keel.

The effect of the bilge keel is included in the following way:

```

DEFINE GENERAL ROLL-DAMPING-MODEL
%           xfr      bilgl bilgb
  BILGE-KEEL -29.862 62.4 0.38
%           y        z      phi
           19.85 13.67 0.0

```

```

      . . . (repeated for all sections with bilge keel)
END      END      END

```

- Roll restoring from the GZ-curve

The roll restoring coefficient is modified on basis of the given GZ-curve as shown below:

```

DEFINE GENERAL ROLL-DAMPING-MODEL
%
  GZ-CURVE
%   hang gz
    0.0  0.0
    5.0  0.212 (repeated for all angles on the curve)
      . .
END      END      END

```

The non-linear contributions above are linearised according to the maximum expected roll angle for each wave heading in the sea state considered. These roll angles are found from a sequence of analyses performed until convergence between input roll angles and computed extreme roll angles is achieved. Satisfactory convergence is analysis dependent but should at least be achieved when the error in the angle is less than 0.1 degrees.

Check of Results

In addition to the checkpoints mentioned in Section 3.2.1 the following should be checked in a global response analysis of a ship:

- Roll angles

The computed roll angles should be transferred to Postresp for statistical postprocessing. For the given sea state considered the maximum roll angles should be equal to the roll angles given in the Prewad input.

4 EXECUTION OF WADAM

4.1 Program Environment

Wadam is a batch program. It may be started from Manager, from a command-window or from HydroD. The input to Wadam is prepared by the Prewad or HydroD. Both these programs creates the Wadam analysis control data file WADAMn.FEM as shown in Figure 4.1.

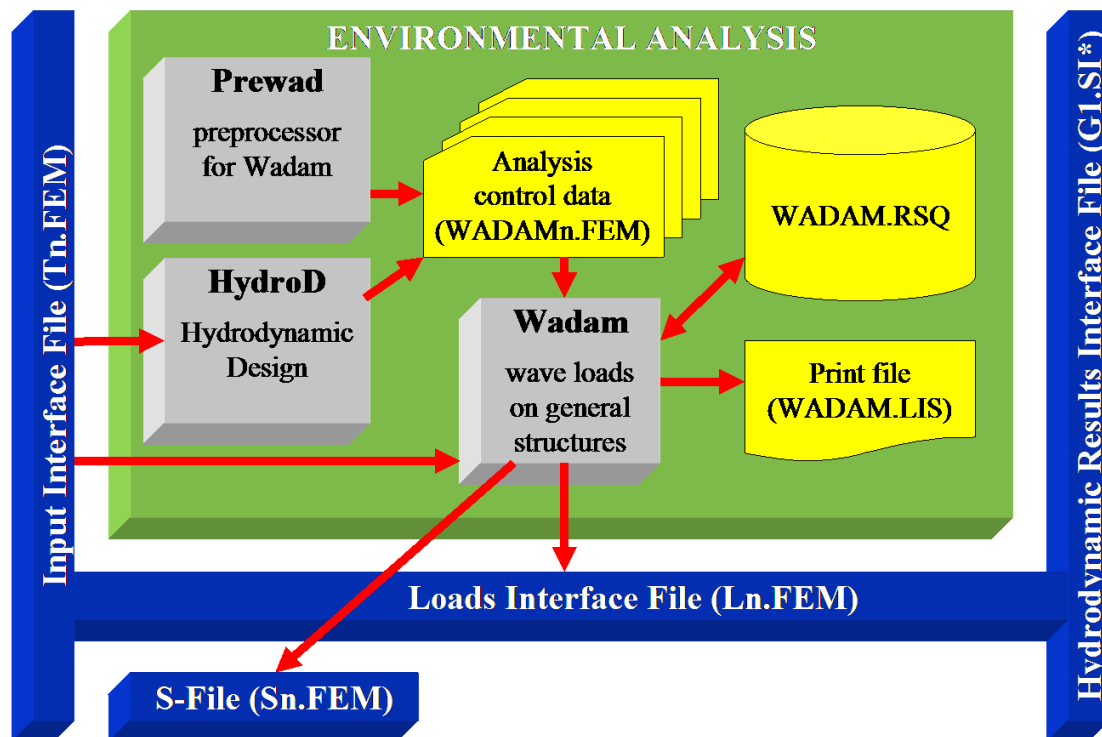


Figure 4.1 HydroD (or Prewad) -Wadam communication

As depicted in Figure 4.1 the entire set of permanent files associated with a Wadam run is:

Analysis control data	mandatory	input
Input Interface File	mandatory	input
Print file	mandatory	output
Loads Interface File	optional	output
Hydrodynamic Results Interface File	optional	output
Additional analysis control data for Sestra (S-file)	optional	output
Save-restart file for velocity and source potentials	optional	input/output

In addition to the permanent files Wadam will generate a set of temporary files during the execution. These files will be opened on the directory where the process is located unless specific assignments are provided in the command procedures.

HydroD is normally started directly from a shortcut on the desktop. HydroD can also read Prewad-jnl files.

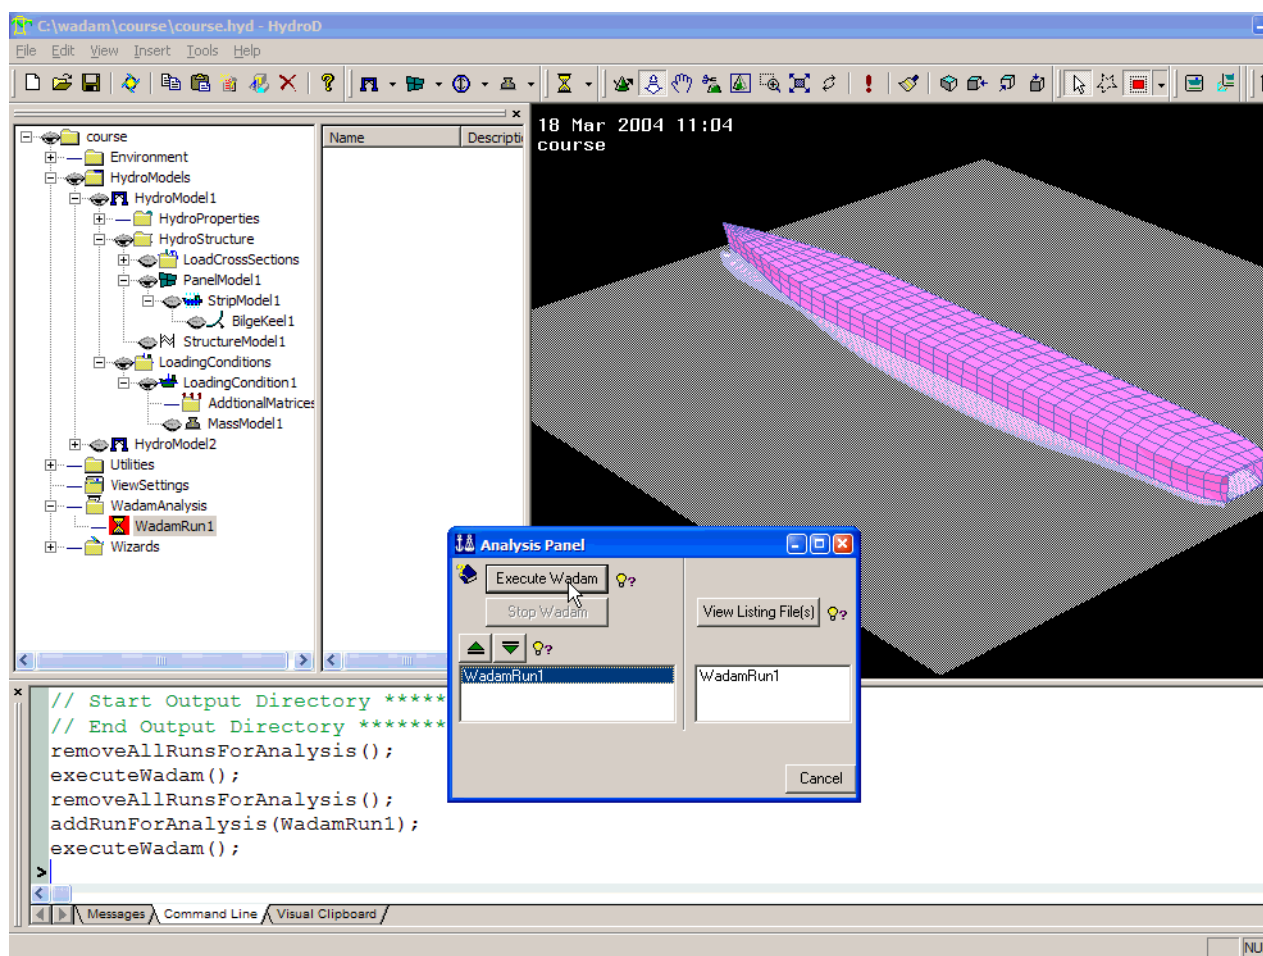


Figure 4.2 The HydroD GUI and the command for executing Wadam.

4.1.1 Starting Prewad from Manager

Prewad is started from Manager by **Model | Hydro Modelling Prewad**. The Prewad window opens up in which the interactive commands may be clicked in the column at the right or typed in the area at the bottom. Commands may be abbreviated as long as they are unique.

The most practical way of using Prewad is often to edit a previously created Prewad input file and use this as a command input file. This is described in Section 4.1.2.

4.1.2 Reading a Command Input File into Prewad and Running Wadam

In the Hydro Modelling window opening up when giving **Model | Hydro Modelling Prewad** in Manager there is a box for specifying a **Command input file**; see Figure 4.3. By default this is set to None. Changing this to File name a new box appears in which you may specify a Command input file that will be automatically read into Prewad once the program is started by clicking OK.

If the box **Run interactively after command input file processing** is checked Prewad will after processing the input await interactive user input. You may then add more Prewad commands. Use the EXIT command to leave Prewad. If your Command input file contains all input required there is no need to check this box.

Check the box **Write dataset on exit** if you want Prewad to create the Wadam analysis control data file. This is normally what you want to do. The **Dataset** number may be used to distinguish separate Wadam runs. If you only intend to perform a single Wadam analysis let it be 1.

Check the box **Run wave load analysis after Prewad** if you want to automatically start Wadam once Prewad has finished and written the Wadam analysis control data file. If you are uncertain as to whether your Prewad input is correct you may leave this box unchecked. If you thereafter decide to run Wadam then give **Load | Wave Loading Wadam**, select the proper **Dataset** and start the execution.

Note: If your Command input file constitutes the complete input then make sure the Database status is set to New. You need to change Old to New if you previously have run Prewad in which case there will exist a Prewad database causing the Database status to come up as Old.

Note: You may also read a Command input file from inside Prewad by using the SET COMMAND-INPUT FILE command followed by the # command; see these.

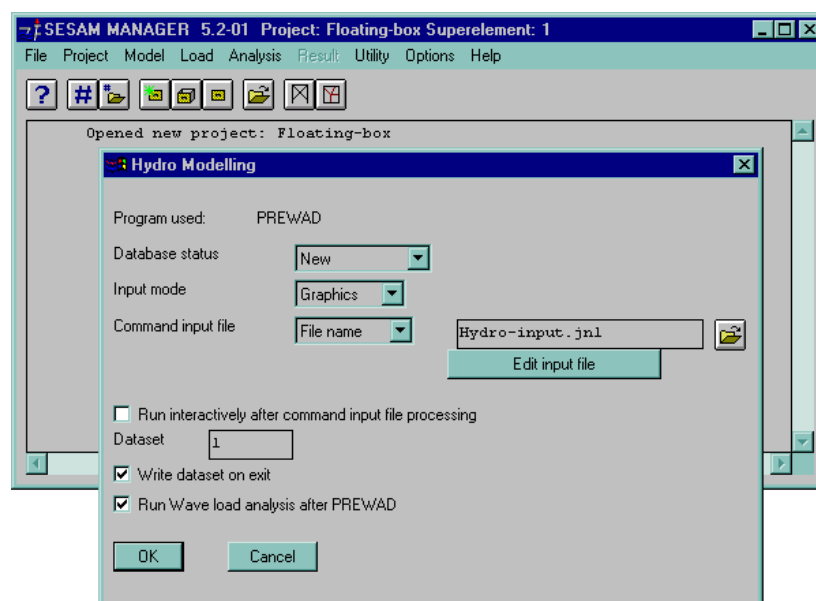


Figure 4.3 Manager and the Hydro Modelling window with Command input file specification

4.1.3 The Input Files

Analysis Control Data

The file WADAMn.FEM contains all the input data controlling the analysis to be performed by Wadam. The file is generated by HydroD or Prewad. The input data are established based on the Prewad commands in Chapter 5 of this manual or by HydroD.

Input Interface Files

The Input Interface Files contain the model to analyse. The files are established by the preprocessors. A detailed description of the Input Interface File format may be found in the Input Interface File Description. The Input Interface Files are formatted files.

There is one Input Interface File for each separate superelement. Wadam imposes the naming convention that the Input Interface Files must exist in the default directory for the analysis and that there must be no prefix for the Input Interface Files. That is, the Input Interface File names must be of the form

Tn.FEM

where the T identifies the file as an Input Interface File and n is the superelement number.

With the multi-body option there is no restriction on the file prefix. Hence, with the multi-body option the Input Interface Files may be of the form

prefixTn.FEM

where the prefix is specified in Prewad.

4.1.4 Output Files

Loads Interface File

The detailed finite element loads from Wadam will be stored in Loads Interface Files; see Section 2.1.9. The Loads Interface Files are generated for the first level superelements only. The Loads Interface Files constitute a subset of the Input Interface File data types. The naming convention for Loads Interface Files is similar to that of the Input Interface Files except that the identifying letter T is replaced by an L. That is:

Ln.FEM

The Loads Interface Files are by default unformatted. They may optionally be specified as formatted. In addition the utility program Waloco may convert between formatted and unformatted Loads Interface Files.

If the Loads Interface Files contain dynamic load cases in the frequency domain format an additional analysis control data file for the subsequent Sestra analysis is created. This is the S-file containing standard analysis control data for the Sestra analysis. The naming convention for the S-file is

Sn.FEM

where n is the superelement number of the top level superelement in the structural model.

Hydrodynamic Results Interface File

The Hydrodynamic Results Interface File is created if a global response analysis is performed in Wadam. It contains transfer functions for rigid body responses together with transfer functions for off-body kinematics and the rigid body matrices. The naming convention for the Hydrodynamic Results Interface File is

G1.SIF	for formatted sequential file
G1.SIU	for unformatted sequential file
G1.SIN	for Norsam direct access format

Print File

The print file contains major results information from a Wadam analysis. The full description of the result types in the print file is included in Section 2.5 in this manual.

4.1.5 The Save-Restart File

The save-restart file contains the velocity and source potentials obtained from solving the radiation and diffraction problems. The save-restart file also contains hydro model data used in consistency checking when the potentials are used in a restart run. The naming convention for the save-restart file is

Wadam.RSQ

The file is formatted.

4.2 Program Requirements

The disk space requirements in Wadam depend on the type of analysis and of the input models. The execution time is dominated by the solution of the radiation and diffraction problems that is performed for each incident wave frequency.

4.3 Program Limitations

Wadam imposes restrictions on the size of the hydro model analysis. The size of the structural model used in the detailed load calculation is virtually unlimited.

The size dependent limitations are listed below. Note however that the limits may vary between different installations. The actual list of limitations is printed in the status list and in section 1.2 in the Wadam print file.

The limit values specified in the list below applies to the standard installation:

Geometry limitations:

Maximum number of panels (for the basic part of the model)	15000
Maximum number of free surface panels (for the basic part of the model)	3000
Maximum number of off-body points	2000
Maximum number of nodes in the Morison model	5000
Maximum number of elements in the Morison model	5000
Maximum number of sub-elements in the Morison model when diffracted wave kinematics is used in Morison's equation	2000
Maximum number of sub-elements in one Morison element	5
Maximum number of superelements in the Morison model	1
Maximum number of panels corresponding to one Morison sub-element	99
Maximum number of sections for sectional loads	25
Maximum number of bodies	15

Analysis limitations:

Maximum number of wave frequencies	60
Maximum number of wave headings	36
Maximum number of wave headings using Haskin's relation	36
Maximum number of phase angles with the time output format	14
Maximum number of current profiles	1
Maximum number of levels in one current profile	30

4.4 Warnings and Error Messages

Warning and error messages may occur in the print file or on the job log file. Error messages will halt the execution. Warnings are less serious and the execution will continue. However, the warnings may be a

symptom of a more serious problem. Henceforth the program may abort with an error message at a later stage in the program execution. In any case, warning messages should be carefully interpreted.

Warnings and Error Messages in the Print File

Problems and errors discovered during the check of analysis control data and the input models are reported on the print file. The input data check includes:

- Check of analysis control data
- Check of input models including the balance between buoyancy and weight of the hydro model

Execution errors due to malfunctioning of a program procedure will result in a short message and a trace back of all the calling procedures.

5 PREWAD COMMAND DESCRIPTION

The Wadam analysis is controlled by the analysis control data file WADAMn.FEM; see Section 4.1. This fixed format file is created by the interactive program Prewad or by HydroD. This chapter describes the Prewad commands.

The hierarchical structure of the commands and numerical data is documented by use of tables. How to interpret these tables is explained below. Examples are used to illustrate how the command structure may diverge into multiple choices and converge to a single choice.

In the example below command A is followed by either of the commands B and C. Thereafter command D is given. Legal alternatives are, therefore, A B D and A C D.

A	B	D
	C	

In the example below the three dots in the left-most column indicate that the command sequence is a continuation of a preceding command sequence. A block with any number of rows (in this case two) concluded by the command END signifies that the rows may be repeated any number of times. The sequence is concluded by END. Legal alternatives are for example A B C D E END and A D E B C B C END. The three dots in the right-most column indicate that the command sequence is to be continued by another command sequence.

...	A	B	C	...
		D	E	
		END		

The characters A, B, C and D in the examples above represent parameters being COMMANDS (written in upper case) and numbers (written in lower case). All numbers may be entered as real or integer values.

Note: The command END is generally used to end repetitive entering of data. Using double dot (..) rather than END to terminate a command will, depending on at which level in the command it is given, save or discard the data entered. Generally, if the data entered up to the double dot is complete and self-contained the double dot will save the data. If in doubt it is always safest to leave a command by entering the required number of END commands.

Note: Command alternatives in Prewad not documented here are obsolete.

CHANGE

CHANGE	CORRESPONDANCE	...
	ELEMENT	
	ENVIRONMENT	
	GENERAL	
	HYDRODYNAMIC-PROPERTY	
	END	

PURPOSE:

The command changes previously given input.

For explanation of the parameters of this command see the corresponding alternatives in the DEFINE command.

DEFINE

DEFINE	CORRESPONDANCE	...
	ELEMENT	
	ENVIRONMENT	
	GENERAL	
	HYDRODYNAMIC-PROPERTY	
	END	

PURPOSE:

The command specifies all Wadam analysis control data such as environmental properties, hydrodynamic elements, hydrodynamic properties, connection between Morison elements defined by Prewad and hydrodynamic properties and correspondence between Morison and panel models.

DEFINE CORRESPONDANCE

...	CORRESPONDANCE	elno	selno	seltyp	index	ssno				
						GROUP	ssno1	ssno2	ssno3	ssinc
						END				
		END								

PURPOSE:

The command defines correspondence between elements in the Morison model and panels in the basic panel model (correspondence for mirror images of panel model is handled automatically). This correspondence will define a 'dual' part of the Morison model used when Morison and radiation-diffraction theory is combined and/or when radiation-diffraction pressures are to be transferred to a structural beam model.

Correspondence must be given for all basic panels.

PARAMETERS:

elno	External element number of 2D Morison, 3D Morison or pressure area element in the Morison model to which panels are linked.
selno	Sub-element number of present element in the Morison model. The sub-element selno may be 0 when the element elno is a 2D Morison beam generated by a preprocessor or when the element is a 3D Morison or pressure area element.
seltyp	Superelement number of the superelement in the panel model to which the current panels ssno1 ssno2 ... belong.
index	Superelement occurrence of seltyp
ssno	External element number of a panel to be linked to the present element and sub-element in the Morison model.
GROUP	A group of panels to be linked to the present element and sub-element in the Morison model.
ssno1	First panel number in the group
ssno2	Last panel number in the group
ssinc	Panel numbering step

Note: Only elements that are below the mean free surface can be included in the panel number list.

DEFINE ELEMENT

...	ELEMENT	2D-MORISON-ELEMENT	...
		3D-MORISON-ELEMENT	
		ANCHOR-ELEMENT	
		DRY-ELEMENT	
		POINT-MASS	
		PRESSURE-AREA-ELEMENT	
		TLP-MOORING-ELEMENT	
		END	

...	elno	node1	node2				
	GROUP	elno1	elno2	elinc	n1el1	n2el1	noinc
	END						

PURPOSE:

The command defines additional Morison elements.

Note: Additional 2D Morison elements and dry elements should not be used when load transfer is specified.

PARAMETERS:

2D-MORISON-ELEMENT	Define 2D Morison elements
3D-MORISON-ELEMENT	Define 3D Morison elements
ANCHOR-ELEMENT	Define anchor elements
DRY-ELEMENT	Define dry Morison elements
POINT-MASS	Define point masses
PRESSURE-AREA-ELEMENT	Define pressure area elements
TLP-MOORING-ELEMENT	Define TLP mooring elements for a tether system
elno	Element number of a single element
node1	Node number at one end of the element — fairlead of anchor elements

node2	Node number at the other end of the element, windlass of mooring elements. Not to be specified for 3D Morison, Point mass, TLP mooring and Pressure area elements.
GROUP	A group of elements
elno1	First element number in the group
elno2	Last element number in the group
elinc	Step in the element numbering
n1el1	Node number at one end of the first element in the group
n2el1	Node number at the other end of the first element in the group
noinc	Incremental step for node selection. The next element (elno1 + elinc) will have its nodes defined by (n1el1 + noinc) and (n2el1 + noinc)

DEFINE ENVIRONMENT

... ENVIRONMENT	CURRENT	X-AXIS		...	refno	locz	vel	dir
		WAVE-DIRECTION			END			
	FREQUENCY-HEADING-PAIRS			...				
	LINEARISING-WAVE-HEIGHT			...				
	SURFACE-MODEL			...				
	WATER-DEPTH		depth					
	WAVE-AMPLITUDE	amp						
		END						
	WAVE-DIRECTION	dir						
		END						
	WAVE-FREQUENCY	...	length	FINITE				
	WAVE-LENGTH			INFINITE				
	WAVE-PERIOD			WAVE-LENGTH-DEPENDENT				
			END					
	WAVE-SPECTRUM	...						
	WAVE-SPREADING-FUNC	USER-DEFINED			weights			
	END							

PURPOSE:

The command defines environmental data.

PARAMETERS:

CURRENT	A current profile used in Morison's equation is specified. The current velocities used are calculated by linear interpolation in the table given by this command.
X-AXIS	The current direction will be given relative to the x-axis.
WAVE-DIRECTION	The current direction will be given relative to the wave direction.
refno	Reference number of the vertical position in the current profile. Up to 30 values may be specified.
locz	Vertical position in the input coordinate system

vel	Absolute value of current velocity at given vertical position
dir	Direction of current at given vertical position given in degrees
FREQUENCY-HEADING-PAIRS	Frequency heading pairs used in the computation of sum and difference forces will be defined.
LINEARISING-WAVE-HEIGHT	Specification of wave linearisation curves
SURFACE-MODEL	Surface model will be defined.
WATER-DEPTH	Specification of water depth
depth	Water depth
WAVE-AMPLITUDE	Specification of wave amplitude used in the time domain output format
amp	Wave amplitude value
WAVE-DIRECTION	Specification of wave heading
dir	Wave heading in degrees. The angle between the positive x-axis of the global coordinate system and the direction of wave propagation.
WAVE-LENGTH	Specification of wave lengths
WAVE-FREQUENCY	Specification of wave frequencies
WAVE-PERIOD	Specification of wave periods
length	Wave length, period or frequency
FINITE	Finite water depth is used for calculation of Green's functions. This option is recommended. Note: FINITE / INFINITE must be given for all wave lengths/frequencies/periods but the option specified for the first one will be used for all.
INFINITE	Infinite water depth approximation used for calculation of Green's functions Note: If INFINITE is specified a large value (at least larger than the longest wave length) must be given for the WATER-DEPTH.
WAVE-LENGTH-DEPENDENT	This option is no longer supported and will be substituted by FINITE if used.

WAVE-SPECTRUM	Specification of wave spectrum for each heading (wave direction)
WAVE-SPREADING	Specification of wave spreading
USER-DEFINED	User definition is currently the only option for specifying wave spreading.
weights	Weights given one-by-one for all wave directions. The weights must add up to 1. If at least one value is 1.0 then long crested sea is assumed for all wave directions.
	Note: Roll damping iteration requires long crested sea so in this case at least one weight must be given as 1.0.

DEFINE ENVIRONMENT FREQUENCY-HEADING-PAIRS

...	FREQUENCY-HEADING-PAIRS	...
...	SUM-FREQUENCIES	ALL-COMBINATIONS
	DIFFERENCE-FREQUENCIES	SELECTED-COMBINATIONS ...
	END	

PURPOSE:

The command defines pairs of frequencies and headings for the computation of second-order sum and difference frequency forces.

PARAMETERS:

SUM-FREQUENCIES	Defining sum frequency combinations.
DIFFERENCE-FREQUENCIES	Defining difference frequency combinations.
ALL-COMBINATIONS	All the combinations of frequencies and headings specified with the ENVIRONMENT WAVE-DIRECTION and WAVE-LENGTH commands will be used to define pairs of frequencies and headings for sum and difference frequency forces.
SELECTED-COMBINATIONS	This option does not work.

NOTES:

If statistical postprocessing by Postresp is to be performed then both SUM-FREQUENCIES and DIFFERENCE-FREQUENCIES must be specified. Furthermore, the wave components specified (at least two) in DEFINE ENVIRONMENT must be equally spaced with respect to frequencies.

DEFINE ENVIRONMENT LINEARISING-WAVE-HEIGHT

...	LINEARISING-WAVE-HEIGHT	nlin	...
-----	-------------------------	------	-----

For each wave direction give:

...	tlin-1	hlin-1	tlin-2	hlin-2	...	tlin-nlin	hlin-nlin
-----	--------	--------	--------	--------	-----	-----------	-----------

PURPOSE:

This command must be used if the regular wave linearisation method is to be used. The linearising wave periods and heights describe the curve in the T-H-space to be used for the drag force linearisation. The periods used in the motion analysis will be used to interpolate on this curve. The curves are given individually for the wave directions.

For computing maximum motion response hlin will correspond to the maximum wave height according to maximum steepness or Hmax-Tmax-contour curves. tlin and hlin must be given in pairs. For the next wave direction enter a new sequence of tlin and hlin data. The same number of pairs (nlin) are used for all wave directions.

PARAMETERS:

nlin	Number of points on the T-H-curves for all wave directions. Maximum = 20.
tlin-1 tlin-2 ... tlin-nlin	tlin is the linearising wave period
hlin-1 hlin-2 ... hlin-nlin	hlin is the linearising wave height

DEFINE ENVIRONMENT SURFACE-MODEL

...	SURFACE-MODEL	SIF	prefix	topsel	radius	ntcl
		WAMIT	filename			

PURPOSE:

The command defines the surface model for the second order sum- and difference frequency computation. The free surface model shall have the same symmetry properties as the panel model.

PARAMETERS:

SIF	The surface model is found on an Input Interface File.
prefix	File prefix or directory where the file(s) are stored.
topsel	Top superelement number of the surface model.
radius	Dimensional radius of the partition circle given in the same units as the model length unit.
ntcl	The total number of segments (panels) on the partition circle.

Note: The radius and ntcl parameters are dummy in the case of Wave Drift Damping.

WAMIT	The surface model is represented on the WAMIT free surface format described below.
filename	The name of the WAMIT free surface file (without the mandatory extension .FDF)

NOTES:

The WAMIT free surface format is defined as follows:

```

header
PARTR
NPF NTCL
NAL DELR NCIRE NGSP
VERX(1,1) VERX(2,1) VERX(3,1) VERX(4,1)
VERY(1,1) VERY(2,1) VERY(3,1) VERY(4,1)
:
VERX(1,NPF) VERX(2,NPF) VERX(3,NPF) VERX(4,NPF)
VERY(1,NPF) VERY(2,NPF) VERY(3,NPF) VERY(4,NPF)

```

PARTR is the dimensional radius R of the partition circle measured in the same units as the characteristic length. The partition circle must enclose the body. It should be determined according to the decaying rate of local waves. An appropriate approximation is $R \sim O(h)$ (h is water depth) for shallow water and $R \sim O(\lambda)$ (λ =longest wavelength involved) for deep water ($h \gg \lambda$). The actual constants of proportionality R/λ may have to be substantially larger than one to achieve accuracy in deep water.

- NPF is the total number of panels on the free surface.

- NTCL is the total number of segments (panels) on the partition circle.
- NAL is the number of annuli in intermediate region (may be 0)
- DELR is the radial increment for each annulus
- NCIRE is the number of nodes in the azimuthal integration in each annulus is $2^{NCIRE+1}$
- NGSP is the number of nodes in radial integration on each annulus
- VERX(K,I), K=1,4 is the dimensional x coordinate of the K-th vertex of the I-th panel
- VERY(K,I), K=1,4 is the dimensional y coordinate of the K-th vertex of the I-th panel

DEFINE ENVIRONMENT WAVE-SPECTRUM

...	WAVE-SPECTRUM	JONSWAP	hs	tz-or-tp	gam	sig	sigb
		PIERSON-MOSKOWITZ	hs	tz			
		TORSETHAUGEN	hs	tp			

PURPOSE:

The command specifies the wave spectra to be used for the wave directions. The wave directions must already have been defined (DEFINE ENVIRONMENT WAVE-DIRECTION). The spectra are given for the directions one-by-one.

PARAMETERS:

JONSWAP	Use wave spectrum of type JONSWAP
PIERSON-MOSKOWITZ	Use wave spectrum of type Pierson-Moskowitz
TORSETHAUGEN	Use wave spectrum of type Torsethaugen
hs	Significant wave height
tz-or-tp	Relevant for JONSWAP spectrum only: tz-or-tp > 0: Zero up-crossing wave period (tz = tz-or-tp) tz-or-tp < 0: Peak spectral wave period (tp = tz-or-tp)
gam	Peak enhancement factor for JONSWAP
sig	Left width parameter for JONSWAP
sigb	Right width parameter for JONSWAP
tp	Peak spectral period for Torsethaugen

NOTES:

Either long- or short-crested waves may be used for roll motion. When short-crested wave are used only one main wave direction can be run.

In a subsequent Postresp run the same wave spectra and spreadings must be used to obtain consistent results.

DEFINE GENERAL

...	GENERAL	ANALYSIS-MODELS	...
		CONSTANTS	
		EXECUTION-DIRECTIVES	
		GLOBAL-MATRICES	
		MULTI-BODY	
		OFFBODY-POINTS	
		PANEL-PRESSURE	
		ROLL-DAMPING-MODEL	
		SECTIONAL-LOADS	
		TANK-PRESSURE	
		TEXT	
		END	

PURPOSE:

The command defines general parameters such as execution directives for Wadam.

DEFINE GENERAL ANALYSIS-MODELS

...	ANALYSIS-MODELS	MASS-MODEL	DISTRIBUTED-MASS			
			GLOBAL-MASS-MATRIX	GENERATE	topsel	
				USER-SPECIFIED	...	
		MORISON-MODEL		topsel		
		SINK-SOURCE-MODEL		topsel		
		STRUCTURAL-MODEL		topsel		
		END				

...	xg	yg	zg	xrad	yrad	zrad	xyrad	xzrad	yzrad	tmass
-----	----	----	----	------	------	------	-------	-------	-------	-------

PURPOSE:

The command defines the various analysis models.

PARAMETERS:

MASS-MODEL	To specify the mass input information.
MORISON-MODEL	To specify the Morison model to be used.
SINK-SOURCE-MODEL	To specify the panel model to be used.
STRUCTURAL-MODEL	To specify the structural model to be used.
topsel	Top superelement number
DISTRIBUTED-MASS	A distributed mass formulation will be used. The mass distribution is defined by the Morison model.
GLOBAL-MASS-MATRIX	A global mass formulation will be used.
GENERATE	The global mass matrix will be generated by Wadam from the mass model.
USER-SPECIFIED	The global mass matrix will be specified directly by the user.
xg	The x-coordinate of the centre of gravity in the input coordinate system.
yg	The y-coordinate of the centre of gravity in the input coordinate system.
zg	The z-coordinate of the centre of gravity in the input coordinate system.

xrad	Radius of gyration (square root of the moment of inertia divided by total mass) about an axis parallel with the input x-axis and through the motion reference point.
yrad	Radius of gyration about an axis parallel with the input y-axis and through the motion reference point.
zrad	Radius of gyration about an axis parallel with the input z-axis and through the motion reference point.
xyrad	The negative of the specific product of inertia (The negative of the product of inertia divided by total mass) about axis parallel with the input x- and y-axis and through the motion reference point.
xzrad	Negative specific product of inertia about axis parallel with the input x- and z-axis and through the motion reference point.
yzrad	Negative specific product of inertia about axis parallel with the input y- and z-axis and through the motion reference point.
tmass	Total mass of the body.

NOTES:

See also DEFINE GENERAL GLOBAL-MATRIX for definition of user specified global mass matrices.

DEFINE GENERAL CONSTANTS

...	CONSTANTS	cleng	rho	grav	amp	zloc	vol1	ar1	vcb1
-----	-----------	-------	-----	------	-----	------	------	-----	------

PURPOSE:

The command defines general constants used in the analysis.

PARAMETERS:

cleng	Characteristic length for the hydrodynamic model
rho	Density of sea water (in SI-units: 1025 kg/m3).
grav	Constant of gravity (in SI-units: 9.81 m/s2).
amp	Linearising velocity for the viscous drag. This should be a representative relative velocity between the structure and the fluid.
zloc	The z-coordinate of the origin of the input coordinate system. zloc is negative if the origin of the input coordinate system is below still water level.
vol1	Not used. A dummy value must be given.
ar1	Not used. A dummy value must be given.
vcb1	Not used. A dummy value must be given.

DEFINE GENERAL EXECUTION-DIRECTIVES

...	EXECUTION-DIRECTIVES	ANALYSIS-TYPE	...
		DETERMINISTIC-MORISON	
		DRAG-LINEARISATION	
		DRIFT-FORCES	
		FIXED-FLOATING	
		HORIZONTAL-DRIFT	
		MORISON-EQUATION	
		OUTPUT-FORMAT	
		POTENTIAL-THEORY	
		PRINT-SWITCH	
		RESULT-FILES	
		SAVE-RESTART	
		SECOND-ORDER-RESULTS	
		TOLERANCES	
		WAVE-DRIFT-DAMPING	
		END	

PURPOSE:

The command defines control parameters for execution of Wadam.

DEFINE GENERAL EXECUTION-DIRECTIVES ANALYSIS-TYPE

...	ANALYSIS-TYPE	DATACHECK
		GLOBAL-RESPONSE
		STRUCTURAL-LOADS

PURPOSE:

The command defines the calculation type.

PARAMETERS:

DATACHECK	Only data check and hydrostatic calculation will be performed.
GLOBAL-RESPONSE	Global response calculation will be performed.
STRUCTURAL-LOADS	Global response and detailed load calculation will be performed.

DEFINE GENERAL EXECUTION-DIRECTIVES DETERMINISTIC-MORISON

...	DETERMINISTIC-MORISON		...	
...	DIFFRACTED-WAVE	...	NONLINEAR-DRAG	STILL-WATER-LEVEL
	INCIDENT-WAVE			FINITE-WAVE-ELEVATION
			LINEAR-DRAG	

PURPOSE:

The command defines parameters for use in deterministic Morison calculation. This option is available with the time domain output format.

PARAMETERS:

DIFFRACTED-WAVE	Velocity and acceleration due to the diffracted wave are used in Morison's equation. Radiation-diffraction theory must be used for parts of the structure.
INCIDENT-WAVE	Velocity and acceleration due to the incident wave are used in Morison's equation.
LINEAR-DRAG	Linearised drag formulation is used in Morison's equation with the linearised velocity given and amp defined by the DEFINE GENERAL CONSTANTS command.
NONLINEAR-DRAG	Non-linear drag formulation is used in Morison's equation.
STILL-WATER-LEVEL	Loads will be calculated up to still water level.
FINITE-WAVE-ELEVATION	Loads will be calculated up to finite wave elevation.

DEFINE GENERAL EXECUTION-DIRECTIVES DRAG-LINEARISATION

...	DRAG-LINEARISATION	durhr-trac	rotc	maxit
-----	--------------------	------------	------	-------

PURPOSE:

This command is used for two different purposes:

Case 1: Drag linearisation.

This can be stochastic linearisation if combined with the commands DEFINE ENVIRONMENT WAVE-SPECTRUM and DEFINE ENVIRONMENT WAVE-SPREADING-FUNCTION or regular wave linearisation if combined with the command DEFINE ENVIRONMENT LINEARISING-WAVE-HEIGHT.

Case 2: Roll damping.

When used together with the command DEFINE GENERAL ROLL-DAMPING-MODEL the command is used to specify that the roll angle iteration is to be performed. The maximum roll angle estimates (thmd values on DEFINE GENERAL ROLL-DAMPING-MODEL MAXIMUM-ROLL-ANGLE) are then used as start values in the iteration process.

If this command is not specified it is assumed that the input thmd-values are used as estimates according to the traditional method, hence no iteration will be performed.

PARAMETERS:

durhr-trac	When drag linearisation is applied to the roll damping model this parameter is the duration of the sea state in hours (typically 3). It used to calculate the maximum roll angle from the standard deviation as the most probable largest value assuming a Rayleigh distribution.
	When drag linearisation is applied to the Morison model this parameter is the convergence criterion for the translational modes.
rotc	Convergence criterion for the roll mode in case of roll damping model and for all angular modes in case of Morison model. It is given in percentage of the consecutive error. Default = 0.1 %.
maxit	Maximum number of iterations in the drag linearisation. Default = 10, maximum allowed = 19.

NOTES:

Since there is only room for one command of this type iterative drag-linearisation and roll damping cannot be used in the same Wadam run.

DEFINE GENERAL EXECUTION-DIRECTIVES DRIFT-FORCES

...	DRIFT-FORCES	YES
		NO

PURPOSE:

The command defines whether second order mean drift forces in six degrees of freedom shall be calculated or not. These forces are computed by pressure integration, hence this method may be used to compute the drift forces on each body in a multi-body analysis.

PARAMETERS:

YES Second order mean drift forces will be calculated.

NO Second order mean drift forces will not be calculated.

NOTE:

Computation of drift forces by pressure integration requires a much finer discretisation to converge than the computation of drift forces by far field integration (HORIZONTAL-DRIFT). Also the CPU-cost for a given discretisation increases by a factor of 2 when this option is included.

DEFINE GENERAL EXECUTION-DIRECTIVES FIXED-FLOATING

...	FIXED-FLOATING	FIXED	XZ-PLANE		
			YZ-PLANE		
			YZ-XZ-PLANE		
			NONE		
		FLOATING	XZ-PLANE	...	YES
			YZ-PLANE		
			YZ-XZ-PLANE		NO
			NONE		

PURPOSE:

The command specifies the structure to be fixed or floating as well as symmetry plane(s).

PARAMETERS:

FIXED	Fixed structure, only exciting and drift forces may be calculated.
FLOATING	Floating structure, added mass and damping is calculated and the equation of motion is solved. Answer YES or NO to whether natural periods (eigenvalues) for rigid body degrees of freedom shall be computed or not.
XZ-PLANE	The panel model has the xz-plane as its symmetry plane.
YZ-PLANE	The panel model has the yz-plane as its symmetry plane.
YZ-XZ-PLANE	The panel model has both the yz-plane and xz-plane as symmetry planes.
NONE	The panel model has no planes of symmetry.

NOTE:

No panel may have more than two nodes in the free surface or at the sea bed. In addition no panel must have more than one node in a plane of symmetry.

DEFINE GENERAL EXECUTION-DIRECTIVES HORIZONTAL-DRIFT

...	HORIZONTAL-DRIFT	YES
		NO

PURPOSE:

The command defines whether second order mean horizontal drift forces shall be calculated or not. This computation give the surge and sway force and yaw moment. The forces are computed by far field integration, hence in a multi-body case this will only give the total drift force on all bodies. If drift forces on individual bodies in a multi-body problem is wanted the similar command DRIFT-FORCES must be given.

PARAMETERS:

- YES Second order mean horizontal drift forces will be calculated.
- NO Second order mean horizontal drift forces will not be calculated.

DEFINE GENERAL EXECUTION-DIRECTIVES MORISON-EQUATION

...	MORISON-EQUATION	...
-----	------------------	-----

PURPOSE:

This command is currently not in use.

DEFINE GENERAL EXECUTION-DIRECTIVES OUTPUT-FORMAT

...	OUTPUT-FORMAT	FREQUENCY-DOMAIN				
		TIME-DOMAIN	phase			
			GROUP	phf	phl	inc

PURPOSE:

The command defines the domain in which the results from Wadam shall be given. This concerns both results on the print file and loads on the Loads Interface File.

PARAMETERS:

FREQUENCY-DOMAIN

All results will be presented as complex values.

TIME-DOMAIN

All results will be presented as real values for a set of phase angles. When the TIME-DOMAIN format is specified wave amplitudes must be specified by the DEFINE ENVIRONMENT WAVE-AMPLITUDE command.

phase

Phase angle(s) for which the results are given. Up to 8 phase angles may be specified. The specified phase angles will be used for all wave directions.

GROUP

Phase angles given as a group. Using this option Wadam may handle up to 14 phase angles in the same run.

phf

First phase angle in the group.

phl

Last phase angle in the group.

inc

Increment between the phase angles.

DEFINE GENERAL EXECUTION-DIRECTIVES POTENTIAL-THEORY

...	POTENTIAL-THEORY	EQUATION-SOLUTION	DIRECT	
			ITERATION	
		IRREGULAR-FREQUENCY	NO-REMOVAL	
			REMOVE	alpha
		LOGARITHM-SINGULARITY	NUMERICAL	
			ANALYTICAL	
		NUMERICAL-INTEG-TYPE	ONE-NODE-GAUSSIAN	
			FOUR-NODE-GAUSSIAN	
		PANEL-DIMENSION	AREA	
			MAXIMUM-DIAGONAL	
		END		

PURPOSE:

The command defines execution directives for solving the radiation-diffraction problem in Wadam.

PARAMETERS:

EQUATION-SOLUTION	Specify in which way the equation system shall be solved.
DIRECT	Equation system solved by direct method. This is the recommended option when number of panels is less than 2000.
ITERATION	Equation system solved by iteration (default).
IRREGULAR-FREQUENCY	Specify whether irregular frequencies shall be removed or not.
NO-REMOVAL	Do not remove irregular frequencies (default).
REMOVE	Remove irregular frequencies.
alpha	Not used. A dummy value must be given.
LOGARITHM-SINGULARITY	Specify numerical or analytical integration of the logarithmic singularities of the Green's function.
NUMERICAL	Gauss quadrature is used (numerical integration) (default).
ANALYTICAL	The logarithmic singularities are integrated analytically.
NUMERICAL-INTEG-TYPE	Specify type of numerical integration of Green's function and its derivatives.

ONE-NODE-GAUSSIAN	Single-node Gauss quadrature is used (default).
FOUR-NODE-GAUSSIAN	Four-node Gauss quadrature is used.
PANEL-DIMENSION	Specify the panel dimension to which the distance between the panel centroids are compared in determining those pairs of panels where the above analytical integration is required.
AREA	Square root of the panel areas are used (default).
MAXIMUM-DIAGONAL	The maximum diagonal of the panels are used.

NOTES:

The direct solver is switched to a block-iterative solver if the number of panels is larger than the maximum allowed in-core matrix size. This parameter is found as the fourth number on the WWAMOPT card in the Wadam*.FEM file (last card on the file before IEND). The default value is 2000. If you have more than 2000 panels and a computer with sufficient memory consider increasing this number to some number larger than the number of panels. The direct solver is quite competitive even for much more than 2000 panels. The block-iterative solver is always slower than the fully iterative solver, but it is more robust.

The option IRREGULAR-FREQUENCY REMOVE will increase the number of panels since additional panels on the 'interior free surface' is automatically added.

The AREA/MAXIMUM-DIAGONAL options are only relevant in combination with the ANALYTICAL option. If the panels are very elongated we recommend to use ANALYTICAL + MAXIMUM-DAIGONAL. This is always a more robust option, but gives a moderate increase in CPU-time.

DEFINE GENERAL EXECUTION-DIRECTIVES PRINT-SWITCH

...	PRINT-SWITCH	DUMP-OF-LOAD-DISTRIBUTION
		DUMP-OF-LOAD-TRANSFER
		DUMP-OF-MODEL-DATA
		MAXIMUM-PRINT
		NO-EXTRA-PRINT
		NORMAL-PRINT

PURPOSE:

The command sets Wadam print switches. Note that a print switch other than NO-EXTRA-PRINT and NORMAL-PRINT may result in large output print files.

Note: The print switches are referred to as print level numbers in the table of contents of the Wadam print file (Wadam#.LIS).

PARAMETERS:

DUMP-OF-LOAD-DISTRIBUTION	Detailed load distribution in addition to dump of model data (level 3). In addition more load sums and details of the mass distribution is printed.
DUMP-OF-LOAD-TRANSFER	Detailed loading on all elements in the Morison model in addition to the dump of load transfer (level 4)
DUMP-OF-MODEL-DATA	Detailed model data in addition to normal print (level 2)
MAXIMUM-PRINT	Maximum print value (level 5). This gives an extensive amount of maintenance print relevant only for debugging purposes.
NO-EXTRA-PRINT	Minimum amount of print (level 0). This is the default. Almost only results from the data check are printed.
NORMAL-PRINT	Normal amount of print (level 1). This is the most commonly used level. This option includes print of hydrodynamic coefficients, rigid body motion and sectional loads.

DEFINE GENERAL EXECUTION-DIRECTIVES RESULT-FILES

...	RESULT-FILES	...
-----	--------------	-----

...	GLOBAL-RESPONSE	NONE				
		SIF-FORMATTED				
		SIN-NORSAM				
		SIU-UNFORMATTED				
	LOAD-TRANSFER-OPT	FILE-FORMAT	FORMATTED			
			UNFORMATTED			
		GRAVITY-LOAD	lcn			
			NO-GRAVITY-LOAD			
		HYDRO-DYNAMIC-LOAD	lcn			
			NO-DYNAMIC-LOAD			
		HYDRO-STATIC-LOAD	lcn			
			NO-STATIC-LOAD			
		INERTIA-LOAD	lcn			
			NO-ACCELERATIONS			
		INERTIA-RELIEF	ON			
			OFF			
		LOAD-SYMMERY	NO-SYMMETRY			
			ONE-PLANE-SYM	XZ-PLANE	...	ANTI
				YZ-PLANE		BOTH
			TWO-PLANE-SYM			SYMM
		OFFSET-IN-LOAD-CASE-N	lcn			
			AUTOMATIC			
		TANK-PRESSURE	ON			
			OFF			
		WAVE-STRETCHING	ON			
			OFF			
		END				
	STRUCTURAL-LOADS	BEAM-STRUCTURAL-MOD	anc	add	stalo	
		COMPOSITE-STRUCTURAL	stalo			
		SHELL-STRUCTURAL-MOD	stalo			
	END					

PURPOSE:

The command specifies which analysis results files to generate and their contents.

PARAMETERS:

GLOBAL-RESPONSE	Generation of a Hydrodynamic Results Interface File.
NONE	No Hydrodynamic Results Interface File will be generated.
SIF-FORMATTED	The global responses will be written to a sequential formatted Hydrodynamic Results Interface File named Gn.SIF.
SIN-NORSAM	The global responses will be written to a direct access Hydrodynamic Results Interface File named Gn.SIN.
SIU-UNFORMATTED	The global responses will be written to a sequential unformatted Hydrodynamic Results Interface File named Gn.SIU.
LOAD-TRANSFER-OPTION	To specify load cases, load case options and format of the Loads Interface Files. Except for FILE-FORMAT this option can only be used for shell models.
FILE-FORMAT	Specify format of the Loads Interface File.
FORMATTED	The generated Loads Interface Files will be formatted.
UNFORMATTED	The generated Loads Interface Files will be unformatted.
GRAVITY-LOAD	Set load case number for the gravity load. It is not recommended to use this option.
lcn	Global load case number to start off each load type. If zero, Wadam will set load cases numbers according to the type of analysis which have been specified.
NO-GRAVITY-LOAD	The static load written to the Loads Interface File will not include gravity.
HYDRO-DYNAMIC-LOAD	Set start load case number for the hydrodynamic loads. It is not recommended to use this option.
NO-DYNAMIC-LOAD	No hydrodynamic loads will be written to the Loads Interface File.
HYDRO-STATIC-LOAD	Set load case number for the hydrostatic load. It is not recommended to use this option.
NO-STATIC-LOAD	No hydrostatic load will be written to the Loads Interface File.
INERTIA-LOAD	Set start load case number for the inertia loads. It is not recommended to use this option.

NO-ACCELERATIONS	No inertia loads will be written to the Loads Interface File.
INERTIA-RELIEF	Switch inertia relief ON or OFF
LOAD-SYMMETRY	Specify type of symmetry.
NO-SYMMETRY	No symmetric or antisymmetric loads will be calculated.
ONE-PLANE-SYM	Symmetric and/or antisymmetric loads about the XZ- or YZ-PLANE
XZ-PLANE	XZ-plane symmetry will be generated.
YZ-PLANE	YZ-plane symmetry will be generated.
ANTI	Antisymmetric loads will be generated.
BOTH	Both symmetric and antisymmetric loads will be generated.
SYMM	Symmetric loads will be generated.
TWO-PLANE-SYM	Symmetric and/or antisymmetric load about both the XZ- and the YZ-plane will be generated.
OFFSET-IN-LOAD-CASE-NUMBERS	Lowest load case number used by Wadam when generating loads for the Loads Interface Files
AUTOMATIC	The load case numbers used by Wadam will start with the highest load case number found on each Input Interface File for each superelement type of the structural model plus one. This option cannot be used in connection with fatigue calculations (the S-file will then not be created).
TANK-PRESSURE	Switch ON or OFF calculation of tank pressure when transferring pressures to the Loads Interface Files.
WAVE-STRETCHING	Switch ON or OFF calculation of wave pressures to finite water surface by stretching when transferring pressures to the Loads Interface Files. This option is valid only for time domain.
STRUCTURAL-LOAD	To specify generation of Loads Interface Files.
BEAM-STRUCTURAL-MODEL	Loads Interface Files (Ln.FEM) will be generated with loads on a beam structural model.
anc	Answer YES or NO to whether the static and dynamic mooring forces shall be included in the loads written to the Loads Interface File (default).
add	Answer YES or NO to writing added mass (from wet beams and 3D Morison elements only) as separate inertia forces (for structural dynamics) on the Loads Interface Files. Answer NO involves that added mass is only included in added mass force.

stalo

Answer YES or NO to writing both static and dynamic loads on the Loads Interface Files. Answer NO involves that only dynamic loads are written.

COMPOSITE-STRUCTURAL-MODEL

Loads Interface Files (Ln.FEM) will be generated with loads on a combined beam and shell/solid structural model. In this case the shell/solid model is specified as the structural model. The beam model is assumed identical to the Morison model.

SHELL-STRUCTURAL-MODEL

Loads Interface Files (Ln.FEM) will be generated with loads on a shell/solid structural model.

DEFINE GENERAL EXECUTION-DIRECTIVES SAVE-RESTART

...	SAVE-RESTART	AUTO-SAVE-RESTART
		NO-SAVE-RESTART
		RESTORE-POTENTIAL-SOLUTION
		SAVE-POTENTIAL-SOLUTION

PURPOSE:

The command specifies use of save and restart facilities in Wadam.

PARAMETERS:

AUTO-SAVE-RESTART	Wadam will automatically restart and append new calculated data to an existing save-file, otherwise Wadam will create a new save-file.
NO-SAVE-RESTART	No saving, no restart, this is the default option.
RESTORE-POTENTIAL-SOLUTION	Restore the radiation-diffraction solution for the panel model.
SAVE-POTENTIAL-SOLUTION	Save the radiation-diffraction solution for the panel model.

DEFINE GENERAL EXECUTION-DIRECTIVES SECOND-ORDER-RESULTS

...	EXECUTION-DIRECTIVES	SECOND-ORDER-RESULTS					...
-----	----------------------	----------------------	--	--	--	--	-----

...	MODES	dof1	dof2	dof3	dof4	dof5	dof6
	QUADRATIC-SECOND-ORDER-FORCES	...	ON				
	FORCE-BY-INDIRECT-METHOD						
	FORCE-BY-DIRECT-METHOD						
	PRESSURE-ON-BODY	...	OFF				
	PRESSURE-IN-FLUID						
	WAVE-ELEVATION						
	NO-COMPUTATION						
	END						

PURPOSE:

The command defines the second-order calculation types for the sum and/or difference frequencies defined on the DEFINE ENVIRONMENT FREQUENCY-HEADING-PAIRS command.

PARAMETERS:

MODES	Specify which degrees of freedom shall be computed.
dof1 dof2 dof3 dof4 dof5 dof6	ON/OFF for each of the six degrees of freedom.
QUADRATIC-SECOND-ORDER-FORCES	Compute (ON) the quadratic second order forces.
FORCE-BY-DIRECT-METHOD	Compute (ON) second-order forces by direct method.
FORCE-BY-INDIRECT-METHOD	Compute (ON) second-order forces by indirect method.
	Note: Always use FORCE-BY-INDIRECT-METHOD ON when second-order results are wanted.
PRESSURE-ON-BODY	Compute (ON) second-order pressure on the body.
PRESSURE-IN-FLUID	Compute (ON) second-order pressure in the fluid domain (output only in Wamit format).
WAVE-ELEVATION	Compute (ON) second-order wave elevation (output only in Wamit format).

NO-COMPUTATION

Restriction: The program will currently compute all MODES irrespective of the specifications in this command.

DEFINE GENERAL EXECUTION-DIRECTIVES TOLERANCES

...	TOLERANCES	COMPUTED-TOLERANCES	tolwl	tolcg	distol	angtol
		CRITICAL-WAVE-LENGTH	wave			
		END				

PURPOSE:

The command sets user defined tolerances for the analysis. distol and angtol are tolerances on geometrical matching between elements of the shell/solid structural model and panels of the panel model. If exceeded by the 25 closest panels no pressure load is transferred to the structural element in question.

PARAMETERS:**COMPUTED-TOLERANCES**

Computed tolerances is used by Wadam in different internal checks to verify the consistency of the input model and various parameters.

tolwl

Tolerance on the computed z-coordinate of the water line as a percentage of the characteristic length. If this tolerance is exceeded the program stops.

tolcg

Tolerance on the horizontal distances between the centre of gravity and the centre of buoyancy (measured along the coordinate axes x and y) as a percentage of the characteristic length. If this tolerance is exceeded the program stops.

distol

Marginal difference between the area of the panel and the area of the triangles defined by the vertices of the panel model and the geometric centre of the structural element surface (in percent of the panel area).

angtol

Maximum angle between the normal vectors of the panel model and the structural element surface given in degrees.

CRITICAL-WAVE-LENGTH

This option does not function as initially planned (and as indicated by the option name). The given wave length must be larger than all given wave lengths.

wave

Wave length larger than all given wave lengths.

DEFINE GENERAL EXECUTION-DIRECTIVES WAVE-DRIFT-DAMPING

...	WAVE-DRIFT-DAMPING	YES
		NO

PURPOSE:

The command defines whether the 3x3 Wave Drift damping matrix (for the modes surge, sway and yaw) shall be calculated or not.

PARAMETERS:

YES Wave Drift damping matrix will be calculated.

NO Wave Drift damping matrix will not be calculated (Default).

NOTES:

Wave Drift damping, like Drift forces, require a finer mesh for convergence than other global results.

Computation of Wave Drift damping requires a free surface model.

DEFINE GENERAL GLOBAL-MATRICES

...	GLOBAL-MATRICES	CRITICAL-DAMPING-MATRIX		delem	frac		
				END			
		DAMPING-MATRIX	wavlen		elem	damp	
					END		
			INDEPENDENT		elem	damp	
					END		
		MASS-MATRIX	ibody	jbody	elem	mass	
			END				
		RESTORING-MATRIX	elem	rest			
			END				
		USE-OF-INPUT-MAT	DAMPING-MATRIX			ADD	
						OVERWRITE	
			END				
		END					

PURPOSE:

The command defines additional global matrices to be used in Wadam. The matrices will be added to matrices calculated by Wadam, with a possible exception for the damping matrix where the user specifies whether it is to be added to or replace the matrix computed by Wadam. If for instance mooring forces are given through anchor elements and the user specifies a restoring matrix both will contribute to the total restoring forces. The matrix is by default a zero matrix. The user must only specify those matrix elements which are different from zero. There is no assumption of symmetry, so all non-zero elements must be specified on both side of the diagonal. The global matrices will not contribute to distributed loads and sectional loads.

Additional or alternative global damping matrix based on the critical damping of the system in question may be generated or the user may alternatively specify it directly. User specified damping matrices will be added to the critical damping matrix.

Note that the specification of global-mass matrices is available for a multiple body system. If a single system shall be analysed this command may still be used. However giving body identification number equal to 1. Only the body mass matrices are available in a multi body system. Hence no mechanical coupling matrices between the bodies can be specified.

For body 2, 3 aso. in a multi-body system the MASS-MATRIX command is the only available way to specify the mass data.

All matrices are to be given in the Body Coordinate system (see Section 2.1.7). For single body computations the Body Coordinate system is identical to the Global system.

PARAMETERS:

CRITICAL-DAMPING-MATRIX	Information related to generation of damping matrices based on critical damping will be given.
delem	Diagonal element for which the fraction of critical damping will be specified = 11,...,66 (only the diagonal entries may be given).
frac	Fraction of critical damping of the degree of freedom in question. Default values are zero.
DAMPING-MATRIX	A damping matrix, frequency (wave length) dependent or not will be given.
MASS-MATRIX	One mass matrix for each body may be specified.
RESTORING-MATRIX	A restoring matrix will be given.
INDEPENDENT	A frequency independent matrix is specified.
wavlen	Wave length/period/frequency for which a frequency dependent matrix will be specified. The wave length/period/frequency must be specified by the DEFINE ENVIRONMENT command beforehand.
elem	Selected element in the 6x6 matrix. This element number must be given as 11, 12, 13, ... 16, 21, ... 66.
damp	Actual damping value for given element.
rest	Actual restoring value for given element.
ibody	Body identification of body number i.
jbody	Body identification of body number j.
mass	Actual mass for body no. i and body no. j for given element.
USE-OF-INPUT-MAT	The use of input global matrices will be specified. By default the input matrices including any generated critical damping matrices will be added to the corresponding matrices calculated by Wadam.
ADD	The input matrices in question will be added to the corresponding matrices calculated by Wadam.
OVERWRITE	The input matrices in question will overwrite the corresponding matrices calculated by Wadam.

NOTES:

This command may create imbalance in the loads for a load transfer analysis. This may also lead to inaccurate or erroneous sectional loads due to lack of detailed information.

DEFINE GENERAL MULTI-BODY

...	MULTI-BODY	MODELS	...
		STRUCTURE-IDENTIFICATION	
		END	

PURPOSE:

The command defines multiple body parameters. If any of this data is specified some of the single body related data specified elsewhere will be neglected by Wadam.

These are:

- Sink-source (or panel) model specified using DEFINE GENERAL ANALYSIS-MODELS
- Symmetry plan definition using DEFINE GENERAL EXECUTION-DIRECTIVES
- Characteristic length using DEFINE GENERAL CONSTANT
- Calculation of sectional loads by using DEFINE GENERAL SECTIONAL-LOADS

DEFINE GENERAL MULTI-BODY MODELS

...	MODELS	body	PANEL-MODEL	direc	topsel	xm	ym	zm	delta	XZ-PLANE
										YZ-PLANE
										YZ-XZ-PLANE
										NONE
		END								

PURPOSE:

The command is used for two purposes:

- Definition of the analysis model for each body by their prefix and superelement number.
Presently only the panel models may have multiple body specification. The other analysis models shall be specified using the DEFINE GENERAL ANALYSIS-MODELS command and the DEFINE GENERAL GLOBAL-MATRICES MASS-MATRIX command.

- Reading of panel model from Wamit gdf-files. (Multi-body panel models cannot presently be interpreted from the gdf format.)

Note that the definition of symmetry plane and zm will override equivalent information specified with other Prewad commands. Furthermore, the WADAMn.FEM file created by Prewad must be manually edited by altering the third parameter (the fourth field counting the record name field) of the HYDMODID record from 1. to 11.

PARAMETERS:

body	Body identification number. Note that the body numbers must be consecutively ordered. In case of reading gdf-files this parameter must be 1.
PANEL-MODEL	Panel model used in the hydrodynamic analysis.
direc	File prefix, or directory where the file(s) are stored. In case of reading gdf-file this is the file name of the Wamit gdf-file without the .gdf extension.
topsel	Top superelement number. In case of reading gdf-file this parameter is not used.
xm	X-coordinate of the origin of the input coordinate system given in the body coordinate system.
ym	Y-coordinate of the origin of the input coordinate system given in the body coordinate system.

zm	Z-coordinate of the origin of the input coordinate system given in the body coordinate system.
delta	Angle between the input x-axis and the body x-axis in degrees. The angle is given from the input x-axis to the body x-axis. Positive direction is counter-clockwise.
XZ-PLANE	The panel model has the xz-plane as its symmetry plane.
YZ-PLANE	The panel model has the yz-plane as its symmetry plane.
YZ-XZ-PLANE	The panel model has both the yz-plane and xz-plane as symmetry planes.
NONE	The panel model has no planes of symmetry.

DEFINE GENERAL MULTI-BODY STRUCTURE-IDENTIFICATION

...	STRUCTURE-IDENTIFICATION						...
...	body	cleng	xb	yb	zb	delta	ORIGIN-OF-BODY
	END						

PURPOSE:

The command defines the structure dependent data for each body. These data are common for all different models representing the structure.

PARAMETERS:

body	Body identification number. Note that the body numbers must be consecutively ordered.
cleng	Characteristic length of the body. Usually the largest horizontal distance between 2 points on the average immersed surface.
xb	X-coordinate of the origin of the body coordinate system given in the global coordinate system.
yb	Y-coordinate of the origin of the body coordinate system given in the global coordinate system.
zb	Z-coordinate of the origin of the body coordinate system given in the global coordinate system.
delta	Angle between the body x-axis and the global x-axis in degrees. The angle is given from the body x-axis to the global x-axis. Positive direction is counter-clockwise.
ORIGIN-OF-BODY	The origin of the body coordinate system will be used as the results reference point.

DEFINE GENERAL OFFBODY-POINTS

...	OFFBODY-POINTS	xcoor	ycoor	zcoor
		END		
		SURFACE-MODEL	prefix	topsel

PURPOSE:

The command defines points in the fluid where wave kinematics shall be calculated. All points must be given because no symmetry is taken into account.

PARAMETERS:

xcoor	The x-coordinate with respect to the global coordinate system of the point in the fluid.
ycoor	The y-coordinate with respect to the global coordinate system of the point in the fluid.
zcoor	The z-coordinate with respect to the global coordinate system of the point in the fluid.
SURFACE-MODEL	The off-body points are given as nodes as part of a 4 node shell element model on an Input Interface File.
prefix	File prefix or directory where the file is stored
topsel	The superelement number (which must be a single first level superelement)

NOTES:

The SURFACE-MODEL option must be used for animation of free surface elevation in Xtract. The SURFACE-MODEL option must not be used for Postresp.

The CHANGE command corresponding to this DEFINE command deviates in that there is an additional parameter refno:

CHANGE GENERAL OFFBODY-POINTS refno xcoor ycoor zcoor

refno is the reference number of the offbody point to change (1, 2, 3, ...).

DEFINE GENERAL PANEL-PRESSURE

...	PANEL-PRESSURE	selno	index	ALL-ELEMENTS				
				INTERVAL		iel-first	iel-last	step
				ELEMENT-NUMBER	iel			
					END			
				END				

PURPOSE:

The command transfers computed pressures to the Hydrodynamic Results Interface File (G-file). (These pressures can then be read as transfer functions and presented by Postresp.)

In Postresp the panel pressures are identified by the Wadam internal panel index and a reflection index.

The correspondence between the element data and the panel indices is printed on the Wadam print file if the print switch is set to DUMP-OF-MODEL-DATA or higher.

PARAMETERS:

selno	Superelement number within the sink-source model
index	Superelement index of the given superelement
ALL-ELEMENTS	Pressures for all elements of the superelement will be written to the Hydrodynamic Results Interface File (G-file).
INTERVAL	Pressures for all elements in a specified interval will be written to the Hydrodynamic Results Interface File (G-file).
iel-first	First element in interval
iel-last	Last element in interval
step	Increment in element number
ELEMENT-NUMBER	Pressures for a listed sequence of elements will be written to the Hydrodynamic Results Interface File (G-file).
iel	List of element numbers closed by END

DEFINE GENERAL ROLL-DAMPING-MODEL

...	ROLL-DAMPING-MODEL	...							
...	BILGE-KEEL	xfr	bilgl	bilgb	y	z	phi		
		NONE							
	GZ-CURVE	hang	gz						
		END							
	MAXIMUM-ROLL-ANGLE	thmd							
		END							
	STRIP-MODEL	nos	xoff	xbow	FP-TO-AP	bst	bilgr	sect	
					AP-TO-FP				
	WATER-PARAMETERS	LAMINAR		visc					
		TURBULENT							
	END								

PURPOSE:

The command defines a roll damping model based on ordinary strip theory.

Note: The roll damping model can only be applied when xz-symmetry is used.

Note: The y, z and phi parameters are repeated for each strip that is fully or partly intersected by the bilge keel.

PARAMETERS:

BILGE-KEEL	Defining parameters for a bilge keel. The strip model must be defined first. See note above on repetition of the y, z and phi parameters.
NONE	No bilge keel model specified.
xfr	X-coordinate of the front part of the bilge keel.
bilgl	Length of bilge keel along the ship.
bilgb	Beam (width) of bilge keel.
	Note: Be careful with very small bilge keels, cf. Section 2.5.19.
y	Distance from centre line to bilge keel hull intersection point.

z	Distance from mean water line to bilge keel hull intersection point.
phi	Bilge keel angle in degrees. I.e. angle between the line from the origin to the bilge keel hull intersection point and a line through the web of the bilge keel (the sign is of no consequence as only the cosine of the angle is used).
GZ-CURVE	GZ-curve data as input.
hang	Heel angle in degrees.
gz	Restoring moment arm in roll (GZ).
Note: Maximum number of points on GZ-curve is 50.	
MAXIMUM-ROLL-ANGLE	Estimated maximum roll angle for each wave direction. The number of angles and their sequence correspond to the wave directions previously defined. This option is mandatory for the roll damping model.
thmd	Estimated maximum roll angle in degrees. It will be used to calculate a linearised viscous and eddy-making damping and will therefore significantly affect the transfer functions at wavelengths close to resonance. The angle cannot be set to zero but it may be set to a very low value (0.001) in which case all viscous effects are neglected. The chosen value of the angle may strongly affect the calculation results if roll resonance occurs at wavelengths at which appreciable wave energy is present.
STRIP-MODEL	Defining parameters for the strip model. Note that this must be specified before defining a bilge keel model. The strips should always be given from bow to stern meaning that for the FP-TO-AP option the strips are given in the order of increasing x-value while they are given in the order of decreasing x-value for AP-TO-FP option.
nos	Number of strips used in the roll damping calculations. Maximum is 25.
xoff	X-coordinate of fore perpendicular (FP) in global coordinate system (dummy)
xbow	X-coordinate of the midpoint of the first strip
FP-TO-AP	X-axis positive from fore perpendicular (FP) to aft perpendicular (AP) (default)
AP-TO-FP	X-axis positive from aft perpendicular (AP) to fore perpendicular (FP)
bst	Length of each strip. This is repeated nos times.

bilgr

Radius of a bilge at strip. This is repeated nos times.

sect

Parameter for eddy-making roll damping calculations. It is determined by the sectional area coefficient BOG/BS where BOG is the distance from the bottom of the strip to a line through centre of gravity of the ship and parallel with the x-axis in the global coordinate system and BS is the beam of the strip at the water-plane. (This is repeated nos times.)

sect can take the following:

BOW-SECTION: Apply the roll damping model for bow sections.

MID-SECTION: Apply the roll damping model for mid-sections.

STERN-SECTION: Apply the roll damping model for stern sections.

OTHER-TYPE: To be used for all section types not defined by the parameters for bow, midship and stern (there will be no roll damping from this section).

NOT-SPECIFIED: The program will determine the section type for this strip. If the section is in the forward $\frac{1}{4}$ of the ship and $\text{BOG/BS} > 1.2$ the section is set as a BOW-SECTION. If the section is in the back $\frac{1}{4}$ of the ship and $\text{BS/BOG} > 1.0$ the section is set as a STERN-SECTION. If the section is in the middle half of the length and the sectional area coefficient is larger than 0.95 the section is set as a MID-SECTION. In other cases no roll damping will be computed for the section.

Note: It may well be relevant to use the MID-SECTION model for sections in the first and last quarter of the length. In such cases the sections must be explicitly defined as MID-SECTIONS. For barge type vessels this type should be used for all sections.

Note: BOG is the distance from the bottom of the strip to a line through the centre of gravity of the ship and parallel with the x-axis.

Note: BS is the beam of the strip at the water-plane.

WATER-PARAMETERS

Water dependent parameters like viscosity and flow information.

LAMINAR-FLOW

Laminar flow around the hull (used when comparing calculation results and model tests performed with laminar flow around the ship hull).

TURBULENT-FLOW

Turbulent flow around the hull (recommended).

visc

Kinematic viscosity of water

NOTES:

The warning “Panels are not connected” in the Wadam print file means that the strips will not contribute to the roll damping.

DEFINE GENERAL SECTIONAL-LOADS

...	SECTIONAL-LOADS	secno	XY-PLANE	...	POSITIVE-SIDE	ax	ay	az
			YZ-PLANE		NEGATIVE-SIDE			
			XZ-PLANE					
		END						

PURPOSE:

The command defines sectional planes where sectional loads will be calculated.

PARAMETERS:

secno	Section identification number.
XY-PLANE	The section is parallel with the xy-plane of the input coordinate system.
YZ-PLANE	The section is parallel with the yz-plane of the input coordinate system.
XZ-PLANE	The section is parallel with the xz-plane of the input coordinate system.
POSITIVE-SIDE	Sectional loads are calculated on the positive side of the sectional plane.
NEGATIVE-SIDE	Sectional loads are calculated on the negative side of the sectional plane.
ax	The x-coordinate with respect to the input coordinate system of a point in the sectional plane. This point defines the position of the sectional plane and of the axis used for the calculation of the sectional moments. The moment axis are parallel with the input axis.
ay	The y-coordinate of the point.
az	The z-coordinate of the point.

DEFINE GENERAL TANK-PRESSURE

...	TANK-PRESSURE	ALL	rho_all
		tank_i	rho_i
		END	

PURPOSE:

The command defines density of the fluid in the tanks.

PARAMETERS:

ALL	The density is the same in all tanks.
rho_all	The density of the fluid in all the tanks.
tank_i	Tank number. This is the same number as the load case number used in the definition of the Hydro - Element uniform/HYDRO-PRESSURE load cases.
rho_i	The density of the fluid in tank number tank_i.

NOTES:

To perform the actual load transfer of pressure in tanks the command
...RESULT-FILE LOAD-TRANSFER TANK-PRESSURE ON
must be given

DEFINE GENERAL TEXT

...	TEXT	text
		END

PURPOSE:

The command defines identification text strings for the analysis.

PARAMETERS:

text Text given by the user to describe the analysis. Maximum 3 lines can be given. Enclose each text line in apostrophes (' ') when spaces are used.

DEFINE HYDRODYNAMIC-PROPERTY

...	HYDRODYNAMIC-PROPERTY	CONNECT	...
		SECTION	
		END	

PURPOSE:

The command defines sectional dependent hydrodynamic data of the Morison model and connects specified section numbers to Morison elements defined in Prewad. The definition of the hydrodynamic properties will also select 2 node beam elements given on the Input Interface File containing the Morison model as 2D Morison elements. All other 2 node beam elements will become Dry Morison elements.

DEFINE HYDRODYNAMIC-PROPERTY CONNECT

...	CONNECT	ref	elno				
			GROUP	e1	e2	einc	
			END				
		GROUP	ref1	ref2	rinc	er	einc
		END					

PURPOSE:

The command connects additional Morison elements (defined in Prewad) with hydrodynamic properties.

PARAMETERS:

ref	Reference number of section to be connected.
elno	Element number of a single element.
GROUP	A group of elements and sections to be connected.
e1	First element number in the group.
e2	Last element number in the group.
einc	Step in the Element numbering.
ref1	First reference number in the group.
ref2	Last reference number in the group.
rinc	Step in the reference numbering.
er	First element in a group of elements to be coupled to a group of sections.

DEFINE HYDRODYNAMIC-PROPERTY SECTION

...	SECTION	ref	2D-MORISON-ELEMENT	...
			3D-MORISON-ELEMENT	
			ANCHOR-ELEMENT	
			DRY-ELEMENT	
			POINT-MASS	
			PRESSURE-AREA-ELEMENT	
			TLP-MOORING-ELEMENT	
		END		

PURPOSE:

The command defines hydrodynamic properties for different element types.

Hydrodynamic properties are connected to sections. Each section is given a reference number.

PARAMETERS:

ref Reference number of section. The reference number of sections to be connected to additional elements defined in Prewad must be different from any cross-section reference numbers defined on the Input Interface File containing the Morison model.

DEFINE HYDRODYNAMIC-PROPERTY SECTION ref 2D-MORISON-ELEMENT

...	2D-MORISON-ELEMENT	stot	dia	...	dm	cksi	czeta	aksi	azeta
			RETAINED		RETAINED				

PURPOSE:

The command defines hydrodynamic properties for 2D Morison elements. Two-node beam elements on the Input Interface File with cross section reference number equal to the hydrodynamic property section reference number ref are defined as 2D Morison elements. All other 2 node beam elements are defined as Dry Morison elements with RETAINED mass pr. unit length.

All the sub-elements of a 2D Morison element will initially receive the same hydro properties.

To define a section containing sub-elements of varying length and/or properties the user must enter the CHANGE command after specifying the hydrodynamic properties.

PARAMETERS:

stot	Total number of sub-elements.
RETAINED	The equivalent diameter or the distributed mass defined on the Input Interface File will be used. Retained equivalent diameter may only be used for section type PIPE.
dia	Equivalent diameter.
dm	Distributed mass of element. Give mass per unit length.
cksi	Drag coefficient along the ξ -axis.
czeta	Drag coefficient along the ζ -axis.
aksi	Added mass coefficient along the ξ -axis.
azeta	Added mass coefficient along the ζ -axis.

NOTES:

The CHANGE command corresponding to this DEFINE command deviates in that there are two additional parameters, selno and sl:

CHANGE HYDRODYNAMIC-PROPERTY SECTION ref 2D-MORISON-ELEMENT stot selno sl ...

selno and sl are the sub-element number and sub-element length, correspondingly.

DEFINE HYDRODYNAMIC-PROPERTY SECTION ref 3D-MORISON-ELEMENT

...	3D-MORISON-ELEMENT					BOTH			...
						HYDRODYNAMIC			
						HYDROSTATIC			

...	dia	dm	cksi	czeta	ceta	aksi	azeta	aeta	x2	y2	z2
-----	-----	----	------	-------	------	------	-------	------	----	----	----

PURPOSE:

The command defines hydrodynamic properties for 3D Morison elements.

PARAMETERS:

HYDROSTATIC	Only buoyancy force will be calculated.
HYDRODYNAMIC	Only wave exciting forces (inertia and drag) will be calculated.
BOTH	Both wave exciting forces and buoyancy force will be calculated.
dia	Equivalent diameter.
dm	Mass of element.
cksi	Drag coefficient along the ξ -axis.
czeta	Drag coefficient along the ζ -axis.
ceta	Drag coefficient along the η -axis.
aksi	Added mass coefficient along the ξ -axis.
azeta	Added mass coefficient along the ζ -axis.
aeta	Added mass coefficient along the η -axis.
x2	The x-coordinate of a guiding point for the local coordinate system. (Give zero if the element coordinate system is parallel with the global coordinate system. See Figure 2.12).
y2	The y-coordinate of the guiding point.
z2	The z-coordinate of the guiding pint.

DEFINE HYDRODYNAMIC-PROPERTY SECTION ref ANCHOR-ELEMENT

...	ANCHOR-ELEMENT	angin	angx	force	skh	skv
-----	----------------	-------	------	-------	-----	-----

PURPOSE:

The command defines hydrodynamic properties for mooring (anchor) elements. See Figure 2.15.

PARAMETERS:

angin	Angle in degrees between the mooring line and the water surface at fairlead.
angx	Angle in degrees between projection of mooring line onto the horizontal plane and the global x-axis.
force	Static mooring line force (pre-tension) (unit: force).
skh	Spring constant for horizontal displacement of the structure (unit: force per length).
skv	Spring constant for vertical displacement of the structure (unit: force per length).

DEFINE HYDRODYNAMIC-PROPERTY SECTION ref DRY-ELEMENT

...	DRY-ELEMENT	stot	dm
-----	-------------	------	----

PURPOSE:

The command defines hydrodynamic properties for additional dry Morison elements.

Each section is given a reference number. Properties assigned to a given section may contain several sub-elements of equal length.

To define a section containing sub-elements of different lengths the user must enter the CHANGE command after specifying the hydrodynamic properties.

PARAMETERS:

stot Total number of sub-elements.

dm Distributed mass of element specified in mass per unit length.

NOTES:

The CHANGE command corresponding to this DEFINE command deviates in that there are two additional parameters, selno and sl:

CHANGE HYDRODYNAMIC-PROPERTY SECTION ref DRY-ELEMENT stot selno sl dm

selno and sl are the sub-element number and sub-element length, correspondingly.

DEFINE HYDRODYNAMIC-PROPERTY SECTION ref POINT-MASS

...	POINT-MASS	dm
-----	------------	----

PURPOSE:

The command defines hydrodynamic properties for point mass elements. This will be additional to nodal masses on the Input Interface File.

PARAMETERS:

dm Mass of element

DEFINE HYDRODYNAMIC-PROPERTY SECTION ref PRESSURE-AREA-ELEMENT

...	PRESSURE-AREA-ELEMENT	ALWAYS	dia	x2	y2	z2
		WAVE-LENGTH-DEPENDENT				

PURPOSE:

The command defines hydrodynamic properties for pressure area elements.

PARAMETERS:

ALWAYS	Pressure area element always used.
WAVE-LENGTH-DEPENDENT	Pressure area element is not used for dynamic loading when the wave length is less than or equal to the critical wave length.
dia	Equivalent diameter.
x2	The x-coordinate of the guiding point for the direction of the pressure force on the pressure area element in the input coordinate system.
y2	The y-coordinate of the guiding point.
z2	The z-coordinate of the guiding point.

DEFINE HYDRODYNAMIC-PROPERTY SECTION ref TLP-MOORING-ELEMENT

...	TLP-MOORING-ELEMENT	len	pre	stiff	xoff	yoff
-----	---------------------	-----	-----	-------	------	------

PURPOSE:

The command defines hydrodynamic properties for TLP mooring elements. See Figure 2.16.

PARAMETERS:

len	Length of the tethers.
pre	Pre-tension in the tethers (unit: force).
stiff	Elastic stiffness of the tethers per length of the tether (unit: force per length).
xoff	Offset of the platform in x-direction in the input coordinate system.
yoff	Offset of the platform in y-direction in the input coordinate system.

DELETE

DELETE	CORRESPONDANCE	...
	ELEMENT	
	ENVIRONMENT	
	GENERAL	
	HYDRODYNAMIC-PROPERTY	
	END	

PURPOSE:

The command deletes previously given input.

For explanation of the parameters of this command see the corresponding alternatives in the DEFINE command.

EXIT

EXIT

PURPOSE:

The command causes exit from Prewad.

HELP

HELP	SUPPORT
	GENERAL-SYNTAX
	SPECIAL-KEYS
	STATUS-LIST

PURPOSE:

The command provides information on subjects.

PARAMETERS:

SUPPORT	The telephone and telefax numbers and the Internet address for requesting support is printed together with detailed information on the program version used. This information is of interest in connection with support requests. The information is printed in the print window (line-mode window on Unix).
GENERAL-SYNTAX	Information on how to enter commands and text is provided. The information is printed in the print window (line-mode window on Unix).
SPECIAL-KEYS	Information on some special keys is provided. The information is printed in the print window (line-mode window on Unix).
STATUS-LIST	If the program is used in line-mode (Unix only) the Status List is printed on the screen. If the program is used in graphic input mode the Status program is started.

PRINT

PRINT	ALL	
	CORRESPONDANCE	...
	DATASET	
	ELEMENT	...
	ENVIRONMENT	
	GENERAL	
	HYDRODYNAMIC-PROPERTY	
	OVERVIEW	
	END	

PURPOSE:

The command prints selected information on the screen or to a file. The options are the same as for the DEFINE command except for the three additional options ALL, DATASET and OVERVIEW that give status of the interactive run.

PARAMETERS:

- ALL This gives a print of all the data existing on the Prewad data base.
- DATASET This gives a list of available datasets on the Prewad data base and which one of these that is current.
- OVERVIEW This gives a table containing a global overview of the different data available in the Prewad data base and a summary of the data defined.

PRINT CORRESPONDANCE

...	CORRESPONDANCE	elno
		ALL
		OVERVIEW
		END

PURPOSE:

The command prints specified correspondence between elements in the Morison model and panels in the panel model.

PARAMETERS:

- elno External element number of 2D Morison, 3D Morison or pressure area element in the Morison model to which panels are linked.
- ALL All specified correspondence will be printed.
- OVERVIEW A summary of the specified correspondence will be printed.

PRINT ELEMENT

...	ELEMENT	2D-MORISON-ELEMENT
		3D-MORISON-ELEMENT
		ALL
		ANCHOR-ELEMENT
		DRY-ELEMENT
		OVERVIEW
		POINT-MASS
		PRESSURE-AREA-ELEMENT
		TLP-MOORING-ELEMENT
		END

PURPOSE:

The command prints additional Morison elements.

PARAMETERS:

2D-MORISON-ELEMENT	Print 2D Morison elements.
3D-MORISON-ELEMENT	Print 3D Morison elements.
ALL	All additional defined elements will be printed.
ANCHOR-ELEMENT	Print mooring elements.
DRY-ELEMENT	Print dry Morison elements.
OVERVIEW	A summary of the additional defined elements will be printed.
POINT-MASS	Print point mass elements.
PRESSURE-AREA-ELEMENT	Print pressure area elements.
TLP-MOORING-ELEMENT	Print TLP mooring elements.

PRINT ENVIRONMENT

...	ENVIRONMENT	ALL
		CURRENT
		FREQUENCY-HEADING-PAIRS
		OVERVIEW
		SURFACE-MODEL
		WAVE-AMPLITUDE
		WATER-DEPTH
		WAVE-DIRECTION
		WAVE-LENGTH
		END

PURPOSE:

The command prints environmental data.

PARAMETERS:

ALL	All specified environmental data will be printed.
CURRENT	The current profile will be printed.
FREQUENCY-HEADING-PAIRS	Frequency heading pairs used in the computation of sum and difference forces will be printed
OVERVIEW	A summary of the environmental data will be printed.
SURFACE-MODEL	Surface model defined will be printed.
WAVE-AMPLITUDE	All specified wave amplitudes will be printed.
WATER-DEPTH	Specified water depth will be printed.
WAVE-DIRECTION	All specified wave headings will be printed.
WAVE-LENGTH	All specified wave lengths will be printed. If wave period or wave frequency is used as input this option will be WAVE-PERIOD or WAVE-FREQUENCY respectively.

PRINT GENERAL

...	GENERAL	ALL			
		ANALYSIS-MODELS			
		CONSTANTS			
		EXECUTION-DIRECTIVES			
		GLOBAL-MATRICES	CRITICAL-DAMPING		
			DAMPING-MATRIX		
			MASS-MATRIX		
			RESTORING-MATRIX		
			END		
		MULTI-BODY	MODELS	ibody	PANEL-MODEL
				END	
			STRUCTURE-IDENTIFICATION	ibody	
				END	
			END		
		OFFBODY-POINTS			
		OVERVIEW			
		ROLL-DAMPING-MODEL			
		SECTIONAL-LOADS			
		TANK-PRESSURE			
		TEXT			
		END			

PURPOSE:

The command prints user specified general parameters or matrices.

PARAMETERS:

ALL	All specified general parameters will be printed.
ANALYSIS-MODELS	All analysis models specified will be printed.
CONSTANTS	All constants specified will be printed.
EXECUTION-DIRECTIVES	All execution directives specified will be printed.

GLOBAL-MATRICES	Specified global matrices will be printed.
CRITICAL-DAMPING	The critical damping matrices will be printed.
DAMPING-MATRIX	All specified damping matrices will be printed.
MASS-MATRIX	All specified mass matrices will be printed.
RESTORING-MATRIX	The restoring matrix will be printed.
MULTI-BODY	Data connected to multiple bodies will be printed.
MODELS	Print specific analysis model connected to body.
ibody	Body identification of body number i.
PANEL-MODEL	Analysis model is a panel model.
STRUCTURE-IDENTIFICATION	Print structure dependent data for given body.
OFFBODY-POINTS	All off-body points will be printed.
OVERVIEW	A summary of the general parameters will be printed.
ROLL-DAMPING-MODEL	All data connected to a roll damping model based on strip theory will be printed.
SECTIONAL-LOADS	All specified sections will be printed.
TANK-PRESSURE	All specified tanks with given fluid density will be printed.
TEXT	All text strings specified will be printed.

PRINT HYDRODYNAMIC-PROPERTY

...	HYDRODYNAMIC	ALL	
		CONNECT	2D-MORISON-ELEMENT
			3D-MORISON-ELEMENT
			ANCHOR-ELEMENT
			DRY-ELEMENT
			POINT-MASS
			PRESSURE-AREA-ELEMENT
			TLP-MOORING-ELEMENT
		OVERVIEW	
		SECTION	ref
		END	

PURPOSE:

The command prints sectional dependent hydrodynamic data or connection between section numbers and Morison elements.

PARAMETERS:

ALL	All specified sectional hydrodynamic properties will be printed.
CONNECT	Connection between section reference numbers and elements will be printed.
2D-MORISON-ELEMENT	Print all connected 2D Morison elements.
3D-MORISON-ELEMENT	Print all connected 3D Morison elements.
ANCHOR-ELEMENT	Print all connected anchor elements.
DRY-ELEMENT	Print all connected dry Morison elements.
POINT-MASS	Print all connected point mass elements.
PRESSURE-AREA-ELEMENT	Print all connected pressure area elements.
TLP-MOORING-ELEMENT	Print all connected TLP mooring elements.
OVERVIEW	A summary of the sectional hydrodynamic properties will be printed.

SECTION

Section properties will be printed.

ref

Reference number of section.

READ

READ	prefix	number
------	--------	--------

PURPOSE:

The command reads an old Wadam analysis control data file and sets the specified dataset number as current. The file name must be prefixWADAMdataset-number.FEM where dataset-number is an integer. If the dataset number already exists in the Prewad database then the Wadam analysis control data file must be renamed (use another dataset-number). Alternatively, exit Prewad and re-enter creating a new database.

PARAMETERS:

prefix File name prefix.

number Dataset number of the Wadam analysis control data file.

SET

SET	COMMAND-INPUT-FILE	com-name		
	DATASET	number		
	MODEL-FILE	prefix	mod-name	NEW
				OLD
	PRINT	DESTINATION	FILE	
			SCREEN	
		FILE	LINEPRINTER	
			NAME	print-name
		FORMAT	E	
			F	
			G	
		PAGESIZE	FILE	lines
			SCREEN	
		END		
	END			

PURPOSE:

The command sets different parameters for print, batch execution and changing of command file, database or dataset.

PARAMETERS:**COMMAND-INPUT-FILE**

Open a command input file containing Prewad commands. The # command is used to read a specified number of commands.

com-name

Name on the command input file. It must be different from the command log and database files of Prewad.

DATASET

Switch to another dataset. The dataset number forms a part of the analysis control data file name.

number

New dataset number.

MODEL-FILE

Close the current Prewad database (model) file and open another without exiting and re-entering the program. Identify the alternative database file by giving prefix and file name without extension (mod-name). Use NEW for a currently non-existing file (a new one will be opened) and OLD for a currently existing file.

DESTINATION

The destination of the print may either be the SCREEN or a FILE. Use SET PRINT FILE NAME to give the name of the print file.

FILE

Set the NAME of the print file (print-name). Do not include the extension. The full name of the print file will be print-name.LIS.

Alternatively direct the print to an on-line printer (LINE-PRINTER).

FORMAT

Set the format of numbers in the print. The letter refer to FORTRAN E, F and G formats. F is the default format.

PAGESIZE

Set the page size of the print to FILE or SCREEN in terms of number of lines.

WRITE

WRITE	prefix	number
-------	--------	--------

PURPOSE:

The command writes a new Wadam analysis control data file with a user defined dataset number. This integer number need not be the same as the current dataset number. The file will be named prefixWADAMdataset-number.FEM where dataset-number is the dataset number (an integer).

Note: Subject to proper setting when starting Prewad from Manager the Wadam analysis control data is automatically written.

PARAMETERS:

prefix File name prefix.

number Dataset number of the Wadam analysis control data file.

#

#	ncomnd
	ALL

PURPOSE:

The command reads commands from the command input file. The command input file is opened by the command SET COMMAND-INPUT-FILE. The command input file can either be a log file from a previous run or a file prepared by a text editor.

The program will execute commands until either an end-of-file is detected, a '^Z' is read from the file or the specified number of commands have been read.

Exit from this command is carried out by typing either '..' or '\$'.

PARAMETERS:

- | | |
|--------|--|
| ncomnd | Number of commands to be read from command input file. When the same command is repeated in the command input file the command lines will count as one command only. |
| ALL | Prewad will read and execute all commands available on the command input file. |

APPENDIX A TUTORIAL EXAMPLES

This appendix includes the preprocessor input for the simple examples described in Section 3.1. Also the table of contents common for all Wadam print files is given for reference purposes.

A 1 Motion Response of a Floating Box

This section presents the Prefem input for creating a quarter of the double-symmetric box model of Section 3.1.1.

```

%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%
%
%       Example 3.1.1    -    A Floating Box 90m x 90m at draft of 40m
%                               Motions response analysis only
%
%   Output from  - T1.FEM - will be used in Wadam
%   as the panel (sink-source) model
%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%
%
%   Generate surfaces to form a 'box' 45 x 45 x 40 m, i.e. 1/4 of structure
%
GENERATE SURFACE A 1 2 1 5 1 2 1 5 1 2 1 4
  CARTESIAN
    0 0 0
  45 0 0 END 0 45 0 END 0 0 40 END
%
%   Remove unwanted sides of 'box' on x-z and y-z planes and the 'top'
%
DELETE GEOMETRY ( AS111 AT111 AU112 )
END
%
%   Set the element type to be 4 node shell to represent each panel of
%   the hydrodynamic model
%
SET ELEMENT-TYPE SURFACE ALL-SURFACES-INCLUDED SHELL-4NODES END

```

[illegible]

A 2 Motion Response of a Floating box Tethered to the Sea Bottom

This section presents the following:

- Preframe input for creating a Morison model (also represented in the structural model) consisting of four nodes only
- input for creating a quarter of the structural model
- Presel input for assembling the structural model

The Prewad input is given in Section 3.1.2. The Prefem input for creating the panel model is presented in Appendix A 1.

A 2.1 Preframe Input for the Morison Model (Tethers)

```

%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%
%
%           MORISON MODEL FOR TETHERS
%           SUPERELEMENT No. 2
%
%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%
%
NODE 1  45.0  45.0  .0
      2  45.0 -45.0  .0
      3 -45.0 -45.0  .0
      4 -45.0  45.0  .0
. .
%
BOUNDARY SUPER SUPER SUPER SUPER SUPER SUPER GLOBAL ALL
%
PROPERTY MATERIAL 1 SPRING-TO-GROUND STIFFNESS 6 1.E06 .0 .0 .0 .0
1.E06 .0 .0 .0 .0 1.E06 .0 .0 .0 1.E06 .0 .0 1.E06 .0 1.E06
. .
%
ELEMENT SPRING-TO-GROUND- (GSPR)
1 1 GLOBAL 1
2 2 GLOBAL 1
3 3 GLOBAL 1
4 4 GLOBAL 1
END
END

```

A 2.2 Input for the Structural Model

```

%           EXAMPLE 3.1.2      -      A FLOATING BOX  90M  X 90M  AT DRAFT OF 40M
%                               BOX TETHERED TO SEA-BED AT 4-CORNERS OF BOX
%                               MOTIONS RESPONSE ANALYSIS AND TRANSFER OF LOADS
%                               TO SHELL STRUCTURAL MODEL OF COMPLETE BOX
%

```

```
%                               STRUCTURAL MODEL FOR 1/4 OF BOX (WITH TOP)
%                               SUPERELEMENT NO. 3
%
% GENERATE SURFACES TO FORM A QUARTER OF THE 'BOX'  45 X 45 X 60 METRES
%
GENERATE SURFACE A 1 2 1 5 1 2 1 5 1 2 1 6
  CARTESIAN
    0 0 0
    45 0 0 END 0 45 0 END 0 0 60 END
%
% REMOVE UNWANTED SIDES OF 'BOX' ON X-Z AND Y-Z PLANES
%
DELETE GEOMETRY ( AS111 AT111 )
END
%
% SET THE ELEMENT TYPE TO BE 4-NODE SHELL TO REPRESENT EACH PANEL OF
% THE HYDRODYNAMIC MODEL
%
SET ELEMENT-TYPE SURFACE ALL-SURFACES-INCLUDED SHELL-4NODES END
END
%
% MESH ALL SUFACES
%
MESH ALL
%
% SET THE INSIDE SURFACE OF THE PANEL ELEMENTS TO BE INSIDE THE BOX
% USING A POINT 'A' AT CENTRE OF BOX
%
DEFINE POINT A 0 0 30  END END
SET INSIDE A* POINT A
END
END
%
% DEFINE YOUNGS MODULUS = 2.1 X 10**11 N/M**2
%      POISSONS RATIO = 0.3
%      DENSITY OF STEEL = 7850. KG/M**3
%      THICKNESS OF ALL SURFACES AS  0.1 M
%
PROPERTY MATERIAL ELAST ELASTIC .21E+12 .3 7850.0 .0 .0
      END
      THICKNESS ALL-SURFACES-INCLUDED 1.
      END
      END
CONNECT MATERIAL ELAST ALL-SURFACES-INCLUDED END
%
% DEFINE 'DUMMY' LOADCASE NO. 1 TO TELL WADAM THAT ALL SURFACES
% ARE TO BE LOADED WITH HYDRODYNAMIC PRESSURE (WHERE RELEVANT
% I.E. BELOW STILL WATER LINE)
%
PROPERTY LOAD 1 HYDRO-PRESSURE ALL-SURFACES-INCLUDED OUTSIDE
      OUTSIDE-SURFACE
      END
```

```

END
%
% DEFINE SUPERNODES ON PLANES OF SYMMETRY AND AT CORNER WHERE
% TETHER IS TO BE CONNECTED
%
PROPERTY BOUNDARY-CONDITION ( AI11& AJ11& AK121 AK211 )
  SUPERNODE SUPERNODE SUPERNODE SUPERNODE SUPERNODE SUPERNODE
  GLOBAL
  AP221
  SUPERNODE SUPERNODE SUPERNODE SUPERNODE SUPERNODE SUPERNODE
  GLOBAL
  END
  END

```

A 2.3 Presel Input for Assembling the Structural Model

```

%
% ASSEMBLY OF MODEL OF TETHERED BOX
% Superelement NO. 21
%
READ
  2
  3
  END
ASSEMBLY NEW 21
INCLUDE 3 NOPRINT-CHECK-INCLUDE
  PERFORM-INCLUDE
  3 ROTATE GLOBAL-AXIS Z-AXIS 90.0
  NOPRINT-CHECK-INCLUDE
  PERFORM-INCLUDE
  3 ROTATE GLOBAL-AXIS Z-AXIS 180.0
  NOPRINT-CHECK-INCLUDE
  PERFORM-INCLUDE
  3 ROTATE GLOBAL-AXIS Z-AXIS -90.0
  NOPRINT-CHECK-INCLUDE
  PERFORM-INCLUDE
  2 NOPRINT-CHECK-INCLUDE
  PERFORM-INCLUDE
  END

```

A 3 The Wadam Print File List of Contents

The Wadam print file begins with a list of contents. This list of contents shows which data will be printed depending on the chosen print switch (see DEFINE GENERAL EXECUTION-DIRECTIVES PRINT-SWITCH). The list of contents which is common for all analyses is presented below for reference purposes.

CONTENTS OF THE WADAM LISTING:

PRINTED RESULTS FOR THE VARIOUS PRINT ALTERNATIVES:		0	1	2	3	4	5
1.	CONTENTS AND LIMITATIONS							
1.1	CONTENTS OF THE WADAM LISTING.....		X	X	X	X	X	X
1.2	LIMITATIONS IN THIS VERSION OF WADAM.....		X	X	X	X	X	X
2.	DATA AND MODEL GENERATION							
	INPUT CARD DECK (IF BATCH CARD INPUT).....		X	X	X	X	X	X
2.1	ANALYSIS CONTROL DATA INCLUDING							
	- EXECUTION DIRECTIVES.....		X	X	X	X	X	X
	- MODEL INFORMATION.....		X	X	X	X	X	X
	- TOLERANCES AND CRITICAL WAVE LENGTH.....		X	X	X	X	X	X
	- CONSISTENCY OF ANALYSIS CONTROL DATA.....		X	X	X	X	X	X
2.2	DATA SPECIFYING THE MORISON MODEL INCLUDING.....		X	X	X	X	X	X
	- INPUT INTERFACE FILES.....		X	X	X	X	X	X
	- DUMP OF INTERFACE FILES.....							X
	- DUMP OF ELEMENT TRANSFORMATION MATRICES.....						X	X
2.3	DATA SPECIFYING THE PANEL MODEL INCLUDING.....		X	X	X	X	X	X
	- INPUT INTERFACE FILES.....		X	X	X	X	X	X
	- DUMP OF INTERFACE FILES.....							X
2.4	DATA SPECIFYING THE MASS INPUT INFORMATION INCLUDING.....		X	X	X	X	X	X
	- INPUT INTERFACE FILES.....		X	X	X	X	X	X
	- DUMP OF INTERFACE FILES.....							X
	- DUMP OF MASS DATA.....					X	X	X
2.5	DATA SPECIFYING THE RESTORING INPUT INFORMATION INCLUDING		X	X	X	X	X	X
	- RESTORING DATA FOR EACH INDIVIDUAL INPUT MODEL.....					X	X	X
2.6	CHECK OF DATA ON SAVE FILE.....		X	X	X	X	X	X
2.7	SUMMARY OF MODEL PROPERTIES.....		X	X	X	X	X	X
2.8	ENVIRONMENTAL DATA.....		X	X	X	X	X	X
2.9	MORISON ELEMENT DATA.....			X	X	X	X	X
2.10	MORISON NODE DATA.....			X	X	X	X	X
2.11	PANEL DATA FOR BASIC PART.....			X	X	X	X	X
2.12	PANELS AND MORISON ELEMENTS CORRESPONDANCE DATA.....			X	X	X	X	X
2.13	DEFINITION OF SECTIONS FOR SECTIONAL LOADS		X	X	X	X	X	X
2.14	DATACHECK SUMMARY.....		X	X	X	X	X	X
3.	EXECUTION MESSAGES, SAVE/RESTART, VISCOUS FORCES							
3.1	COMMENTS ON THE CALCULATION PERFORMANCE.....		X	X	X	X	X	X
3.2	GENERATION OF SAVE FILE.....		X	X	X	X	X	X
3.3	DRAW FORCE LINEARISATION BY ITERATION.....		X	X	X	X	X	X
3.4	VISCOUS ROLL DAMPING MODEL.....		X	X	X	X	X	X

4.	PRESENTATION OF RESULTS					
4.1	EXPLANATION OF THE RESULTS.....	X	X	X	X	X
4.2	STATIC RESULTS.....	X	X	X	X	X
4.3	GLOBAL HYDRODYNAMIC RESULTS INCLUDING					
	- FREQUENCY INDEPENDENT MATRICES.....	X	X	X	X	X
	- FREQUENCY DEPENDENT MATRICES.....	X	X	X	X	X
	- EIGEN SOLUTIONS.....	X	X	X	X	X
	- RESULTS FROM INDIVIDUAL THEORIES.....		X	X	X	X
	- TOTAL EXCITING FORCES.....	X	X	X	X	X
	- MOTIONS.....	X	X	X	X	X
	- DRIFT FORCES.....	X	X	X	X	X
	- SUM OF DISTRIBUTED LOADS.....	X	X	X	X	X
4.4	LOAD DISTRIBUTION ON THE MORISON MODEL.....		X	X	X	X
4.5	PRESSURE DISTRIBUTION ON THE PANEL MODEL.....		X	X	X	X
4.6	OFFBODY CALCULATIONS INCLUDING					
	- FLUID PRESSURE AT SPECIFIED POINTS.....	X	X	X	X	X
	- FLUID VELOCITIES AT SPECIFIED POINTS.....	X	X	X	X	X
4.7	SECTIONAL LOADS ON THE PANEL MODEL.....		X	X	X	X
4.8	SECTIONAL LOADS ON THE MORISON MODEL.....		X	X	X	X
4.8b	SECTIONAL LOADS ON THE COMPOSITE MODEL.....		X	X	X	X
4.9	GLOBAL SECOND-ORDER FORCES.....	X	X	X	X	X
4.10	SECOND-ORDER PANEL PRESSURE DISTRIBUTION.....	X	X	X	X	X
5.	TRANSFER OF RESULTS FOR FURTHER ANALYSIS AND PRESENTATION					
5.1	GENERATION OF LOADS INTERFACE FILES INCLUDING					
	- INPUT INTERFACE FILES.....	X	X	X	X	X
	- SUBELEMENT LOADS TRANSFERRED TO LOADS INTERFACE FILES..				X	X
	- LOADCASE OVERVIEW.....	X	X	X	X	X
	- MATCHING INFORMATION FOR LOADS TO A SHELL/SOLID MODEL..				X	X
	- SUM OF LOADS WRITTEN TO THE LOADS INTERFACE FILE.....	X	X	X	X	X
	- SUM OF CALCULATED LOADS ON THE PANEL MODEL.....	X	X	X	X	X
5.2	GENERATION OF GLOBAL RESPONSE INTERFACE FILE.....	X	X	X	X	X
5.3	GENERATION OF GLOBAL RESPONSE FILE (NV1473).....	X	X	X	X	X
	SUMMARY OF TIMING INFORMATION.....	X	X	X	X	X
	SUMMARY OF FILE USAGE.....	X	X	X	X	X

REFERENCES

- 1 Newman, J.N.
"Marine Hydrodynamics"
The MIT Press, 1977
- 2 WAMIT Users Manual, Version 5.3S
Department of Ocean Engineering, Massachusetts Institute of Technology
- 3 C.-H. Lee, J.N. Newman, M.-H. Kim & D.K.P Yue:
"The computation of second-order wave loads"
Published in the OMAE '91 conference proceedings, Stavanger, Norway 1991
- 4 The Implementation of Second-order Force Computation in Wadam,
DNV Sesam Report No.: 93-7081, Rev. 0, Oct. 1993
- 5 M. H. Patel and E.J. Lynch:
"Coupled dynamics of tension buoyant platforms and mooring tethers"
Eng. Struct., Vol.5, October 1983
- 6 N. Tanaka:
"A Study on the Bilge Keel, Part 4. On the Eddy-Making Resistance to the Rolling of a Ship Hull"
Japan Soc. of Naval Arch., Vol. 109, 1960
- 7 H. Kato:
"Effect of Bilge Keels on the Rolling of Ships"
Memories of the defence Academy, Japan, Vol. IV, No. 3, pp. 369-384, 1966
- 8 Sarpkaya, T. and Isaacson M:
"Mechanics of Wave Forces on Offshore Structures"
Van Nostrand Reinhold Company, New York, 1981
- 9 Finne, S., Grue j. and Nestegård, A.:
"Prediction of the complete second-order Wave Drift Damping force for offshore structures"
Proceedings, ISOPE 2000, Seattle.

APPENDIX B THEORY

B 1 Hydrostatic Forces

B 1.1 Hydrostatic Coefficients

Wadam calculates the non-zero coefficients C_{ij} in the hydrostatic restoring matrix as follows:

$$C_{33} = \rho g S$$

$$C_{43} = \rho g S_2 = C_{34}$$

$$C_{53} = -\rho g S_1 = C_{35}$$

$$C_{44} = \rho g (S_{22} + V_w z_B) - m g z_G$$

$$C_{54} = -\rho g S_{12} = C_{45}$$

$$C_{46} = -\rho g V_w x_B + m g x_G$$

$$C_{55} = \rho g (S_{11} + V_w z_b) - m g z_G$$

$$C_{56} = -\rho g V_w y_B + m g y_G$$

Here:

(x_B, y_B, z_B) is the centre of buoyancy

(x_G, y_G, z_G) is the centre of gravity

ρ is the density of the fluid

g is the acceleration of gravity

V_w is the volume of the wetted part of the body

S is the water plane area

$$S_i = \int_{S_0} x_i dS \quad i = 1, 2, \dots$$

$$S_{ij} = \int_{S_0} x_i x_j dS \quad i, j = 1, 2, \dots$$

S_0 refers to the body in a static condition.

B 2 Morison Element Formulations

B 2.1 The Anchor Element Formulation

The mooring stiffness matrices \mathbf{K}_m for each anchor element in a Morison model are described below. The \mathbf{K}_m matrices are accumulated into the global restoring matrix for the rigid body equation of motion. Since the \mathbf{K}_m matrices are established directly in the motion reference coordinate system, no transformations are needed in the accumulation process.

The non-zero terms in the matrix \mathbf{K}_m are defined as follows:

$$k_{11} = S_h \cos^2 \alpha_x$$

$$k_{21} = S_h \cos \alpha_x \sin \alpha_x$$

$$k_{22} = S_h \sin^2 \alpha_x$$

$$k_{33} = S_v$$

$$k_{41} = k_{31}y - k_{21}z$$

$$k_{51} = k_{11}z - k_{31}x$$

$$k_{61} = k_{21}x - k_{11}y$$

$$k_{42} = k_{32}y - k_{22}z$$

$$k_{52} = k_{21}z - k_{32}x$$

$$k_{62} = k_{22}x - k_{21}y$$

$$k_{43} = k_{33}y - k_{32}z$$

$$k_{53} = k_{31}z - k_{33}x$$

$$k_{63} = k_{32}x - k_{31}y$$

$$k_{44} = k_{43}y - k_{42}z + P_z z + P_y y$$

$$k_{54} = k_{14}z - k_{43}x - P_x y \quad , \quad k_{45} = k_{14}z - k_{43}x - P_y z$$

$$k_{64} = k_{24}x - k_{41}y - P_x z \quad , \quad k_{46} = k_{24}x - k_{41}y - P_z x$$

$$k_{55} = k_{51}z - k_{53}x + P_x x + P_z z$$

$$k_{65} = k_{52}x - k_{43}y - P_y z \quad , \quad k_{56} = k_{52}x - k_{43}y - P_z y$$

$$k_{66} = k_{62}x - k_{61}y + P_y y + P_x x$$

where

S_h is the horizontal spring constant

S_v is the vertical spring constant

α_x is defined in Figure B.1

(x, y, z) are the coordinates of the fairlead relative to the motion reference point

P_x is the x-component of the pre-tension

P_y is the y-component of the pre-tension

P_z is the z-component of the pre-tension

The matrix is symmetric ($k_{ij} = k_{ji}$) except for the terms k_{54} , k_{64} and k_{65} .

Having solved the equation of motion \mathbf{x}_g represents the global motion of the rigid body system. The force vector \mathbf{f}_g for each fairlead node, described in the result reference coordinate system, is then computed as

$$\mathbf{f}_g = -\mathbf{K}_m \mathbf{x}_g \quad (\text{B.1})$$

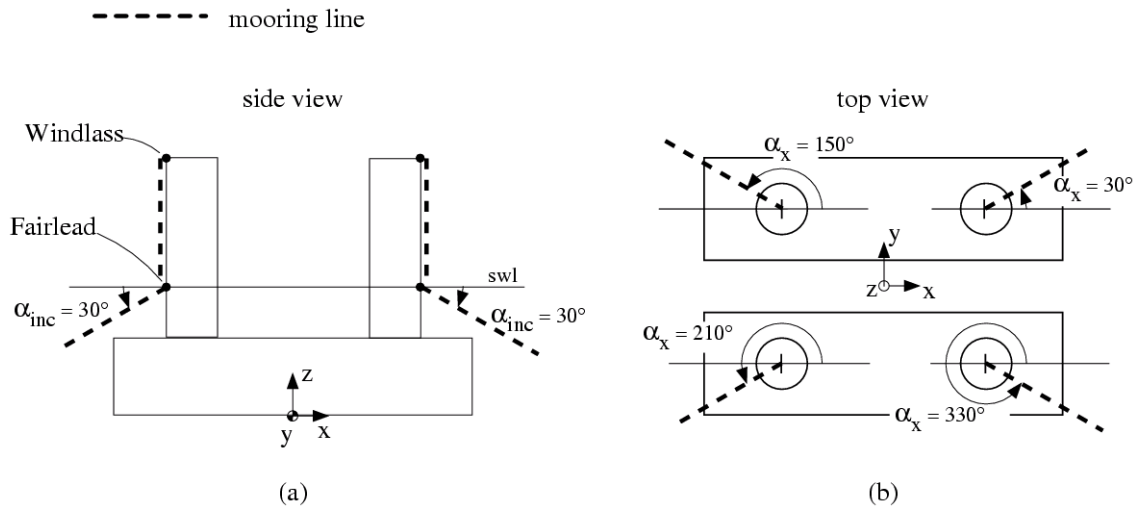


Figure B.1 Anchor element definitions

B 2.2 The TLP Mooring Element Formulation

The mooring stiffness matrices \mathbf{K}_m for each TLP element in a Morison model are accumulated into the global restoring matrix for the rigid body equation of motion. The \mathbf{K}_m matrices are established directly in the

motion reference coordinate system and hence no transformations are needed in the accumulation process. The non-zero terms in the matrix \mathbf{K}_m are defined as follows:

$$k_{11} = \lambda \cos^2 \alpha + \frac{T}{L} \sin^2 \alpha$$

$$k_{21} = \left(\lambda - \frac{T}{L} \right) \cos \alpha \cos \beta = k_{12}$$

$$k_{22} = \lambda \cos^2 \beta + \frac{T}{L} \sin^2 \beta$$

$$k_{31} = \left(\lambda - \frac{T}{L} \right) \cos \alpha \cos \gamma = k_{13}$$

$$k_{32} = \left(\lambda - \frac{T}{L} \right) \cos \beta \cos \gamma = k_{23}$$

$$k_{33} = \lambda \cos^2 \gamma + \frac{T}{L} \sin^2 \gamma$$

$$k_{41} = k_{31} y_2 - k_{21} z_2 = k_{14}$$

$$k_{51} = k_{11} z_2 - k_{31} x_2 = k_{15}$$

$$k_{61} = k_{21}x_2 - k_{11}y_2 = k_{16}$$

$$k_{42} = k_{32}y_2 - k_{22}z_2 = k_{24}$$

$$k_{52} = k_{21}z_2 - k_{32}x_2 = k_{25}$$

$$k_{62} = k_{22}x_2 - k_{21}y_2 = k_{26}$$

$$k_{43} = k_{33}y_2 - k_{32}z_2 = k_{34}$$

$$k_{53} = k_{31}z_2 - k_{33}x_2 = k_{35}$$

$$k_{63} = k_{32}x_2 - k_{31}y_2 = k_{36}$$

$$k_{44} = k_{33}y_2^2 - 2k_{32}y_2z_2 + k_{22}z_2^2$$

$$k_{54} = k_{31}y_2z_2 - k_{21}z_2^2 - k_{33}y_2x_2 + k_{32}x_2z_2 - T_x y$$

$$k_{45} = k_{31}y_2z_2 - k_{21}z_2^2 - k_{33}y_2x_2 + k_{32}x_2z_2 - T_y x$$

$$k_{64} = k_{32}x_2y_2 - k_{31}y_2^2 - k_{22}x_2z_2 + k_{21}y_2z_2 - T_x z$$

$$k_{46} = k_{32}x_2y_2 - k_{31}y_2^2 - k_{22}x_2z_2 + k_{21}y_2z_2 - T_z x$$

$$k_{55} = k_{11}z_2^2 - 2k_{31}x_2z_2 + k_{33}x_2^2 + T_x x + T_z z$$

$$k_{65} = -k_{11}y_2z_2 + k_{21}x_2z_2 + k_{13}x_2y_2 - k_{23}x_2^2 - T_y z$$

$$k_{56} = -k_{11}y_2z_2 + k_{21}x_2z_2 + k_{13}x_2y_2 - k_{23}x_2^2 - T_z y$$

$$k_{66} = k_{11}y_2^2 - 2k_{21}x_2y_2 + k_{22}x_2^2 + T_y y + T_x x$$

where

λ	is elastic stiffness (force per length)
T	is the constant pre-tension
L	is the specified tether length at a given offset position
T_x	is the x-component of the pre-tension
T_y	is the y-component of the pre-tension
T_z	is the z-component of the pre-tension

The matrix is symmetric ($k_{ij} = k_{ji}$) except for the terms k_{54} , k_{64} and k_{65} .

The direction cosines: $\cos\alpha$, $\cos\beta$ and $\cos\gamma$ are defined as follows:

$$\cos\alpha = \frac{x_2 - x_1}{L} \quad \cos\beta = \frac{y_2 - y_1}{L} \quad \cos\gamma = \frac{z_2 - z_1}{L}$$

The separate \mathbf{K}_m matrices for each TLP node are described with respect to the (x_1, y_1, z_1) and (x_2, y_2, z_2) coordinates at the TLP node and the sea-bed, see Figure B.2.

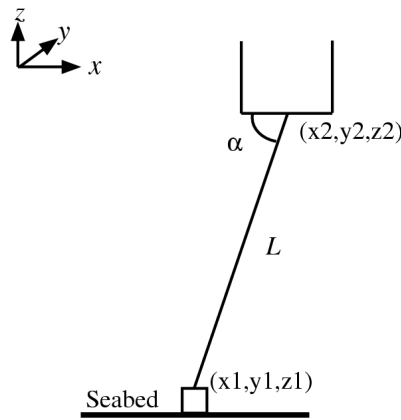


Figure B.2 TLP element coordinates

Having solved the equation of motion, \mathbf{x}_g represents the global motion of the rigid body system. The force vector \mathbf{f}_g for each TLP node, described in the result reference coordinate system, is then computed as

$$\mathbf{f}_g = -\mathbf{K}_m \mathbf{x}_g \quad (\text{B.2})$$

B 3 Calculation Methods

B 3.1 Linearisation of Roll Restoring

The linear roll restoring moment is based on the initial metacentric height (GM) calculated from the model geometry and specified mass properties and is only valid at small heeling angles. From hydrostatics calculations the GZ-curve is normally known also for large heeling angles. This information may be utilised in Wadam by specifying the appropriate GZ-curve as input to Prewad. The restoring roll moment at an angle $\eta_4 = \phi$ may be written as

$$M_r(\phi) = \rho g V \overline{GZ}(\phi)$$

where V is the submerged volume of the hull and $\overline{GZ}(\phi)$ is the righting arm. The work performed by rotating the ship through an angle η_4 from 0 to ϕ may be written as:

$$W_r = \int_0^\phi M_r(v) dv = \rho g V \int_0^\phi \overline{GZ}(v) dv = \rho g V A_r(\phi)$$

where A_r is the area under the righting arm curve as shown in Figure B.3.

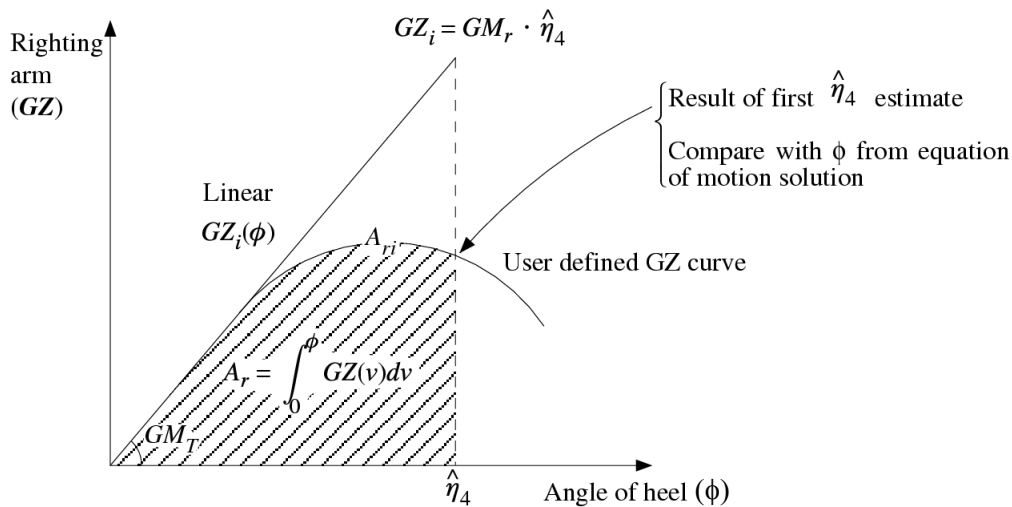


Figure B.3 Linearised Roll Restoring Moment from the GZ-curve

At small angles the restoring work may be expanded in a Taylor series giving

$$W_{ri} = \frac{1}{2} \rho g V \overline{GZ}_i \phi = \rho g V A_{ri}$$

where \overline{GZ}_i , the initial moment arm, is related to \overline{GM}_T , the initial transverse metacentric height, as follows:

$$\overline{GZ}_i = \overline{GM}_T \cdot \hat{\eta}_4$$

At large angles the linearised roll restoring coefficient is defined as:

$$C_{44} = f \cdot \overline{GM}_T$$

where the factor f is defined as the ratio between the area A_r under the GZ-curve from 0 to ϕ and the area A_{ri} below a straight line from 0 to ϕ with slope equal to $\overline{GZ}_i/\hat{\eta}_4 = \overline{GM}_T$:

$$f = \frac{W_r}{W_{ri}} = \frac{A_r}{A_{ri}} = \frac{2A_r}{\overline{GZ}_i \hat{\eta}_4} = \frac{2A_r}{\overline{GM}_T \hat{\eta}_4^2}$$

B 3.2 Calculation of Line Loads

The line load on a beam finite element is represented as a sequence of constant line load segments. Each segment will automatically correspond to a sub-element of a 2D Morison element.

The load evaluated at the centre of gravity of each Morison sub-element is represented as constant load intensities with x, y and z force components acting over the line segments. This is so both for hydrostatic and hydrodynamic loads. The line loads produced by Wadam do not include any eccentricities which may exist in the actual load. Figure B.4 shows the line load representation on a beam element with four line segments.

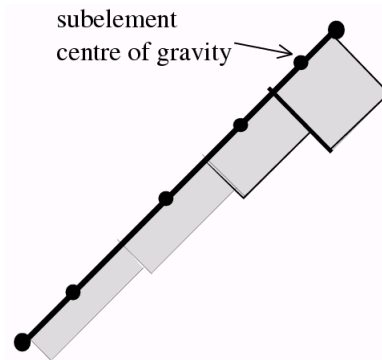


Figure B.4 Line loads in Wadam

B 3.3 The Mapping of Loads from Panel Models to Finite Element Models

The hydrodynamic pressure distribution on a panel model is described as a piece wise constant pressure variation. Each panel is represented with a constant pressure value which is calculated at its centroid. The mapping of loads from panels to finite elements is based on a minimal distance criteria between the centroids of panels and structural finite elements. That is, each wetted side of a finite element will receive the constant pressure of the closest panel while satisfying user specified distance and out-of-plane criteria.

The mapping algorithm may be described as: For each element assign normal pressure from the closest panel (centroid to centroid) provided that Equation (B.3) and Equation (B.3) are satisfied.

Figure B.5 visualises the mapping in a situation where the finite elements are smaller than the panels. The points C_p and C_{fe} represent the panel and finite element centroids respectively. The shaded rectangular elements represent finite elements receiving pressure loads.

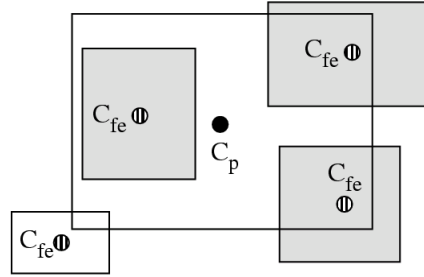


Figure B.5 The mapping of loads from panels to finite elements

The functionality of the user specified tolerance parameters *DISTOL* and *ANGTOL*, which controls the mapping between panels and finite elements may be described as follows.

The panel with its centroid closest to the finite element centroid is a candidate as the source for pressure transfer to a finite element if the formula

$$\frac{A_{\Sigma}}{A_{panel}} - 1 \leq \frac{DISTOL}{100} \quad (B.3)$$

is satisfied. Here A_{Σ} is the sum of the four shaded triangles S_i , $i=1,2,3,4$, shown in Figure B.6 (a) and A_{panel} is the area of a candidate panel. If the nearest panel is not accepted by Equation (B.3) then the program will check, in increasing order of centroid distance, all the 25 closest panels for a panel satisfying Equation (B.3). No pressure load is transferred to the finite element for which Equation (B.3) is not satisfied.

Panels which satisfies Equation (B.3) will be accepted as a source for pressure transfer if the *ANGTOL* criteria

$$\phi \leq ANGTOL \quad (B.4)$$

is accepted. ϕ is defined by Figure B.6 (b). Both ϕ and *ANGTOL* are given in degrees.

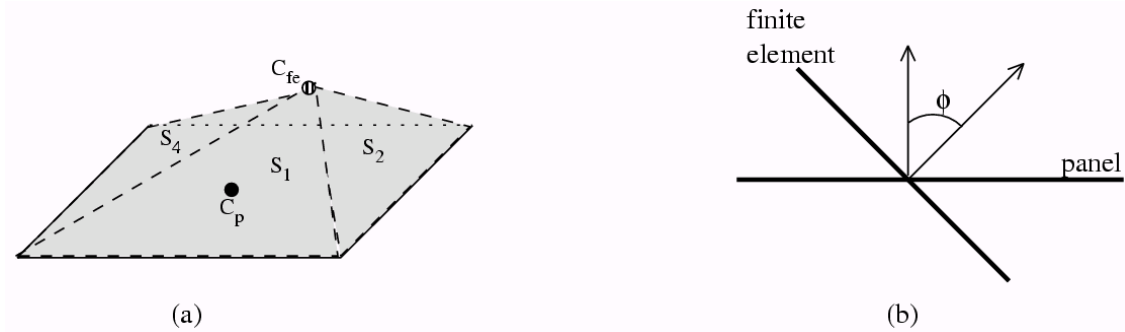


Figure B.6 The DISTOL and ANGOL functionality

Wadam reports information from the actual mapping on the form (NDIST, NANG, NOPP) where NDIST shows the number of the closest panels which has been checked against Equation (B.3) and NANG correspondingly shows the number of panels which has been checked against Equation (B.4). NOPP shows the number of panels which has been checked against Equation (B.4) with the modification that ϕ is replaced by $\phi + 180$. NOPP is indicating that normal vectors of the panel and finite element are pointing in the opposite direction.

The number of finite elements in the structural model with no matching panel is reported by Wadam.

B 3.4 Calculation of Tank Pressures

The loads are calculated by applying a hydrostatic pressure distribution in the accelerated reference frame fixed with respect to the tank. The pressure load is divided in a constant and an oscillating part and represented by separate load cases. The pressure gradient is given by

$$\nabla p = \rho(\mathbf{g} - \mathbf{a}) \quad (\text{B.5})$$

where \mathbf{g} is the acceleration due to gravity, \mathbf{a} is the complex acceleration of the mid-point of the tank and ρ is the mass density of water. The gravity vector described in a coordinate system oscillating with the body, has a constant and an oscillating part. Accordingly, the pressure gradient described in the body-fixed coordinate system has a constant part, $\rho\mathbf{g}$, and an oscillating or fluctuating part:

$$\nabla p_f = \rho(\mathbf{g}_f - \mathbf{a}) \quad (\text{B.6})$$

where \mathbf{g}_f is the fluctuating part of gravity.

The mid-point is taken as the centroid of the extreme coordinates of the tank. For a cubic tank the extreme coordinates are the corners of the tank. If the tank is spherical, the extreme coordinates will be the corners in a cube circumscribing the sphere. In both these cases the centroid of the corner points will coincide with the centroid of the tank, but generally, for arbitrary geometrical shapes, it is an approximation.

The oscillating contribution to the total pressure is represented as a complex load case. The zero-level for the pressure is the extreme-point of the tank where the real part of the total pressure has its minimum value. This is actually approximately correct only for the phase equal to zero and can be a quite crude approxima-

tion for other phases. If the pressure loads are applied for other phases, the user should therefore find the minimum pressure value and subtract this from all the pressure loads on the tank for the given phase. That way a correct reference level (zero-level) for the pressure will be obtained.

The pressure loads should preserve load balance. The total force from the fluid on the tank is given by

$$\mathbf{F} = \int_S p \mathbf{n} dS \quad (\text{B.7})$$

where \mathbf{n} is the unit normal vector pointing out of the tank and S is the surface inside the tank. By Gauss theorem we then have

$$\mathbf{F} = \int_V \nabla p dV \quad (\text{B.8})$$

where V is the space inside the tank filled with fluid. Substituting for ∇p this gives

$$\mathbf{F} = m_f(\mathbf{g} - \mathbf{a}) \quad (\text{B.9})$$

m_f is the mass of the fluid in the tank. Similarly, the total moment \mathbf{M} on the tank can be seen to be given by

$$\mathbf{M} = \mathbf{x}_f \times \mathbf{F} \quad (\text{B.10})$$

where \mathbf{x}_f is the position of the centroid of the tank. This shows that the force and moment from the fluid is balanced by the gravity force on the fluid and the inertia force and moments of the fluid. This is independent of the reference level of the pressure. Provided an exact load integration and an exact centroid calculation, the load balance will then be exact if the mass of the fluid is placed in the centroid of the tank in the mass model.

B 3.5 Global drag-coefficient for roll

The quadratic roll-damping coefficient may be found in model-tests for given ship-hull types, independent of sea-state. For the actual sea-state in which the ship is to be analysed, stochastic linearization of the quadratic damping may be performed. The quadratic drag in the roll-motion gives a contribution to the moment about the x-axis on the form:

$$F_{44} = -B_{44}^{(2)} |\dot{\eta}_4| \dot{\eta}_4 \quad (\text{B.11})$$

where $B_{44}^{(2)}$ is the quadratic drag-coefficient and $\dot{\eta}_4$ is the velocity in roll. Substituting $B_{44}^{(2)} |\dot{\eta}_4|$ with a linearized damping-coefficient $B_{44}^{(1)}$, the error random process due to linearization is:

$$e(t) = B_{44}^{(2)} |\dot{\eta}_4| \dot{\eta}_4 - B_{44}^{(1)} \dot{\eta}_4 \quad (\text{B.12})$$

The requirement that the expectation-value of the squared error has a minimum is

$$B_{44}^{(1)} = \frac{B_{44}^{(2)} E(|\dot{\eta}_4|^3)}{E^2(\dot{\eta}_4^2)} \quad (\text{B.13})$$

where $E(\quad)$ is the expectation operator.

Obviously:

$$E(\dot{\eta}_4^2) = \sigma_{\dot{\eta}_4}^2 \quad (\text{B.14})$$

Assuming $\dot{\eta}_4$ is normally distributed, the half-normal distribution for $|\dot{\eta}_4|$ gives

$$E(|\dot{\eta}_4|^3) = \frac{\sqrt{8}}{\pi} \sigma_{\dot{\eta}_4}^3 \quad (\text{B.15})$$

where $\sigma_{\dot{\eta}_4}$ is the standard-deviation of $\dot{\eta}_4$. Substituting the two expectation values above in the formula for $B_{44}^{(1)}$ gives the well-known relation for stochastic linearization of a quadratic drag-term:

$$B_{44}^{(1)} = \frac{B_{44}^{(2)} \frac{\sqrt{8}}{\pi} \sigma_{\dot{\eta}_4}^3}{\sigma_{\dot{\eta}_4}^2} = \frac{\sqrt{8}}{\pi} \sigma_{\dot{\eta}_4} B_{44}^{(2)} \quad (\text{B.16})$$

The equation of motion η_1, \dots, η_6 , with the stochastically linearized roll-drag included, may be written:

$$M_{ij} \ddot{\eta}_j + b_{ij} \dot{\eta}_j + B_{44}^{(1)} \delta_{ij} \dot{\eta}_j + c_{ij} \eta_j = X_i \quad (\text{B.17})$$

Here, M_{ij} is the sum of the body-mass matrix and added mass matrix. b_{ij} is the potential damping and c_{ij} is the restoring. X_i is the excitation-force. An initial estimate of η_j for all wave-frequencies is made, giving a corresponding estimate of the standard-deviation and thereby $B_{44}^{(1)}$. Then an iteration process is run on η_j until a reasonable agreement between the estimate of $\sigma_{\dot{\eta}_4}$ from the previous and next calculation of motion is obtained. The motion will then be correct in the least square sense.